


## Bondi Wicker Outdoor Armchair

Item#: 62776/62426

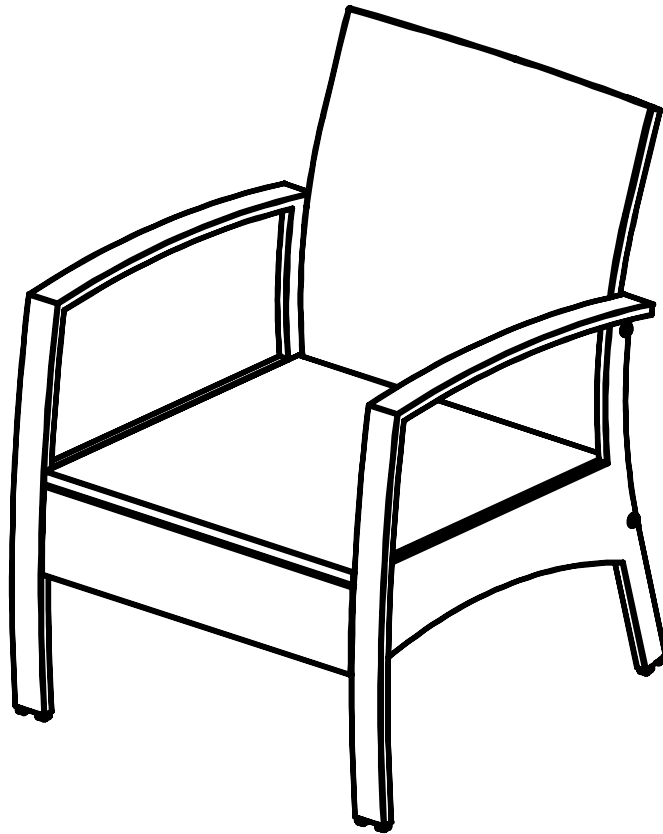

### ATTACH YOUR RECEIPT HERE

Keep a copy of your proof of purchase or order confirmation which will be needed if you need to contact us about warranty coverage.

Purchase Date: \_\_\_\_\_



### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



### Questions, problems, missing parts?

Before returning to your retailer, our exceptional customer service is available.

Call toll-free

**(866) 985-7877**

9 a.m. – 9 p.m., EST

Email

[cservice@welltraveled.net](mailto:cservice@welltraveled.net)

Live chat

[www.balkenehome.com](http://www.balkenehome.com)

9 a.m. – 6 p.m., EST, Monday – Friday



## BEFORE YOU BEGIN

Before beginning assembly, make sure all parts are present. Compare parts received with the parts list. If any part is missing or damaged, do NOT attempt to assemble the product. Please read and understand this entire manual before attempting to assemble, operate or install this product. If you have any questions regarding the product, please contact Customer Service.



## GENERAL INFORMATION

Your new Bondi Chair is made from the finest materials available. It should provide many years of enjoyment with minimal care.

Keep your Bondi Chair clean. For best results, clean with a soft, damp cloth. If you use furniture covers, always make sure the Bondi Chair is clean and completely dry before covering, as mold may form in dark, wet places. Remove cushions prior to covering and store them in a dry, temperature controlled place. Check the hardware on your Bondi Chair regularly to make sure it is secure.

The weight limit is 350 lb/160 kg.



## SAFETY INFORMATION

### WARNING

Do not stand or allow children to stand on the assembled product. Ensure hardware is securely in place. Perform periodic checks to make sure the connections are secure and adjust if needed.






### CAUTION

Read all instructions before beginning assembly. Failure to do so may result in faulty assembly and potential injury. Assemble the item on a soft, non-abrasive surface such as carpet or cardboard to avoid damaging the item.

# PARTS LIST

# BALKENE —HOME—

PART	DESCRIPTION	QUANTITY
A	Right Side Panel	1
B	Seat Panel	1
C	Front Panel	1
D	Left Side Panel	1
E	Seat Back	1

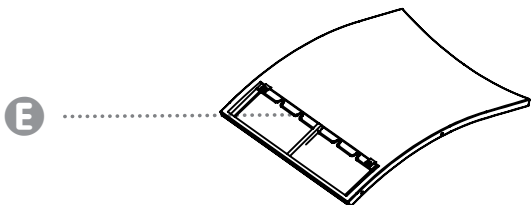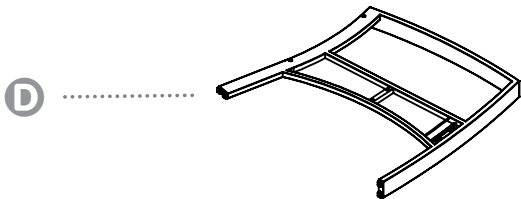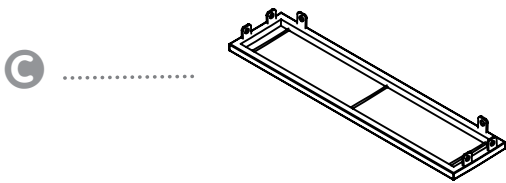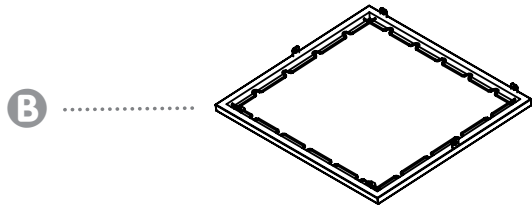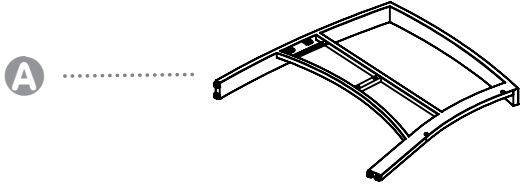

## HARDWARE CONTENTS



**F**  
M6x35 Bolt  
Qty: 4



**G**  
M6x20 Bolt  
Qty: 10



**H**  
Washer  
Qty: 14



Hex Wrench

Assemble in a clear area on a spacious, nonabrasive surface such as a carpet or blanket. **Do not over-tighten hardware.**




## PREPARATION

Before beginning assembly, be sure to empty contents of carton and make sure all parts are present. If any parts are missing, please contact Customer Service.


Place all parts on a soft, level surface for assembly. Estimated Assembly Time: 30 Minutes | DO NOT over tighten hardware!

**1** Locate the **Right Side Panel A** and **Seat Back E**. Align the panels as shown. Place a **Washer H** on each of 2 **Bolts F**. Insert each **Bolt** with **Washer** through the eyelets in the **Right Side Panel** and into the holes in the edge of the **Seat Back**. Tighten using the **Hex Wrench** but do not over-tighten.

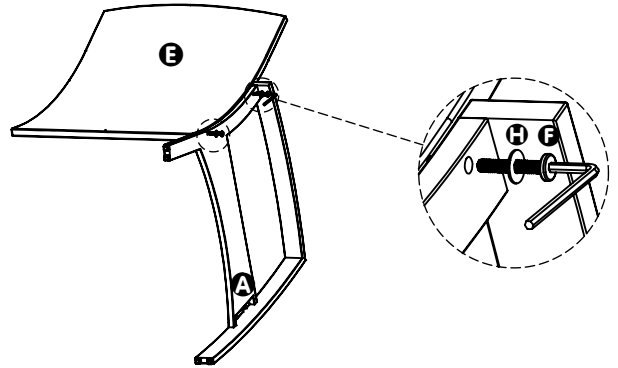


**Hardware Used:** **F Bolt (M6x35) x2**  
**H Washer x2**

**2** Attach the **Seat Panel B** to the **Right Side Panel A** and the **Back Panel E**: align the eyelets on the **Seat Panel** with the holes in the already-joined panels as shown, then insert a **Bolt G** with **Washer H** into each of the 3 aligned sets of eyelets.

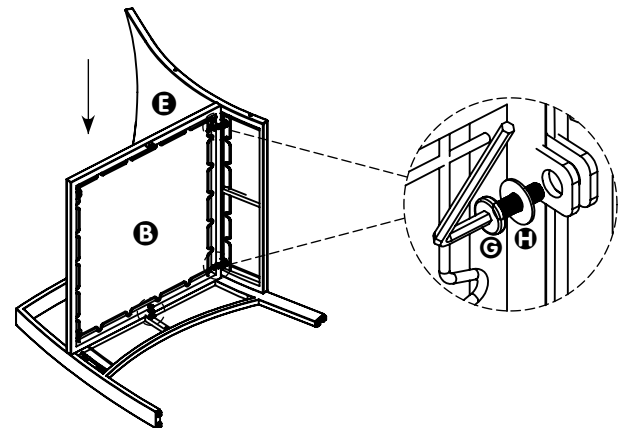

**Hardware Used:** **G Bolt (M6x20) x3**  
**H Washer x3**

**3** Locate the **Left Side Panel D**. Place the **Left Side Panel** on the partially-assembled chair as shown. Place a **Washer H** on each of 2 **Bolts F**. Align the eyelets on the **Left Side Panel** with the holes in the left edge of the **Seat Back** and insert a **Bolt** with **Washer** through each of the eyelets to connect the two pieces.

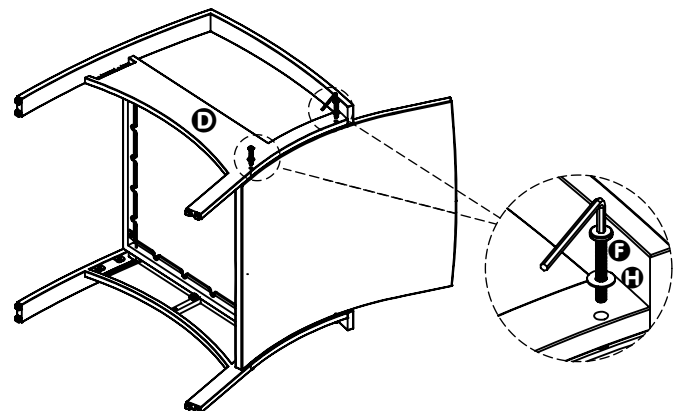


**Hardware Used:** **F Bolt (M6x35) x2**  
**H Washer x2**

# ASSEMBLY


BALKENE  
—HOME—

- 4** Place a **Washer H** on each of 3 **Bolts G**.  
To attach the **Left Side Panel C** to the **Seat Panel B**, insert a **Bolt** with **Washer** into the aligned eyelets midway down the left side of the chair.
- Align the **Front Panel G** between the front legs of the chair as shown. Attach the **Front Panel** to the **Seat Panel** using 2 **Bolts** with **Washers**.
- Tighten all **Bolts** using the **Hex Wrench** but do not over-tighten.

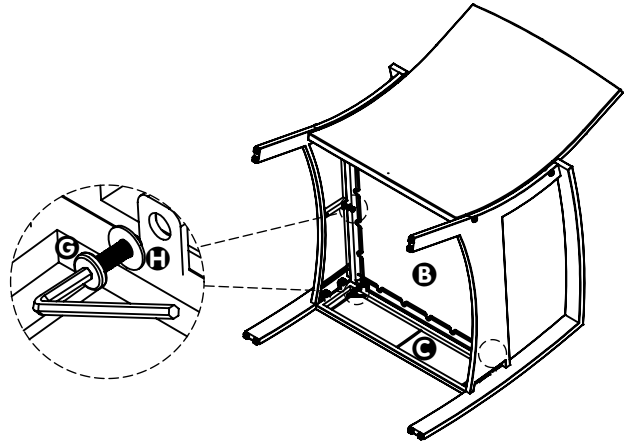


**Hardware Used:**      **G Bolt (M6x20) x3**  
                                 **H Washer x3**

- 5** Place **Washers H** on each of 4 **Bolts G**.  
Attach the **Front Panel G** to each **Side Panel A/C** by aligning the holes on the bottom edge of the **Back Panel** with the holes in the crossbar on the bottom of the **Seat Panel B**. Insert a **Bolt G** with **Washer H** into each of the 4 aligned sets of eyelets. Tighten using the **Hex Wrench**.
- Check that all hardware is secure. Turn the chair upright.

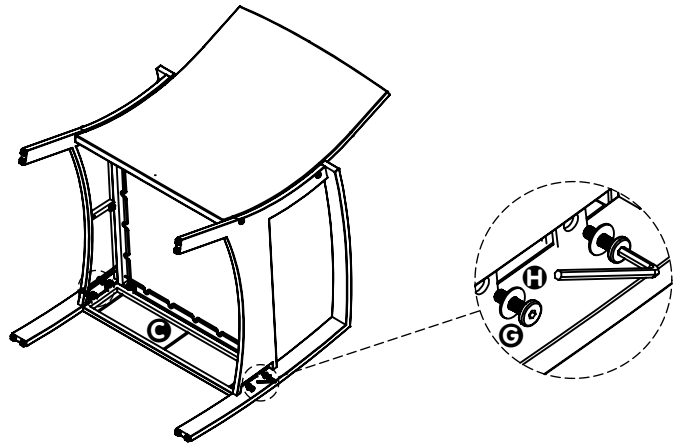

**Hardware Used:**      **G Bolt (M6x20) x4x2**  
                                 **H Washer x4**

Your Bondi Chair is fully assembled!

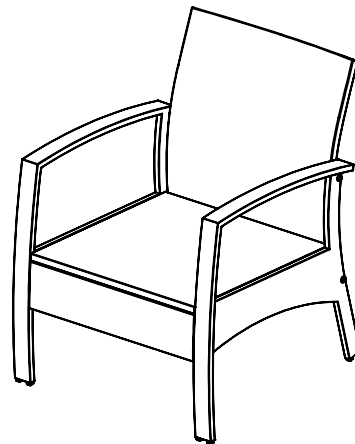



by

BALKENE  
—HOME—



## LIMITED WARRANTY

Customers in the Contiguous US

With proof of purchase from an authorized retailer, this product is warranted for a period of 1 year from original purchase date against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear/weathering, exposure to water, freezing temperatures, oils, fluids, or chemicals OR use in a commercial context if the unit is not designated as a commercial model. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Returns sent back to Well Traveled Living must be sent via prepaid freight in the original retail packaging.

For warranty service, contact Well Traveled Living at the address, phone numbers or website and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by Well Traveled Living's, Amelia Island, Florida service center. This warranty is extended only to the original owner. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

- THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED.
- PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT.
- FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY.
- IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.
- SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

## EXTEND YOUR WARRANTY

When you purchase a Fire Sense or Balkene Home product from any authorized retailer, you'll have peace of mind in knowing that it comes with a one-year warranty. Extend your warranty for *an additional year* when you review your item at [balkenehome.com](http://balkenehome.com) within 365 days of purchase.



### Important Notice

Do NOT return to place of purchase—for customer service and warranty issues:

Call toll-free	<b>(866) 985-7877</b>	9 a.m. – 9 p.m., EST
Email	<b><a href="mailto:cservice@welltraveled.net">cservice@welltraveled.net</a></b>	
Live chat	<b><a href="http://balkenehome.com">balkenehome.com</a></b>	9 a.m. – 6 p.m., EST, Mon.–Fri.

Distributed by:  
 Well Traveled Living  
 716 S 8th Street, Amelia Island, FL 32034  
[balkenehome.com](http://balkenehome.com)  
[cservice@welltraveled.net](mailto:cservice@welltraveled.net)  
 (866) 985-7877