


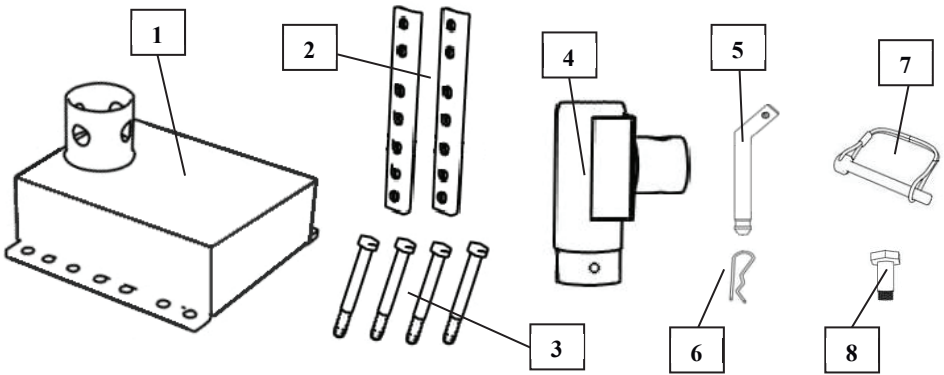

XL MOUNTING BRACKET ASSEMBLY

WHAT'S IN THE BOX

1. Mount Bracket
2. Bracket Clamps
3. Bracket Bolts (x4)
4. Mounting Joint
5. Stow/Clevis Pin
6. Cotter Pin
7. Rotation/Security Pin
8. Security Bolt



Please note that use of the XL Mount Bracket decreases the unit's incline rating. If you have any questions concerning the use of your trailer Valet on a slope or incline, please contact us at (844) 846-9344 or Email us at support@trailervalet.com

For warranty information, please refer to your main Trailer Valet unit's user manual.

SETUP

When installing your Trailer Valet unit, it must be installed while the weight of the trailer is supported by an existing jack. Having wheel chocks in place during connection will also insure a safe install.

Raise the trailer tongue to where the coupler is about 16 inches off the ground to give adequate space to attach the dolly.

WARNING!

During installation for the Trailer Valet XL, the Steering Handle must be secured to the safety clip to ensure the brake is engaged at all times. The mounting bracket has incremental bolt slots to fit a variety of trailer frames. Be sure that you have at least 8 inches of free space for the mounting bracket to be fitted onto your trailer frame.

WARNING!


The mounting bracket is only to be installed on trailer tongues that are rectangular in profile. Cylindrical frames are not compatible with the bracket as it will rotate, allowing the trailer to drop.






CONNECTION

It is recommended that you ensure that there is adequate height to install the unit. The trailer should be high enough that, when the frame is level, there is enough space for the unit to be at least one inch off the ground once attached to the bracket. If there is not enough space, adjust the placement of the bracket on your trailer frame.


Fit the mounting joint into the rotating coupler on your Trailer Valet unit and secure with the rotation/security pin. This joint replaces your unit's ball adapter.

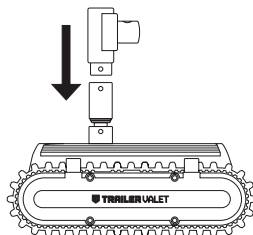

 Place the mounting bracket and clamps onto the area of the frame you have designated and secure with the four bolts. NOTE: While it is recommended that the bracket is installed with the attachment point in the low position for stability reasons, the bracket can be flipped prior to install if the space is required.

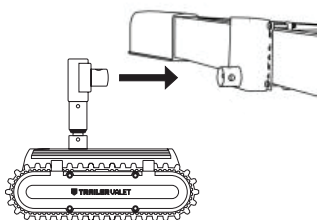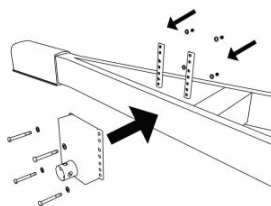


Place the connection point of the mounting joint into the mount bracket and fasten with the included stow/clevis pin. Lastly, set the cotter pin through the stow/clevis pin.

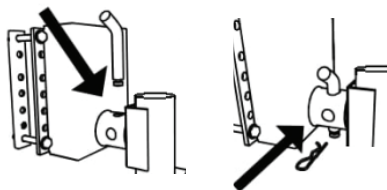


The Trailer Valet mounting bracket comes with a security bolt (part 7) that is an option to secure the device. This will add stability if needed, but may slow the process of attaching and detaching the unit from your trailer. If you choose to use it, the bolt slots through the back of the mounting bracket and threads into the mounting joint.

COMPATIBILITY

The XL Mounting Bracket is compatible with the XL unit and RVR units with ball tower.

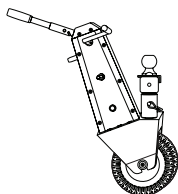

XL

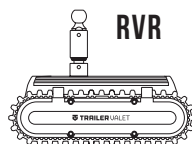

RVR

MOVE FORWARD.