

# Booth in a Bag™ 10ft x 10ft

9'10" Wide x 9'10" Deep,  
6'8" Side Height / 9'6" Center Height

King Canopy Item #: BIAB10-WH  
With 4 Legs, Side Walls, Foot Pads & Roller Bag



**WARNING:**


Keep all flame and heat sources away from this tent fabric. Meets the flammability requirements of CPAI-84 Section 6 and NFPA-701. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.



Distributed by: PIC America, LTD.  
8009 Purfoy Road • Fuquay-Varina, NC 27526  
1-800-800-6296 • [www.kingcanopy.com](http://www.kingcanopy.com)




# PARTS LIST

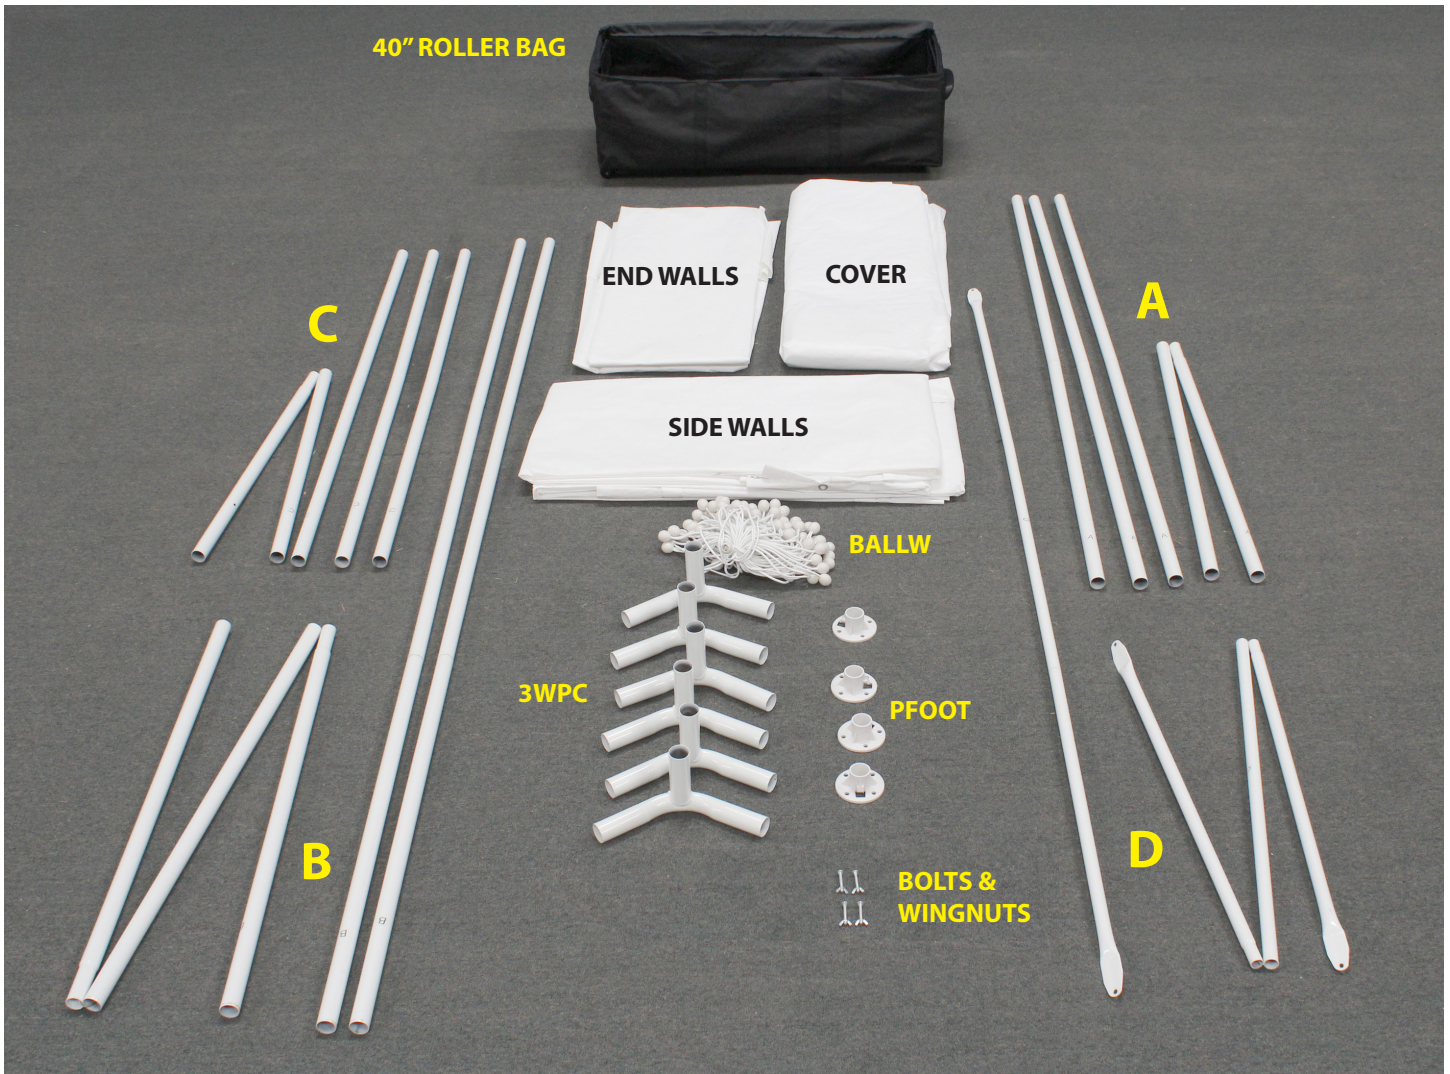


A)	6X6-PC-BIAB	4 Pcs	78"x1 <sup>3</sup> / <sub>8</sub> " Leg Pipes with Shock Cord
B)	9X7-PC-BIAB	3 Pcs	115"x1 <sup>3</sup> / <sub>8</sub> " Roof Pipe with Shock Cord
C)	5X2-PC-BIAB	4 Pcs	62"x1 <sup>3</sup> / <sub>8</sub> " Roof Pipe with Shock Cord
D)	8X3-PC-BIAB	2 Pcs	8'3 <sup>1</sup> / <sub>2</sub> "x1 <sup>3</sup> / <sub>8</sub> " Brace Pipe with Shock Cord
	3WPC	6 Pcs	3 Way Connectors
	PFOOT	4 Pcs	Plastic Foot Pads
	BALLW	10 Pcs	White Elastic Ball Bungee Straps
	TBIAB1010WH	1 Pc	10'x10' Booth in a Bag Fitted Cover
	TBIAB10SW-BS	2 Pcs	10' Side Wall with Bug Screen Window
	TBIAB10EW	1 Pc	10' End Wall
	TBIAB10EWZ	1 Pc	10' End Wall with Zippered Door
	CRB40	1 Pc	40" Canopy Roller Bag
	BOLTWNUT	Set 4	Bolts & Wing Nuts

# FRAME ASSEMBLY

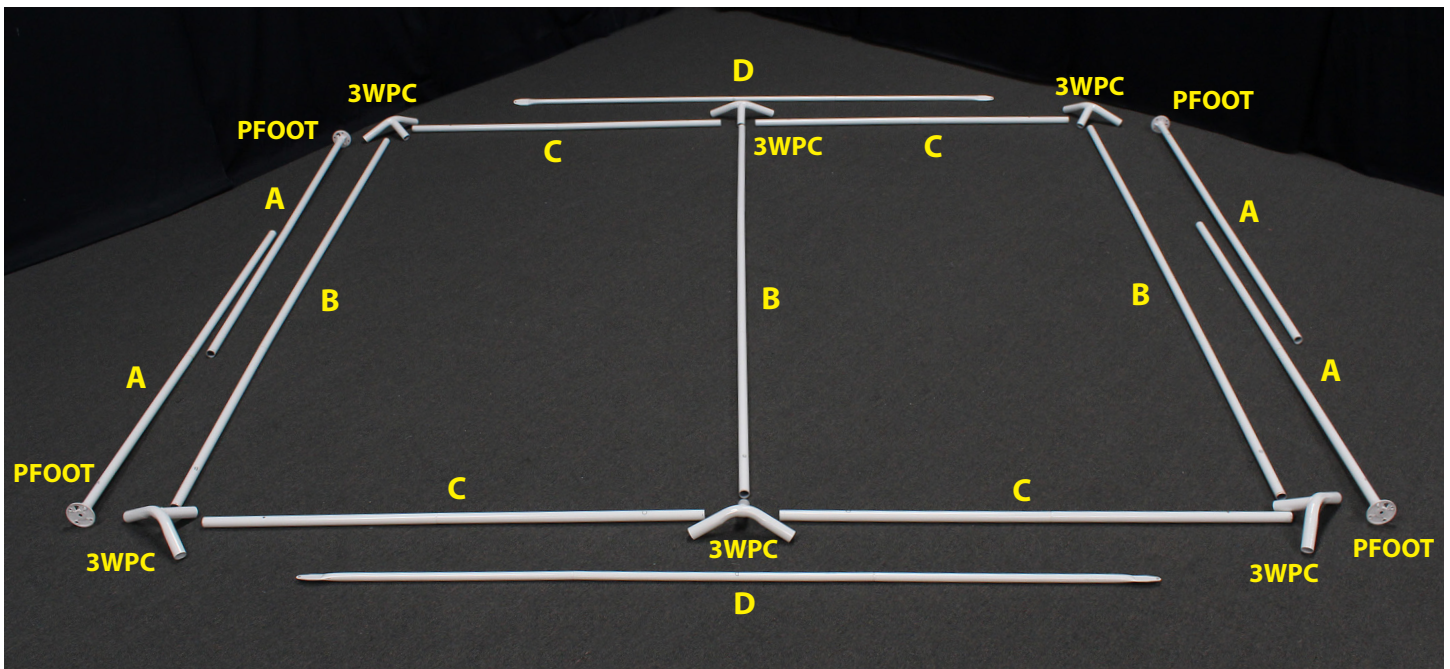


**Step 1)** Begin by laying out the parts as shown above.

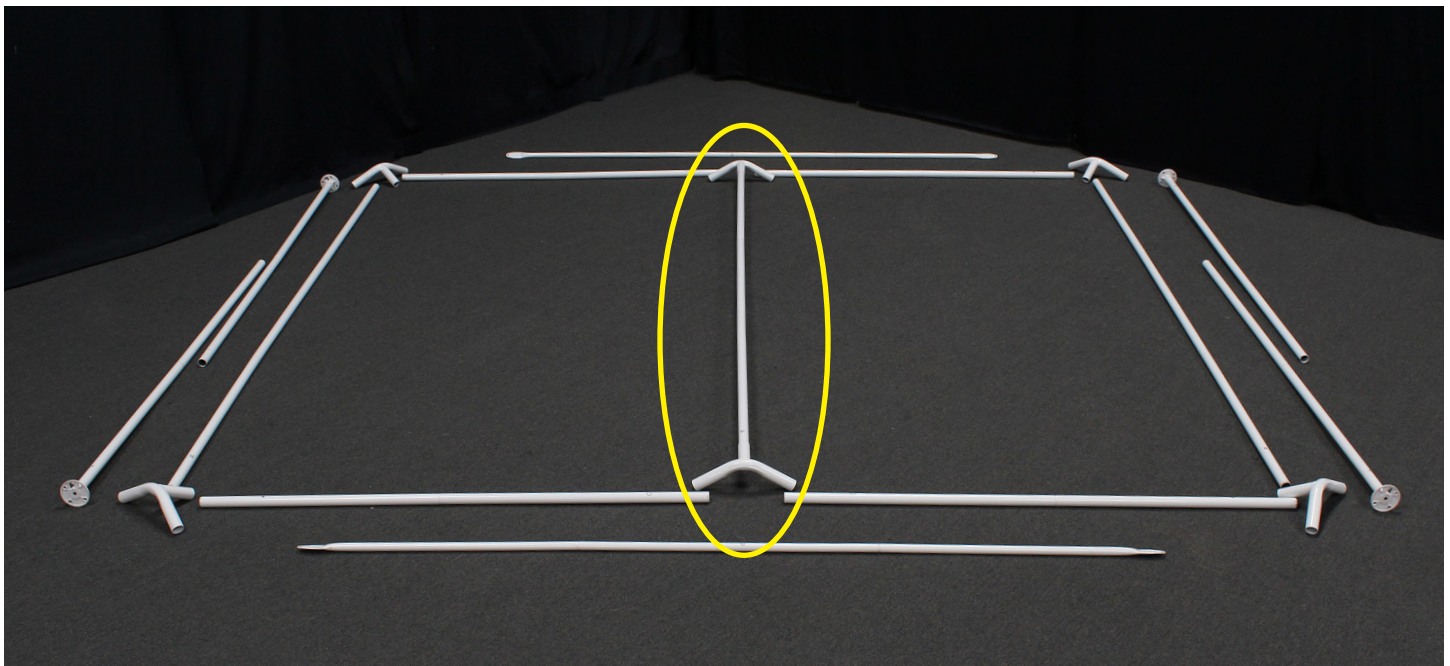


**Step 2)** Start assembly of frame at the center ridge. Connect the center ridge pipe to the 3 way connectors as shown


# FRAME ASSEMBLY

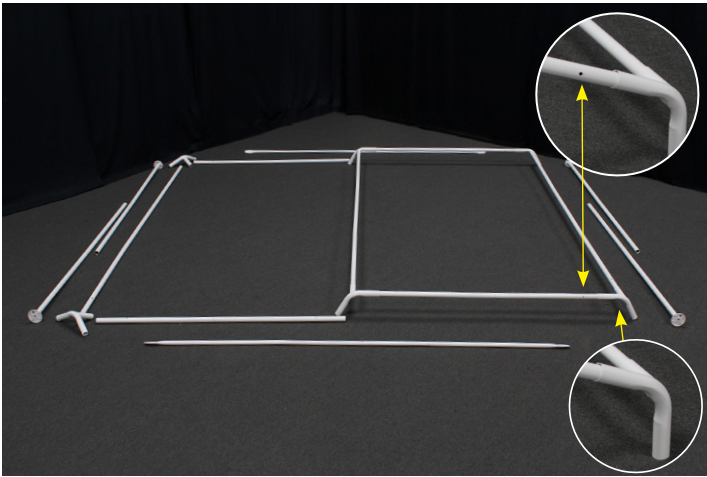


**Step 3)** Assemble one side of roof frame. Make sure the bolt holes face outward as shown and that the 3-Way fitting (3WPC) is placed with the curved bend facing the front and rear.

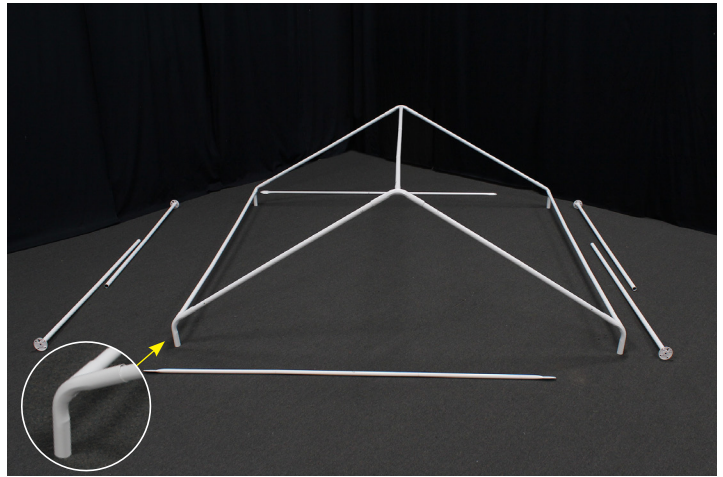


**Step 4)** Assemble the other side of roof frame as shown above following the same directions as in step 3.

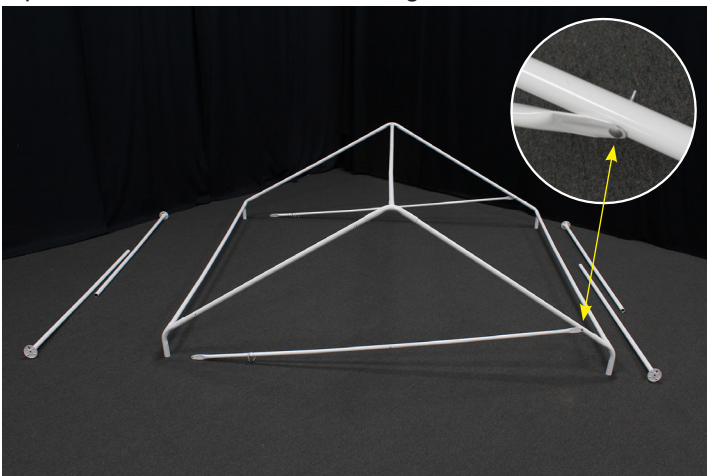


**Step 5)** Connect one side of the brace bar (Pipe D) with the bolt and wing nut. Make sure round head of bolt faces exterior of tent.

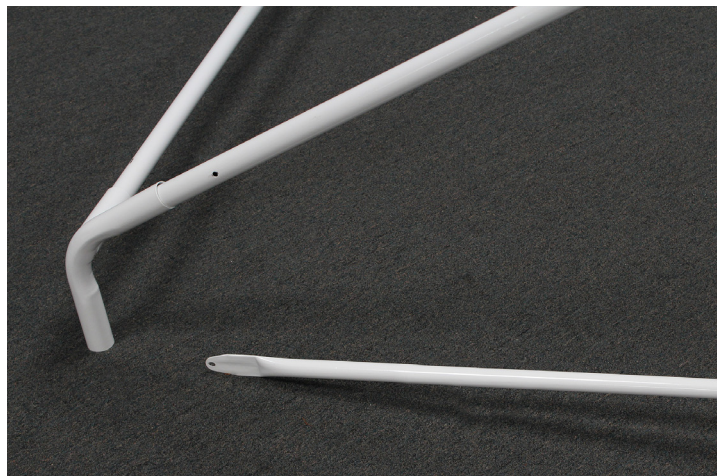

**Step 6)** Bolt the other side of brace bar to the frame.

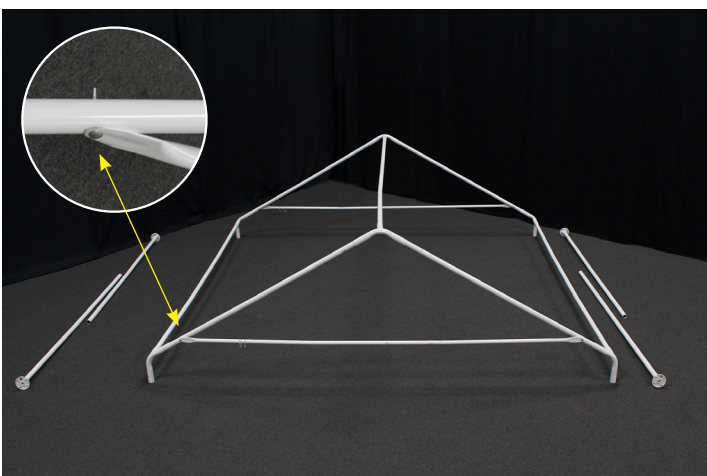


**Step 7)** Make sure the round head of bolt faces the exterior of tent.

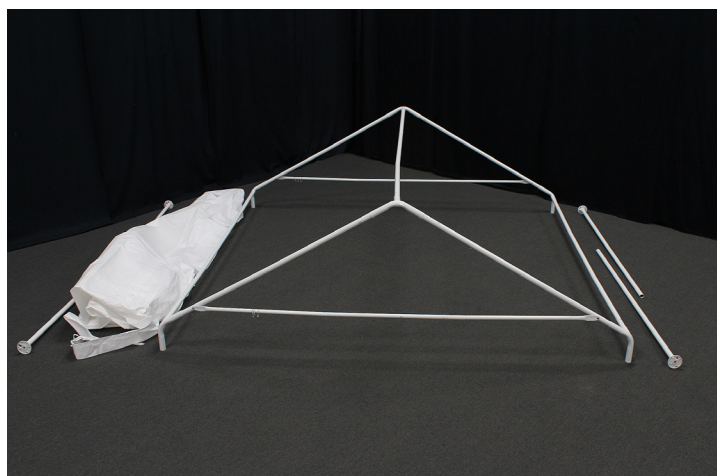


**Step 8)** Set cover on one side of frame as shown.




# COVER & WALL ASSEMBLY

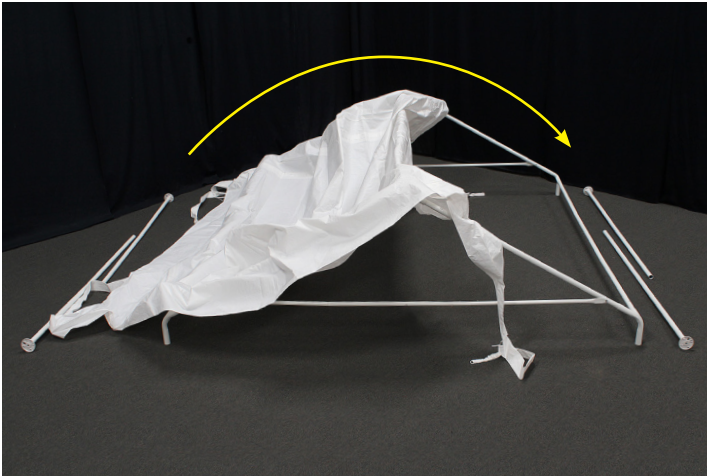

**Step 9)** Pull cover over frame. Make sure the peak of the cover lines up with the peak of the frame.

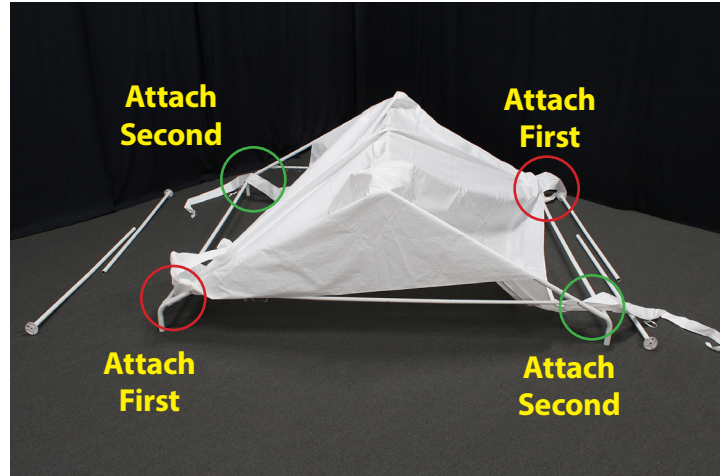

**Step 10)** Begin attaching ball bungees to the cover by starting at opposite corners and then attaching the other 2 corners.

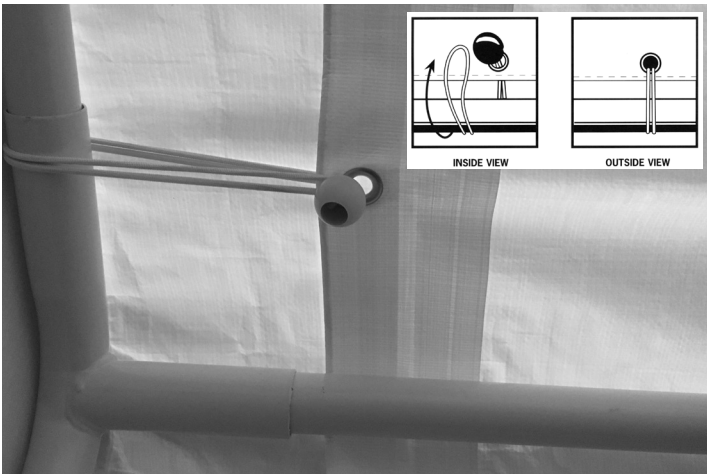


**Step 11)** Loop the ball bungee straps through the grommet from underside of cover. Attach one to each side of the frame at the corner as shown above.



**Step 12)** Once the corners of the cover are attached, the cover will help hold frame together. Now the legs can be inserted.



**Step 13)** Lift one side of the canopy and insert the legs into the 3 way connectors.

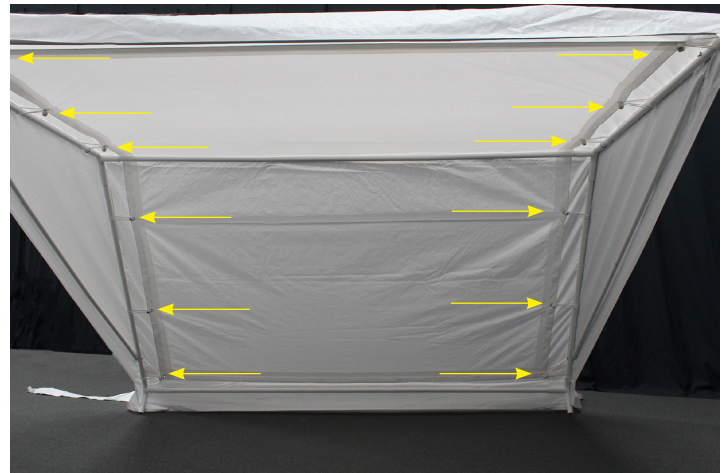


**Step 14)** Go underneath the canopy and attach Ball Bungee Straps to each end of the cover. Be sure to attach a ball bungee through every open grommet.

# COVER & WALL ASSEMBLY



**Step 15)** Insert the other 2 legs and attach the leg skirt straps to the footpads on all 4 legs.

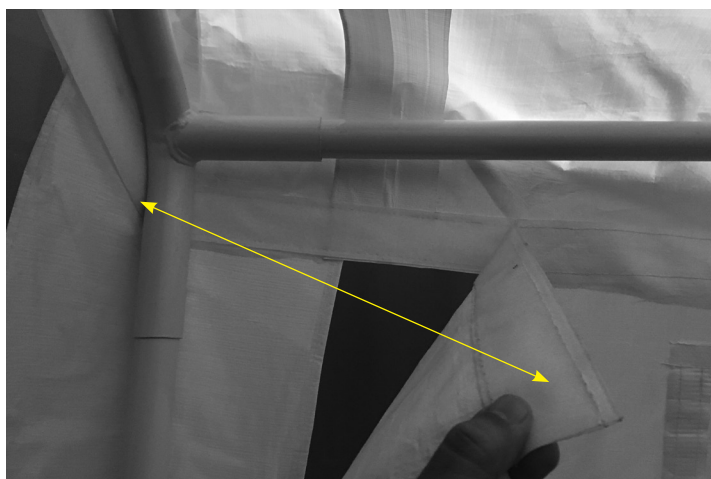

**Step 16)** Begin hanging the side walls by attaching the velcro straps to the velcro straps on the cover starting from the outside edge of the pipe.



**Step 17)** Attach the velcro straps around the each leg.



**Step 18)** Velcro the end walls to the end of the cover and zipper on to the side wall to completely close the corner. Repeat with the other side and front wall.



**Step 19)** Join zipper at the top of the walls.



**Step 20)** Zipper walls together in downward motion.



**Step 21)** You can roll up the doors and secure with the straps.



**Step 21)** The windows can be rolled up and secured with the straps.



**Step 22)** There are three zippers on the front wall so that you can roll up the two sides individually.



## ANCHORING YOUR CANOPY

This canopy is designed for use as a temporary structure. After assembly, the canopy **MUST BE** securely anchored to the ground to prevent damage from winds. Your canopy will act like a kite in the wind if not properly and securely anchored to the ground. Severe winds will cause the frame to twist and unanchored legs will fall, thereby collapsing the canopy. If severe winds are expected, you must remove the cover from the frame to prevent damage.

### Step 1

Measure out at least 36in from each leg. Screw each anchor into the ground leaving 2in between the ground and the eye of each anchor. We strongly recommend that your unit be anchored 36in from each leg although this may not be possible in all cases. **DO** install anchors as close to 36in away from legs as possible.

### Step 2

Tie anchor cable or rope around the connector at the top of each leg of the canopy. This is done by stringing the rope through the corner grommet located at each corner on the cover.

### Step 3

Securely tie the other end of the cable or rope through the eye of the anchor and pull tight.


### Step 4

Now, continue to screw each anchor into the ground until the eye of the anchor is flush with the ground. This will secure the anchor rope even tighter.

### Step 5

To secure the side walls insert a ground stake through the open grommets at the bottom of both side walls.

**NOTE:** You should check and tighten the rope frequently to ensure maximum stability of your canopy and to protect against wind damage.

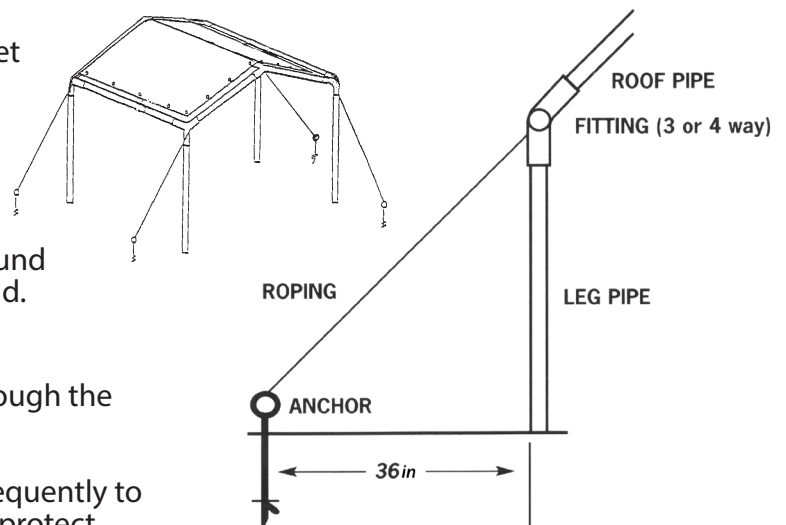

**ANCHOR KIT NOT INCLUDED WITH THIS CANOPY**

# IMPORTANT NOTICE: PLEASE READ CAREFULLY



**We are confident that you will be completely satisfied with your King Canopy unit. Please take a moment to read the very important information below, and call us with any questions you may have.**

King Canopy/PIC America, LTD. has no control over wind, snow, ice, rain or any other weather condition and we are in no way responsible for any damage caused by the canopy or to the canopy. We suggest you contact your insurance carrier just as you would for any other outside structure.

## **OTHER PRECAUTIONS WHICH MUST BE FOLLOWED:**

Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.

DO NOT cook underneath or near canopy.

DO NOT store or use flammable liquids underneath or near canopy.

DO NOT ignite or store fireworks underneath or near canopy.

DO NOT use bleach to clean cover.

DO NOT dry clean cover.

DO NOT wash cover in washing machine or dry in dryer. Hand wash with mild soap and water only.

DO NOT allow rain water, snow or ice to accumulate on top of cover.

DO NOT hang or suspend anything from the frame, grommets, truss system or ball straps of the unit.

REMOVE canopy cover before a storm, or disassemble entire canopy unit if possible.

REMOVE rain water, snow and ice from canopy cover.

**This is a temporary structure and is not recommended for use as a permanent structure.**





# PRODUCT INFORMATION

## **Defective Parts**

We try our best to eliminate any defective parts that are shipped with our products. If, however, you should find a defective part, we will replace – free of charge – any part which is defective. You will need to provide proof of purchase showing date of purchase and provide us with detailed description of the defective component. Your replacement will be shipped by ground shipping, freight prepaid. Next day or express shipping will require freight collect and paid for by you, the consumer. Damages from improper anchoring, strong winds, snow, ice or rain are not considered defects.

## **Improper Anchoring, Strong Winds, Rain Snow, or Ice**

King Canopy/PIC America, LTD. does not guarantee these canopies under strong weather conditions. These canopies are designed to protect against damages caused by sun, rain, tree sap, birds, etc. They are not designed to hold roof loads that accompany snow, ice or heavy rains. If your canopy is not anchored securely, it can be lifted by the wind and will fly away. If your canopy takes flight, we are not responsible for any replacement. If you know strong weather is predicted, remove the cover or take down the canopy unit completely. The cover is designed to be quickly and easily removed.

## **Warranty**

All components of this canopy feature a 1-year limited warranty and are warranted to be free from defects in material and workmanship for a period of 1-year. You must complete and return the enclosed warranty card promptly after purchase. Please retain your proof of purchase receipt; you will be asked to provide this receipt in order to obtain warranty service.

## **Non-Warranty Replacement Parts**

If after expiration of the warranty period, you require replacement parts please contact us at 1-800-800-6296. We stock replacement parts and make them available to you at discounted prices. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely hard on covers of any kind. Normal wear and tear is not covered under the warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

For missing parts, replacement parts or any questions:

Please Call 8:00am – 5:00pm EST, Monday – Friday

**1-800-800-6296 or 1-919-552-2977**

Or you can fax us at: **1-919-552-5069**

Replacement parts and customer service is also available through our website.

Please visit us at **[www.kingcanopy.com](http://www.kingcanopy.com)**