

10'X13' UNIVERSAL 6 LEG

ITEM #: C61013PC



Dimensions:


10ft. 8in. Wide x 13ft. Deep x 6ft. 8in. Side Height / 9ft. 9in. Center Height

WARNING:

Keep all flame and heat sources away from this tent fabric. Meets the flammability requirements of CPAI-84 It is not fire proof The fabric will burn if left in continuous contact with any flame source.


Distributed by: PIC America, LTD.
1730 Five Points Lane • Fuquay-Varina, NC 27526
1-800-800-6296 • www.kingcanopy.com

PARTS

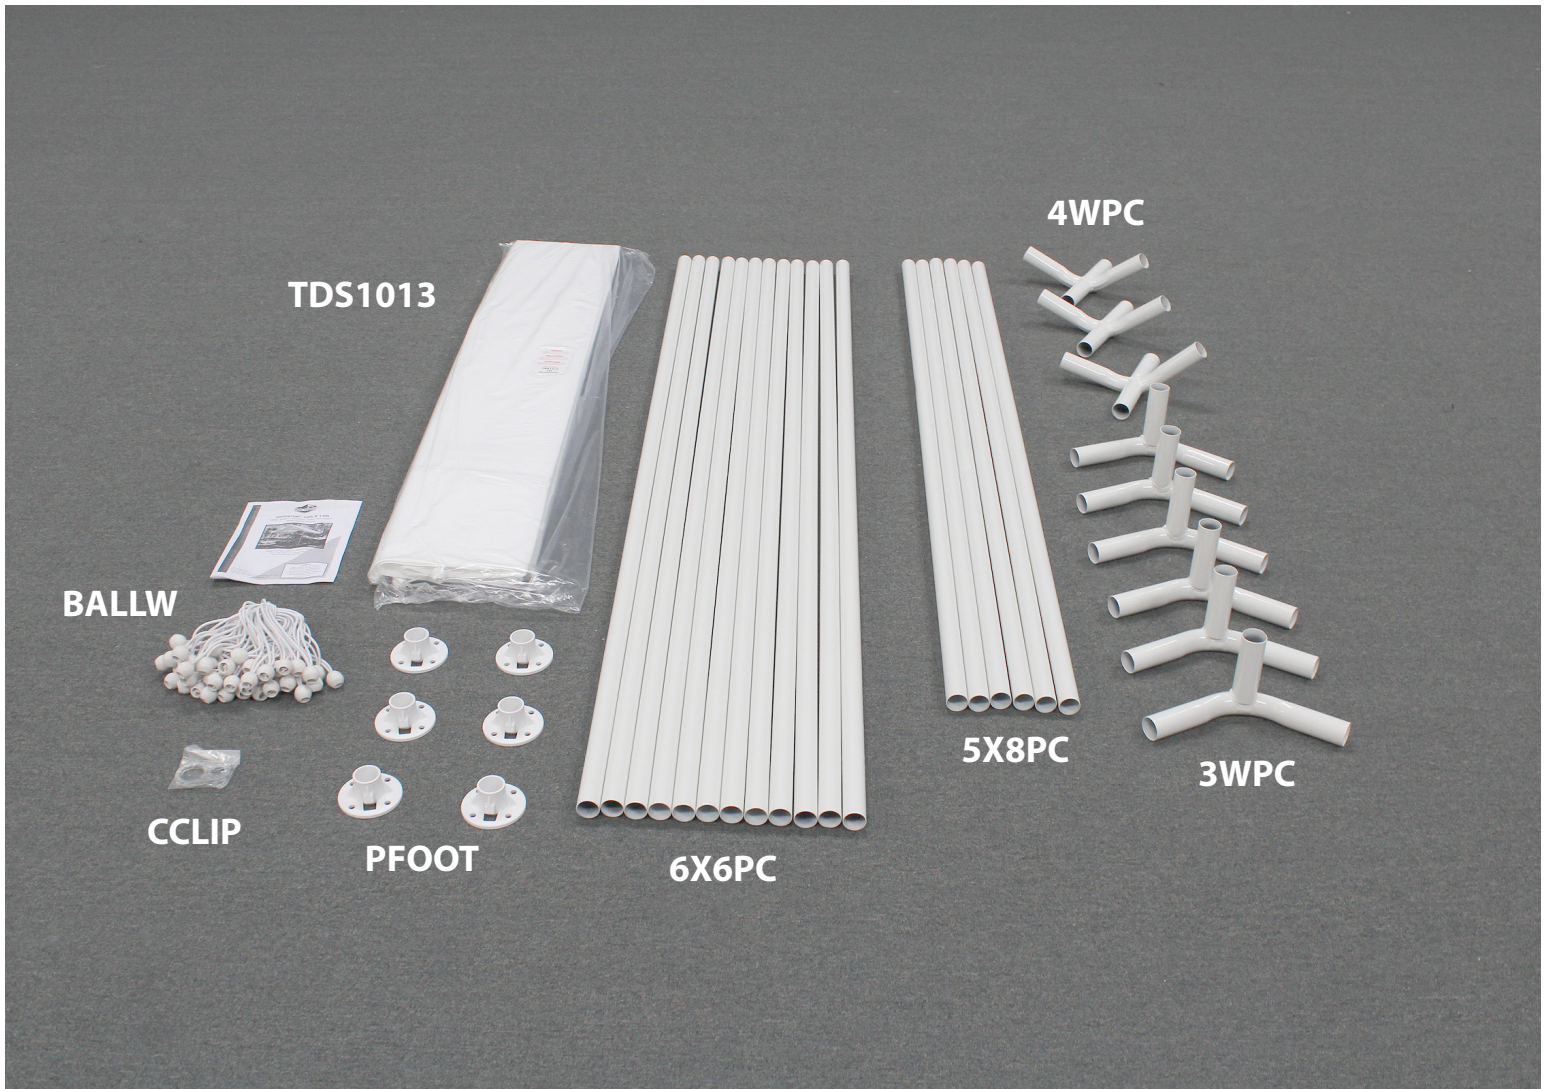


6X6PC	12 pc	78" Powder Coated Pipe
5X8PC	6 pc	68" Powder Coated Pipe
3WPC	6 pc	3-way Connectors
4WPC	3 pc	4-way Connectors
BALL50W	50 pc	Elastic Ball Straps
PFOOT	6 pc	Plastic Foot Pads
TDS1013	1 pc	White Drawstring Cover
CCLIP	4 pc	Curtain Clips


FRAME ASSEMBLY

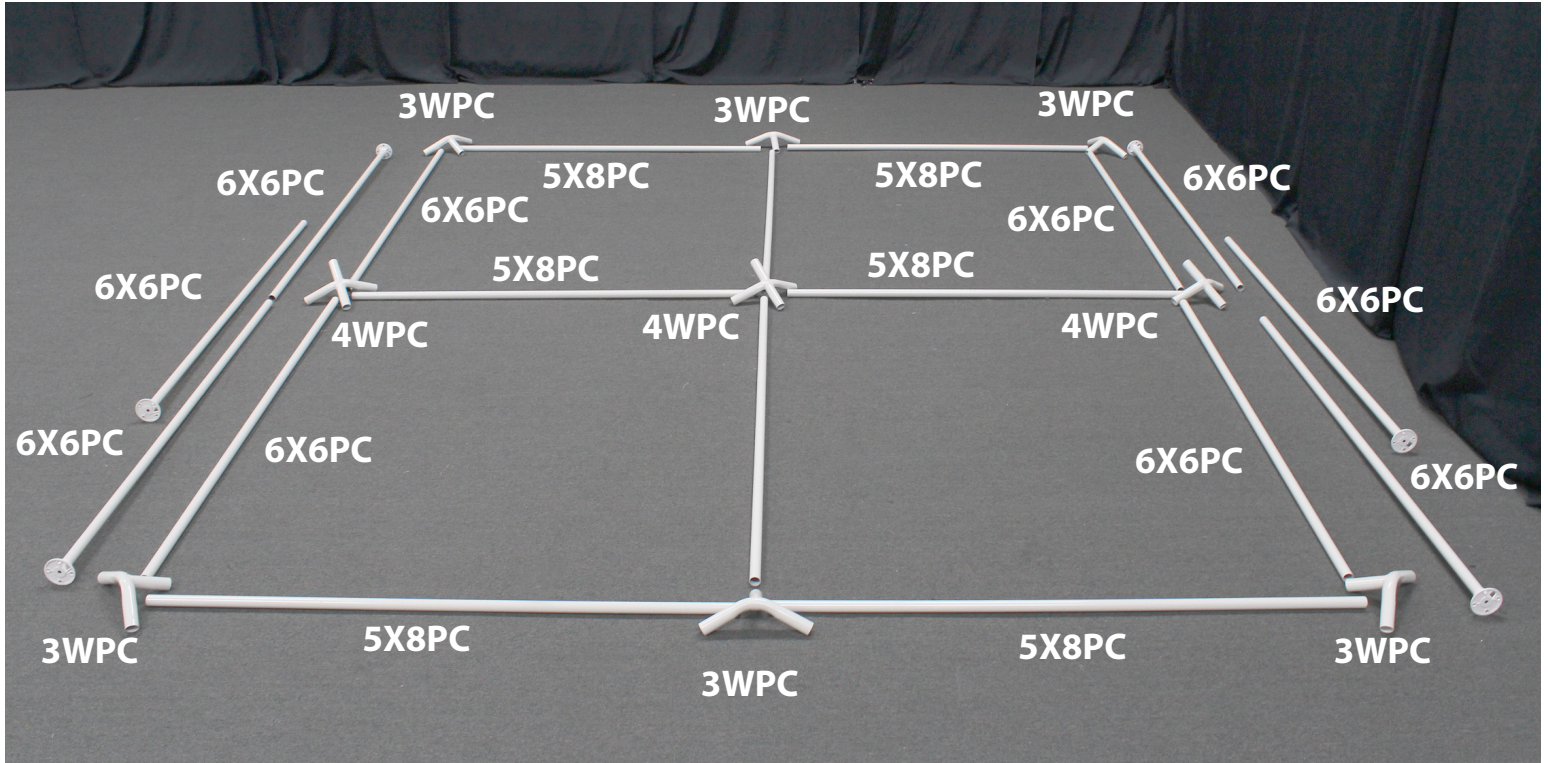

1) Start by laying out all of the parts and pieces to your King Canopy. Please refer to the parts list to ensure that your kit is complete. When all the parts have been accounted for, begin to layout the perimeter of your frame according to the photo above (6X6PC & 5X8PC). Each 3-way fitting (3WPC) should be placed at all four corners and two end peaks. The 4-Way fittings (4WPC) are placed at the center leg and roof sections.

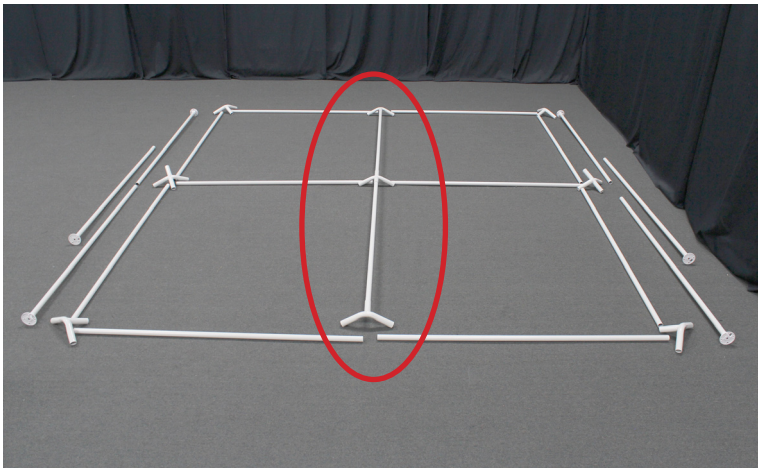


2) Now that all the pipe and fittings are laid out as displayed in the photo, begin to connect the center pipe and fittings. Start assembly by working from one end to the other, connecting the center ridge pipe into the 3-Way (3WPC) and 4-Way (4WPC) fittings.

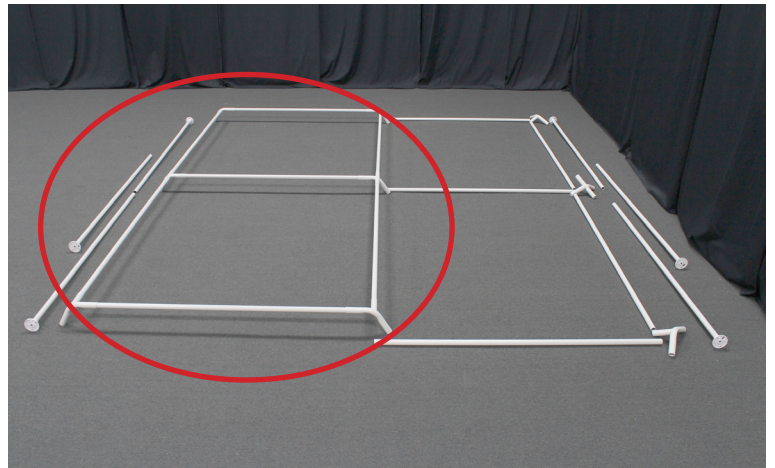


3) Once the center frame work is fully connected start assembling the left and right sections of the frame. Starting at one end, begin to connect the 5x8PC pipe to the assembled center ridge. Next connect the corner 3-Way & 4-Way fittings to the perimeter 6X6PC pipe.

FRAME & ATTACHING COVER

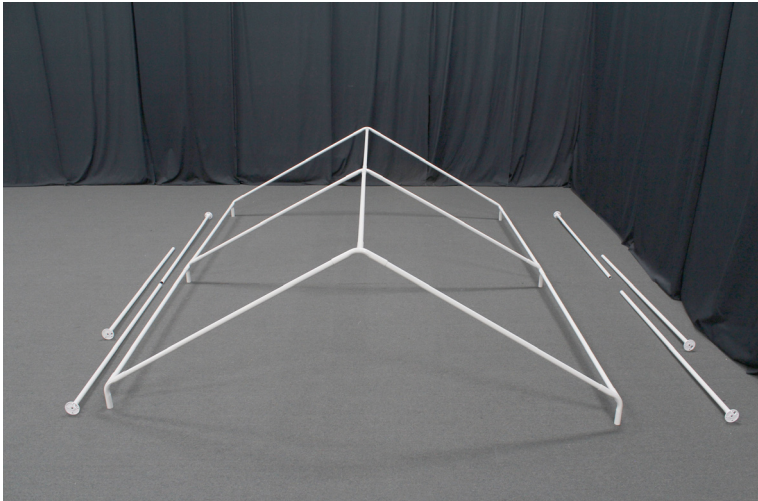


4) Once one side is complete, move to opposite sides of the unassembled frame lifting the frame and connecting the remaining 5X8PC pipe. Continue previous steps until all pipe and fittings are connected.

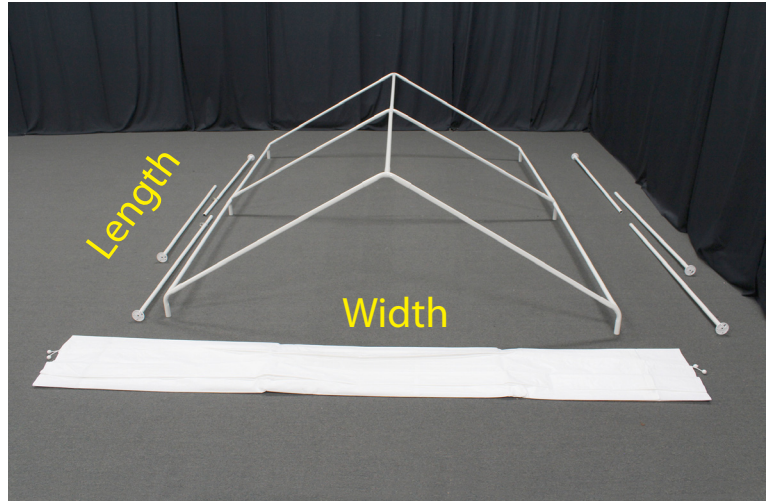

5) Now that the roof frame work is complete you can begin to attach the drawstring style cover. Start by laying out the cover to determine which way it is folded the length or width of the frame.



6) Grab each end and drape the cover over the frame centering the cover to the roof frame work.

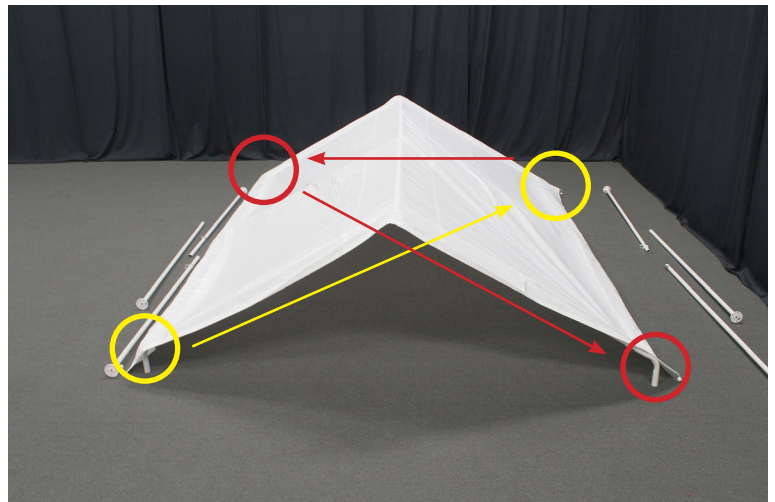

7) Starting at opposite corners, attach the cover with the elastic ball straps by inserting the elastic cord of the ball strap underneath the cover and through the grommet. Then pull taught until the ball stops.

ATTACHING COVER



8) Wrap the cord around the pole and secure around the ball.



9) Be sure all four corners are attached before attaching the remaining ball straps.



10) Continue attaching straps from left to right in a zig zag pattern starting at the two center peaks.



11) Next continue attaching the straps down each side and end. Make sure the cover stays centered on the frame.


LEG ASSEMBLY



12) Now that all the ball straps are attached. Insert the pipe into each plastic foot pad and begin to attach the legs to the frame. Place each leg next to the three and four way fittings.



13) Slide a c-clip on to each corner leg before inserting them into the 3-way fittings.

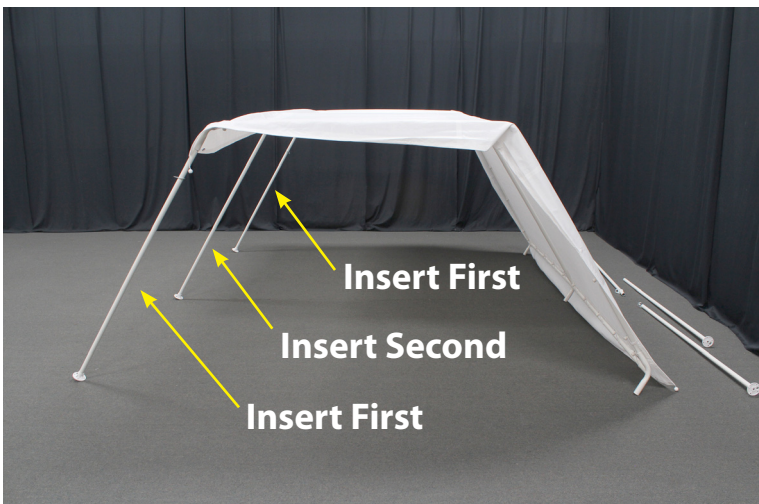


14) Starting with the two outside legs grab the base of the 3-way corner fitting. Lift the frame and insert the leg into the open 3-Way fitting. Next insert the center leg.



15) Repeat step on other side until the entire unit is standing upright.

COVER ADJUSTMENT

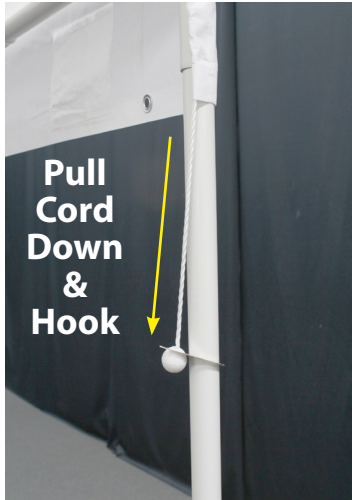

16) Pull each drawstring cord down evenly and hook onto the c-clip at each corner leg. Repeat step at the other end of the canopy. Use remaining ball straps to secure the valances to the

17) Use the remaining ball straps to secure the valances to the legs.



This canopy is designed for use as a temporary structure. **After assembly, the canopy *MUST BE* securely anchored to the ground to prevent damage from winds.** Your canopy will act like a kite in the wind if not properly and securely anchored to the ground. Severe winds will cause the frame to twist and unanchored legs will fall, thereby collapsing the canopy. If severe winds are expected, you must remove the cover from the frame to prevent damage. Please follow the anchoring instructions found in the **optional anchor kit available for purchase separately.**

IMPORTANT NOTICE: PLEASE READ CAREFULLY

We are confident that you will be completely satisfied with your King Canopy unit. Please take a moment to read the very important information below, and call us with any questions you may have.

King Canopy/PIC America, LTD. has no control over wind, snow, ice, rain or any other weather condition and we are in no way responsible for any damage caused by the canopy or to the canopy. We suggest you contact your insurance carrier just as you would for any other outside structure.

OTHER PRECAUTIONS WHICH MUST BE FOLLOWED:

Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.

DO NOT cook underneath or near canopy.

DO NOT store or use flammable liquids underneath or near canopy.

DO NOT ignite or store fireworks underneath or near canopy.

DO NOT use bleach to clean cover.

DO NOT dry clean cover.

DO NOT wash cover in washing machine or dry in dryer. Hand wash with mild soap and water only.

DO NOT allow rain water, snow or ice to accumulate on top of cover.

DO NOT hang or suspend anything from the frame, grommets, truss system or ball straps of the unit.

REMOVE canopy cover before a storm, or disassemble entire canopy unit if possible.

REMOVE rain water, snow and ice from canopy cover.

This is a temporary structure and is not recommended for use as a permanent structure.

WARRANTY INFORMATION

Defective Parts

We try our best to eliminate any defective parts that are shipped with our products. If, however, you should find a defective part, we will replace – free of charge – any part which is defective. You will need to provide proof of purchase showing date of purchase and provide us with detailed description of the defective component. Your replacement will be shipped by ground shipping, freight prepaid. Next day or express shipping will require freight collect and paid for by you, the consumer. Damages from improper anchoring, strong winds, snow, ice or rain are not considered defects.

Improper Anchoring, Strong Winds, Rain Snow, or Ice

King Canopy/PIC America, LTD. does not guarantee these canopies under strong weather conditions. These canopies are designed to protect against damages caused by sun, rain, tree sap, birds, etc. They are not designed to hold roof loads that accompany snow, ice or heavy rains. If your canopy is not anchored securely, it can be lifted by the wind and will fly away. If your canopy takes flight, we are not responsible for any replacement. If you know strong weather is predicted, remove the cover or take down the canopy unit completely. The cover is designed to be quickly and easily removed.

Warranty

All components of this canopy feature a 1-year limited warranty and are warranted to be free from defects in material and workmanship for a period of 1-year. You must complete and return the enclosed warranty card promptly after purchase. Please retain your proof of purchase receipt; you will be asked to provide this receipt in order to obtain warranty service.

Non-Warranty Replacement Parts

If after expiration of the warranty period, you require replacement parts please contact us at 1-800-800-6296. We stock replacement parts and make them available to you at discounted prices. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely hard on covers of any kind. Normal wear and tear is not covered under the warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

For missing parts, replacement parts or any questions:

Please Call 8:00am – 5:00pm EST, Monday – Friday
1-800-800-6296 or 1-919-552-2977

Or you can fax us at: **1-919-552-5069**

Replacement parts and customer service is also available through our website.
Please visit us at **www.kingcanopy.com**