




HOW TO MEASURE FOR YOUR FREEZEPRO® VALVE

Selecting the right size FreezePro® Valve for your equipment is a lot easier than you might think. All you need is a tape measure, and you are ready to go!

CLICK [HERE](#) FOR VIDEO TUTORIAL: **HOW TO MEASURE FREEZEPRO® VALVE**

WARNING: When installing or measuring for FreezePro® Valve, please follow all safety precautions and use proper and adequate protective safety aids such as: protective gloves and suitable protective clothing. Never use a metal tape for measuring purposes. Failure to do so may result in injury.

1. START AT THE TOP OF THE NECK AND MEASURE FOR THE CIRCUMFERENCE:

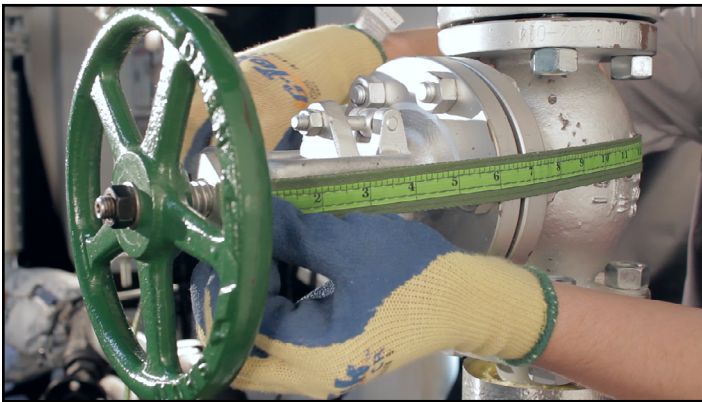

CIRCUMFERENCE

2. MEASURE FOR THE DESIRED WIDTH:



WIDTH

NOTE: Measure at least 2 inches past the outer edges of rigid insulation on both sides.



3. FIND THE RIGHT FREEZEPRO® VALVE:

FOR EXAMPLE: The CIRCUMFERENCE (length) is 30in and the desired width is 17in = **FPV 3618**.

WIDTH

CIRCUMFERENCE	6in (152mm)	12in (305mm)	18in (457mm)	24in (610mm)
0in - 7in (0mm-178mm)	FPV 1206	FPV 1212	FPV 1218	FPV 1224
7in-13in (178mm-330mm)	FPV 1806	FPV 1812	FPV 1818	FPV 1824
13in-19in (330mm-483mm)	FPV 2406	FPV 2412	FPV 2418	FPV 2424
19in-25in (483mm-635mm)	FPV 3006	FPV 3012	FPV 3018	FPV 3024
25in-31in (635mm-787mm)	FPV 3606	FPV 3612	FPV 3618	FPV 3624
31in-37in (787mm-940mm)	FPV 4206	FPV 4212	FPV 4218	FPV 4224
37in-42in (940mm-1067mm)	FPV 4806	FPV 4812	FPV 4818	FPV 4824
42in-49in (1067mm-1245mm)	FPV 5406	FPV 5412	FPV 5418	FPV 5424
49in-55in (1245mm-1397mm)	FPV 6006	FPV 6012	FPV 6018	FPV 6024

NOTE: Now that you have your measurements, you can use the graph above to help you find the appropriate FreezePro® Valve part number. Circumference (length) measurements are listed in the table rows vertically (Y axis) and width measurements are listed in the column rows horizontally (X axis).

CLICK [HERE](#) FOR VIDEO TUTORIAL: **HOW TO INSTALL FREEZEPRO® VALVE**