

Item # ADTIP

Automotive Digital Tire Inflator Pump Operating Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? CONTACT CUSTOMER SERVICE FIRST BEFORE RETURNING THIS PRODUCT TO THE RETAILER

If you experience a problem or need parts for this product, visit our website <http://www.buffalotools.com> or call our customer help line at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY - NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

PACKING LIST

- 1 - Portable Auto Air Compressor
- 1 - Sports Needle
- 1 - Small Inflatable Nozzle (Red)
- 1 - Large Inflatable Nozzle (Blue)
- 1 - Spare Fuse (not shown)

Sports Needle



Large Inflatable Nozzle (Blue)



Small Inflatable Nozzle (Red)



SPECIFICATIONS

Product power: 120W
Operating voltage: DC 12V
Maximum pressure: 150 PSI
Displacement: 27L/Min
Inflation Time: 7 min
Display 4 min 30 sec
Continuous working time: 8 min
Material: ABS
Power cable length: 9 feet
LED Digital Display

INSTRUCTIONS

1. Start the car, then insert the cigar lighter plug into the car's 12V DC jack.
2. Put the inflatable nozzle on the object that needs to be inflated.
3. Then press the "R" key for the unit button: (Displays PSI, BAR and KPA) and press "-" to decrease; press "+" to increase.
4. Adjust the default value to your preferred PSI inflation, then wait 3 seconds and press Power Button. Max pressure is 150 PSI
5. It will stop inflating automatically when it reaches the correct PSI.
6. Continuous working time shall not exceed 8 minutes. To protect the machine and extend its life, you must give it a break (6-8 minutes) after every 10-15 minutes use.



"R" key "-" key "+" key