

TROLLEY POP-UP PLAY TENT

Features:

Roomy 45 in. x 28 in. x 28 in.
Two large 15" openings for easy viewing inside of tent and play
Large 13 in. x 17 in. side opening secures open to easily enter or exit the trolley
Pop up easily for play and folds down for storage in carrying bag
Polyester Material and Flexible Wire Spring Structure
No assembly required



The PBS KIDS logo is a registered trademark of PBS and is used with permission.



© 2019 The Fred Rogers Company. All Rights Reserved

Ride along with me!

Made in China





TROLLEY POP-UP PLAY TENT

PLEASE READ ALL INSTRUCTIONS BEFORE SETUP OR FOLDAWAY OF YOUR PLAY TENT.

This product comes in its folded/coiled form for packaging convenience. The packaging storage bag should be kept for convenient storage of play tent when not in use.

CAUTION: This structure uses a spring steel loop that will POP OPEN QUICKLY!

Caution must be used when handling this product.


- Small children should never be allowed to fold or unfold the structure without adult supervision.
- Do not place heavy objects on this product.
- Discard if steel loop is broken or if this product is damaged.
- If your tent does not stand square or if you notice the panels are bowing/curving, you may experience difficulty folding and storing your product. Bowing panels may be the result of a twisted inner spring loop. To correct, firmly run your fingers around the panels' edaes


(black binding) of the product and where the spring loop is located. When you feel a twist or kink place hands on either side of it and pedal them backwards or forwards to untwist the loop and allow easier opening and folding.

• To maintain the vibrant coloring and durability of the tents material this product should not be left in direct sunlight or outdoors for extended periods of time.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. This product is fire resistant only. This fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Spot clean only.

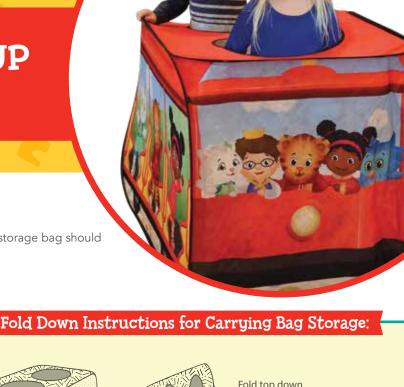

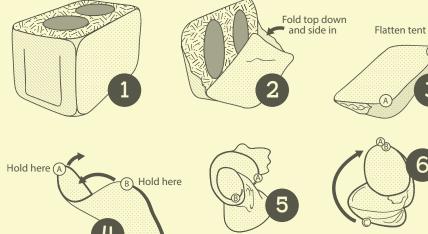

Twist "B" under "A" to form circle



Hold "A and B" together with one hand and fold "C" up.





The PBS KIDS logo is a registered trademark of PBS and is used with permission.



© 2019 The Fred Rogers Company. All Rights Reserved.



M&M Sales Enterprises, Inc. Dubuque, IA 52002 563.503.5900 www.mandmsalesinc.com