 


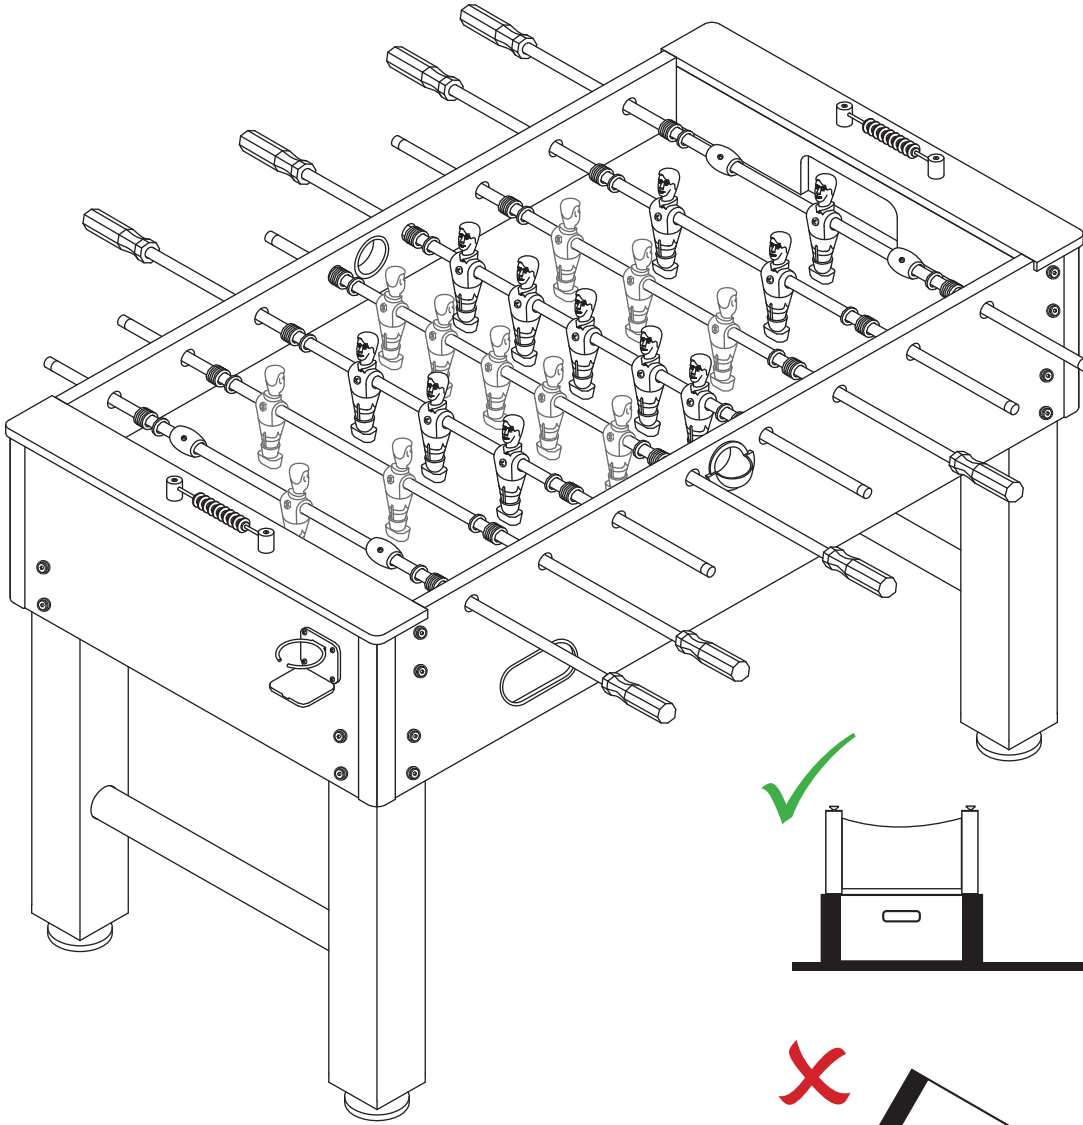


55" FOOSBALL TABLE EG-701

Review all assembly and care instructions carefully before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.



  Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
 Save the packing slip.

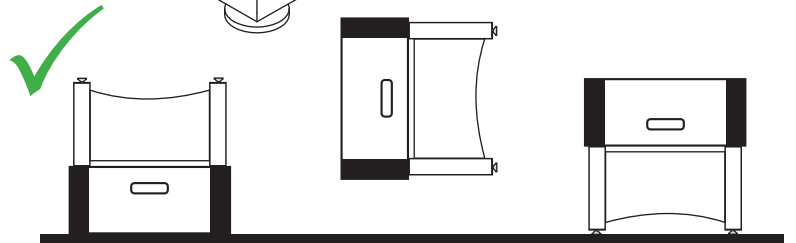

IMPORTANT

Two strong adults are needed to turn the table over, as shown above.

Do not lift the table by the legs; lift by the cabinet only.

Do not let table lean on its legs.

HELPFUL HINT

Sunnydaze Decor advises reviewing this manual fully, and assembling the game table soon after purchase. Check that all parts are accounted for and familiarize yourself with all assembly steps before beginning.

 
 
 
 




 
 

 




Save this manual for future reference.

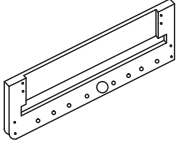
COMPONENTS












 

Thoroughly inspect packaging to ensure all parts are accounted for before disposing of packing materials.




 











No.	TABLE PARTS	QTY.
P1	 Side Panel	2
P2	 End Panel	2
P3	 Playing Field	1
P4	 Left Leg	2
P5	 Right Leg	2
P6	 Playfield Support Brace	2
P8	 Cup Holder	2
P9	 Ball Entry Cup Set	2
P10	 Ball Catch	2
P11	 Goal	2
P12	 Ball Runner	2
P13	 Slide Scorer	2
P14	 Corner	4
P16	 Leg Bar	2
P17	 End Panel Top	2
H9	 Leg Leveler	4

INCLUDED TOOLS	
	Hex Key

TOOLS REQUIRED (not included)	
	Phillips Screwdriver

No.	HARDWARE	QTY.
H1	 5/16" x 1-1/4" Bolt	16
H2	 5/16" Washer	24
H3	 5/16" x 2-1/4" Bolt	8
H5	 T4 x 5/8" Screw	30
H7	 F3.5 x 3/4" Screw	4
H8	 T3.5 x 1" Screw	20
H12	 1/4" Barrel Nut	4
H13	 Wood Dowel Pin	4
H14	 T4 x 1-1/8" Screw	6
H15	 1/4" x 2" Bolt	4
H16	 1/4" Washer	4

  Extra pieces may be included.

No.	PLAYER PARTS	QTY.
C1	 5-Player Rod	2
C2	 1- or 3-Player Rod	4
C3	 2-Player Rod	2
C4	 Rod Bushing	16
C5	 Stop Ring	4
C6	 Plastic Washer	16
C7	 5/32" x 1" Bolt	26
C8	 5/32" Lock Nut	26
C9	 Home Player	11
C10	 Away Player	11
P7	 Handle	8
P15	 Rod Cap	8
H10	 Soccer Ball	2

— SAVE THESE INSTRUCTIONS —

 


ASSEMBLY

STEP 1

P2: 2
P17: 2
H13: 4
H14: 6



x2

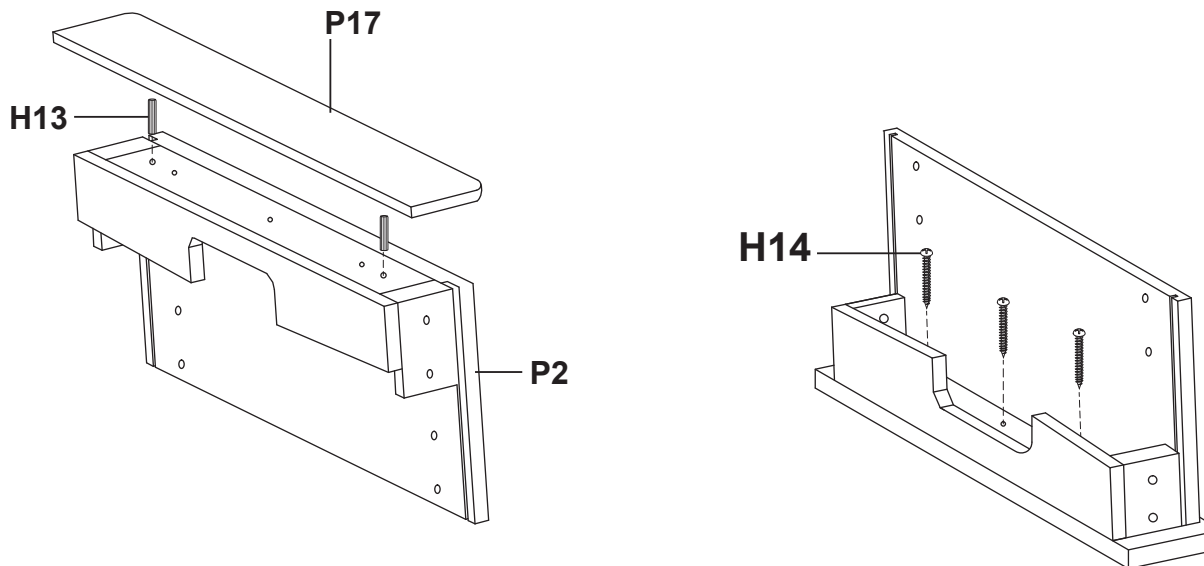

STEP 2


TIP: Ensure the playfield fits nicely on the inside of the panels before fully tightening hardware.

  P1: 2
P3: 1
P14: 4
H2: 8
H3: 8

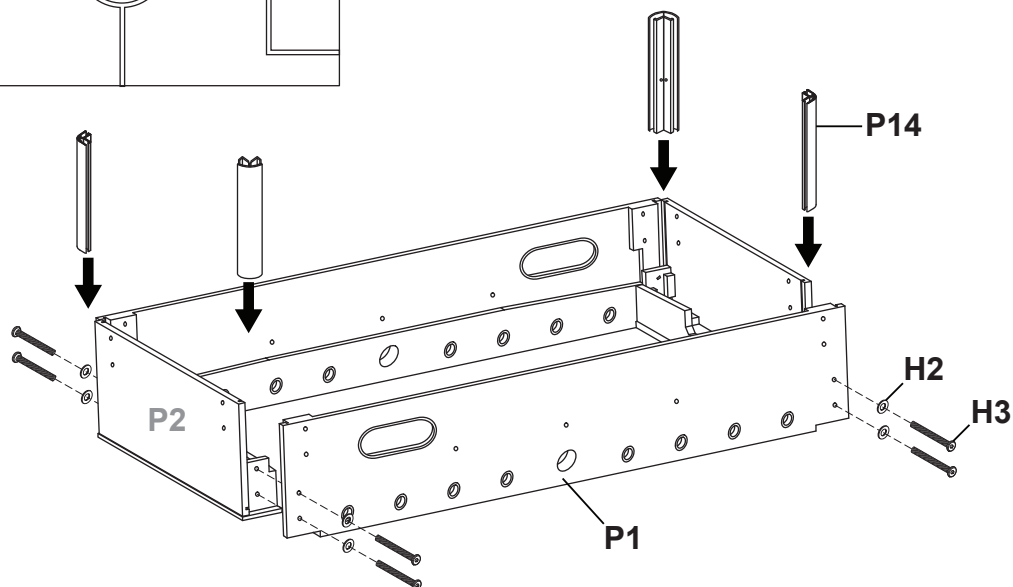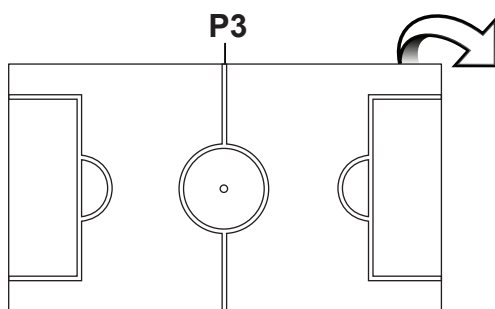


STEP 3

 - P6: 2
- H8: 20
- H12: 4
- H15: 4
- H16: 4

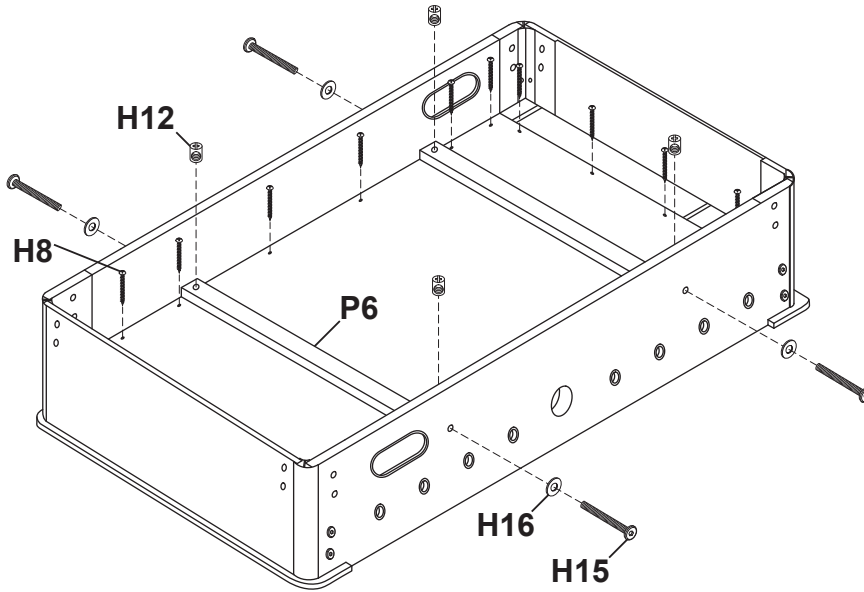


STEP 4

 - H5: 8

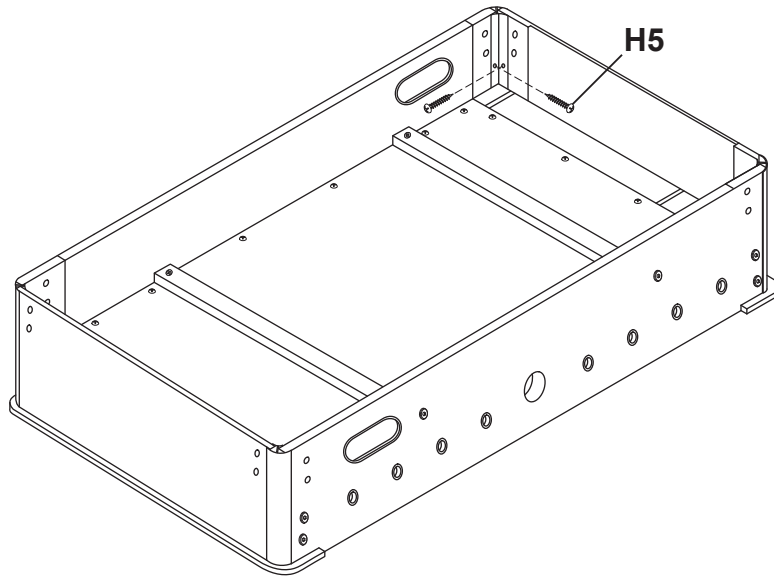

STEP 5

 - P4: 2
- P5: 2
- P16: 2

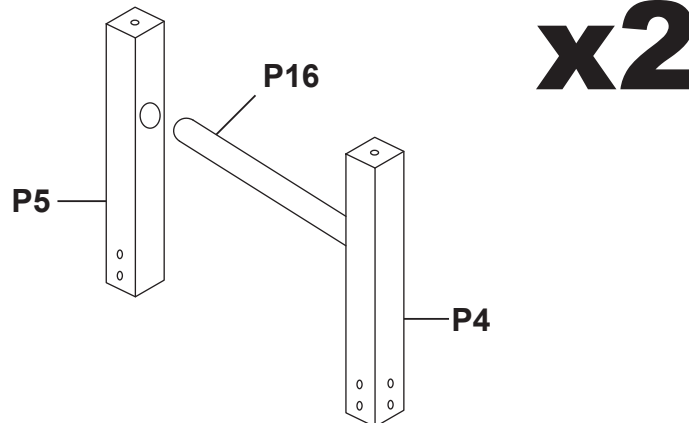

STEP 6

P10: 2

P11: 2

 
P12: 2

H1: 16

H2: 16

H5: 12

H9: 4

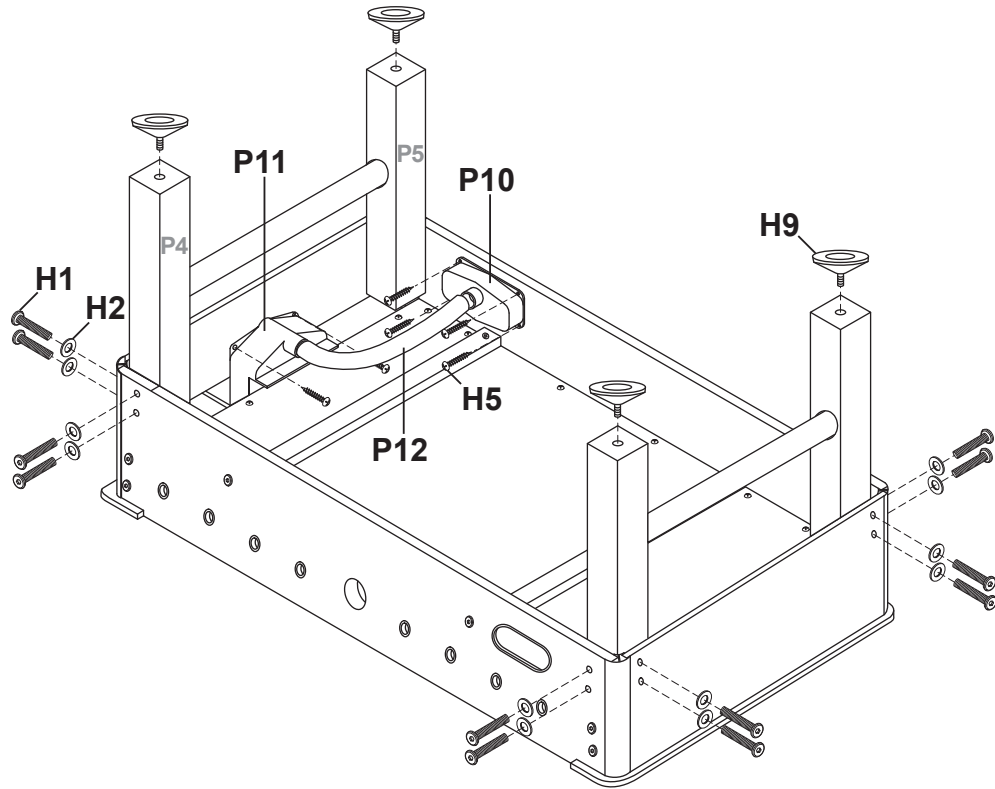

STEP 7

 
P8: 2

P9: 2

P13: 2

H5: 10




H7: 4

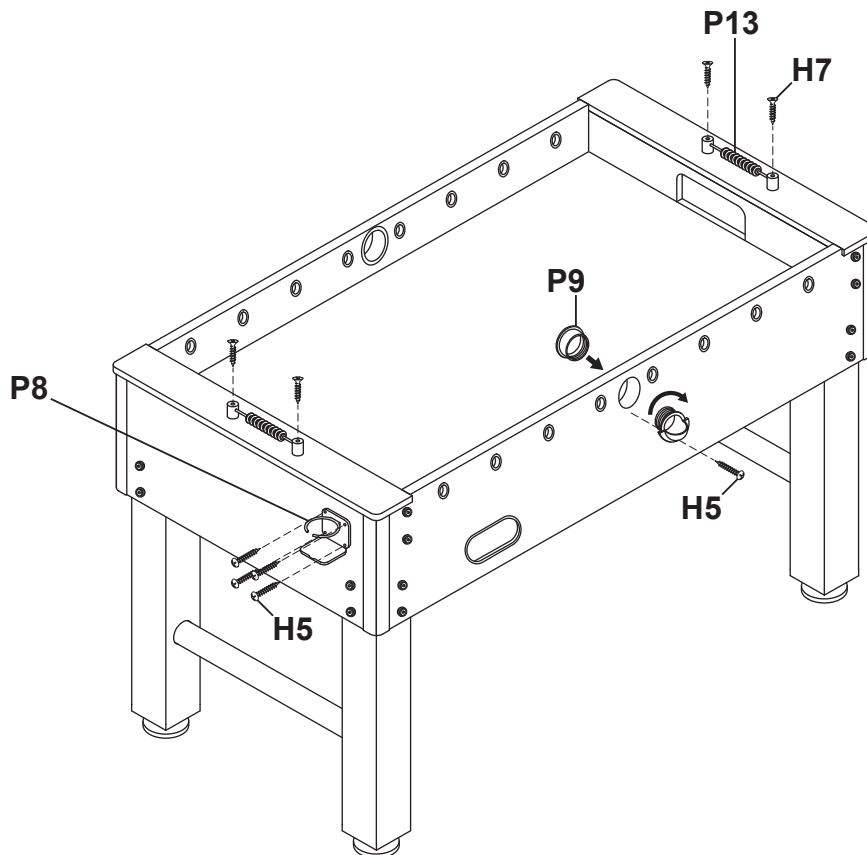

STEP 8

HOME **AWAY**


C1: 1	C1: 1
C2: 2	C2: 2
C3: 1	C3: 1
C4: 8	C4: 8
C5: 2	C5: 2
C6: 8	C6: 8
C7: 13	C7: 13
C8: 13	C8: 13
C9: 11	C10: 11
P7: 4	P7: 4
P15: 4	P15: 4

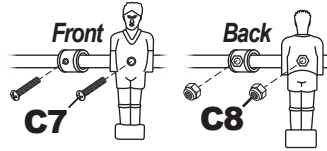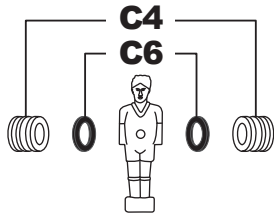   








Identify the handle-side of the player rod by locating the pre-drilled hole that is close to one end of the rod.

Follow the diagrams to ensure rod and player placement are correct.

- Firmly attach Handle (P7) to the handle-side of the player rod.
- Run the rod through the outside opening on the table; do not run the rod through the opposite side of the table yet.
- Ensuring the front of the players are facing the center of the playing field, install components as indicated in the diagram below.
- After bushings, washers and players are placed onto the rod, put the other end of the rod through the opening on the opposite side of the table and firmly push Rod Cap (P15) on the rod.
- Align the players and goalkeeper stop rings with the mountain holes on the rod. Firmly secure each player/stop ring using 5/32" x 1" Bolt (R8) and 5/32" Lock Nut (R9).

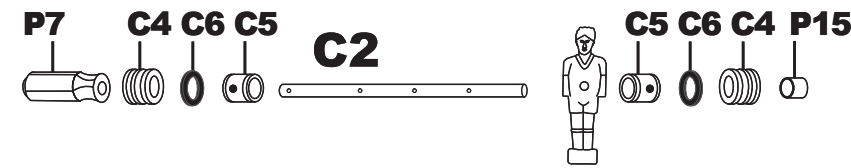

NOTE: Stop Rings (C5) are only used on goalkeeper rods.

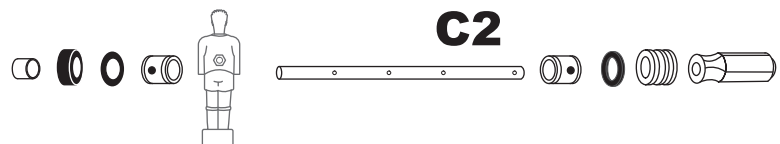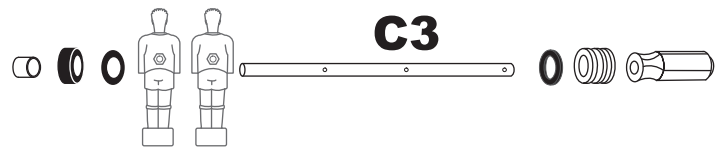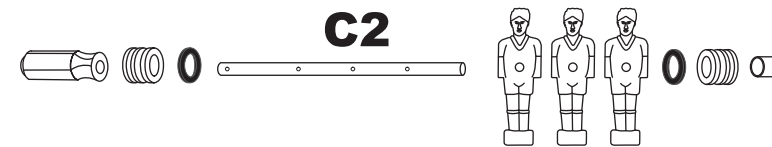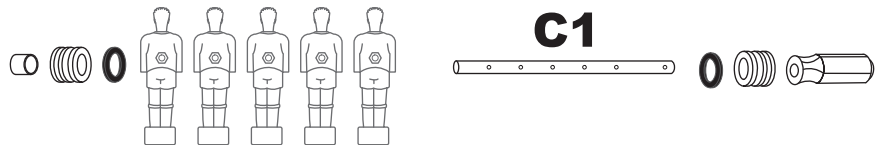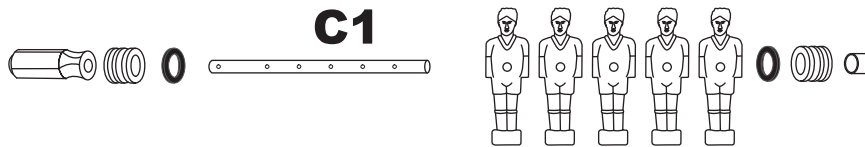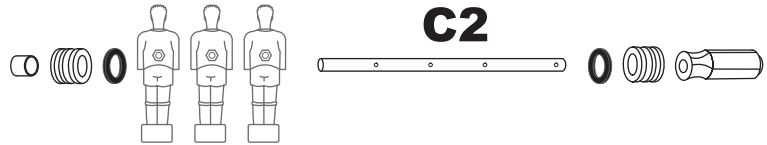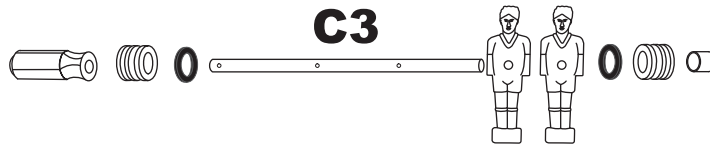

Care and Maintenance

PROTECT: Only use this game table indoors; high moisture areas may cause the finish to peel and wood to warp.

LEVEL: If the playing surface is uneven, adjust the feet by (un)screwing each foot until the playing field is level.

COVER: Covering the game table while not in use will help prevent dust build-up.

INSPECT: Periodically check all assembly points to ensure all bolts and screws are firmly secured.

CLEAN: Use a soft, dry cloth to dust the game table. For stubborn stains, use a slightly damp cloth. Dry any wet or damp spots immediately as contact with water will damage the finish.

NEVER use furniture polish, harsh chemical or abrasive materials to clean any part of the game table.

SAFETY STATEMENTS & WARNINGS

- This product is intended for INDOOR use only.
- For residential use only.
- Supervise children while this item is in use.
- Do not sit, stand, climb or lean on any part of the table.
- Ensure all bolts and screws are firmly secured before each use.
- Always lift the table when moving it. Dragging the table can permanently damage the unit.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.