


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# 4-TIER GRAND COURTYARD OUTDOOR FOUNTAIN FC-73850

Read the assembly instructions carefully and follow the care instructions.  
Keep these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

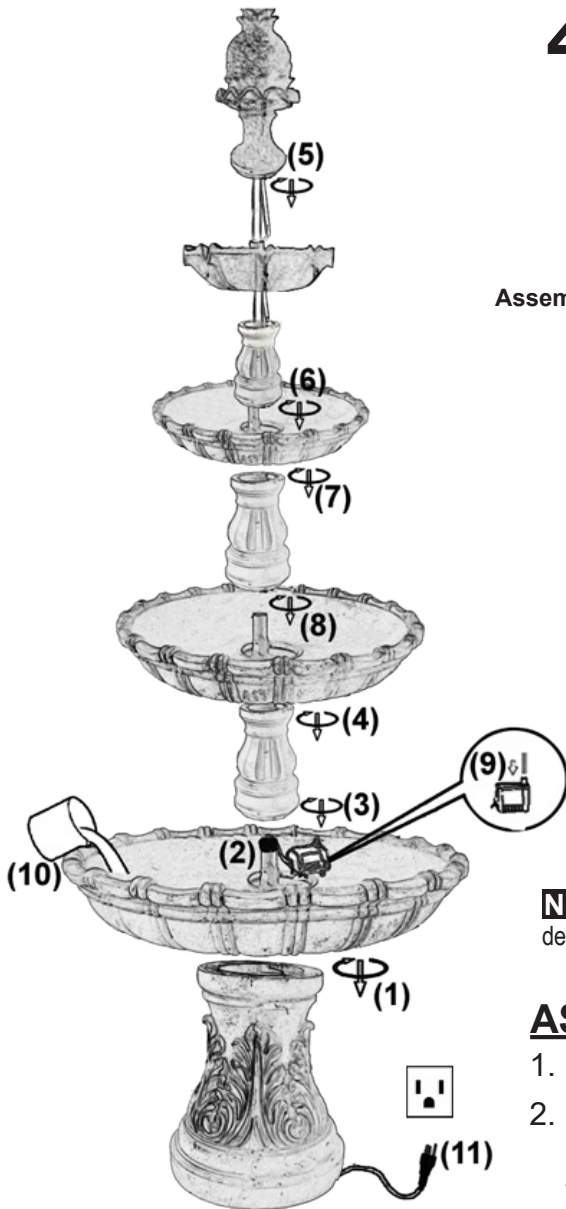

PARTS	QTY.
Fountain Topper	1
Top Tier	1
Small Column	1
Second Tier	1
Middle Column	1
Third Tier	1
Bottom Column	1
Basin Tier	1
Pedestal	1
Electric Submersible Pump	1
EVA Stopple	1
Pump Access Cover	1



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

Please note, components are shipped in 2 boxes, please carefully check both boxes and all packaging; some parts may be on the exterior sides of the foam packaging.



2-PERSON ASSEMBLY  
RECOMMENDED

**NOTE:** The water tubing is built into the fountain topper. Take care when handling the water tube; detaching the water tube from the fountain will damage the fountain and void the product warranty.

## ASSEMBLY

- Place the Basin Tier onto the Pedestal and twist to lock into place.
- Run the pump power cord through the tube in the Basin Tier and pedestal. With the power cord in the middle of the EVA Stopple, push the stopple into the top of the tube in the Basin Tier. Pull the power cord out through the groove on the bottom of the pedestal.
- Ensuring the pump is touching the bottom of the Basin Tier, Place the Bottom Column onto the Basin Tier and twist to lock into place.
- Place the Third Tier onto the Bottom Column and twist to lock in place.
- Run both of the tubes that are attached to the Fountain Topper through the Top Tier, making sure the tubes do not kink. Twist the topper onto the Top Tier to lock the pieces together.
- Run both tubes through the Small Column and twist onto the Top Tier to lock into place. Continue running the tubes through the Second Tier and twist to lock in place.
- Feed both tubes through the Middle Column. Twist the middle column onto the Second Tier to lock in place.

**NOTE:** The smaller tube is designed to hang freely (unattached) inside the fountain, within this section of the fountain.

8. Ensuring the large water tube remains straight, place the assembled top components onto the Third Tier and twist to lock into place.
9. From the pump access panel in the Bottom Column, locate the water tube and firmly attach it to the Electric Submersible Pump. Slide the Pump Access Cover over the opening in the Basin Tier.
10. Fill the fountain with enough water to keep the pump fully submerged during operation, approximately 28 gallons. **NOTE:** As water pumps up from the basin, it will fill the upper tiers. Fill the tiers with water before using the pump.
11. Plug the power cord into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow. You may need to add more water as the pump begins to circulate water through the fountain.

## **IMPORTANT INFORMATION**

- For outdoor use only.
- Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required, avoid heavily chlorinated water as it may damage the fountain or pump.
- Periodically change the water to keep the fountain and pump clean. Remove scale and buildup regularly.
  - DO NOT use harmful additives such as bleach, chlorine, etc.
  - DO NOT use anything abrasive to scrub the fountain.
  - DO NOT use a pressure washer or abrasive materials to wash the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, the fountain cracking, and/or permanent pump damage.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## **TROUBLESHOOTING**

- Ensure that the pump is fully submerged and add water if necessary.
- If water is not flowing within several moments of the fountain being plugged in, the pump may have trapped air which can prevent water from circulating properly. Simply unplug the power supply for a few moments and plug it back in. Also check the pump and tubing for obstructions.
- If water is not flowing or water is splashing, check the flow control on the body of the pump; it may need to be adjusted to achieve the desired flow rate.
- If water is not flowing evenly, ensure the fountain is on a smooth, level surface. Add thin, plastic shims (not included) between tiers to level out water flow.
- Soft surfaces may cause the fountain to become unbalanced. A large stepping stone or paving stone (not included) is recommended to help ensure the fountain remains evenly balanced.
- Make sure the adapter cable is fully connected to the pump power cable.
- Make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

*If you are still experiencing issues, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information available to help expedite response time.*

## **WARNING!**

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**