







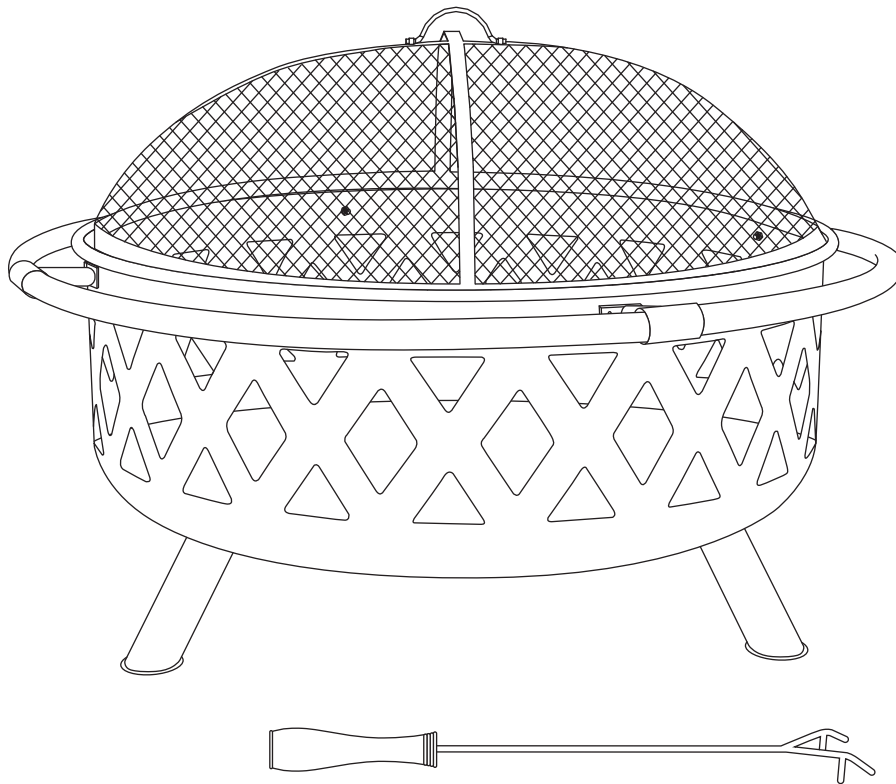

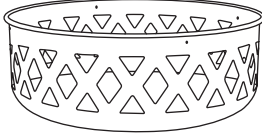

# BLACK CROSSWEAVE OUTDOOR FIRE PIT NB-610037BLK

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.  
**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**

 
 


Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PARTS		QTY.
A		Fire Bowl	1
B		Leg	3
C		Safety Ring	4
D		Spark Screen	1
E		Poker/Screen Lifter	1
F		Cover	1
1		M6x25mm Bolt	4
2		M6x10mm Bolt	13
3		Nut	17

## ! HELPFUL HINTS !

Read this manual fully and assemble soon after purchase.  
Ensure all parts are accounted for and familiarize yourself with the assembly before beginning.  
Carefully read all care, maintenance, and safety information before using this product.

TOOLS REQUIRED (not included)	
	Phillips Screwdriver
	10mm Wrench

## ! WARNING !

**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

## ! WARNING:



Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

# ASSEMBLY

**Review all steps and understand assembly before beginning.**  
**Do not fully tighten hardware until instructed to do so.**

## STEP 1

- A: 1
- B: 3
- 2: 9
- 3: 9

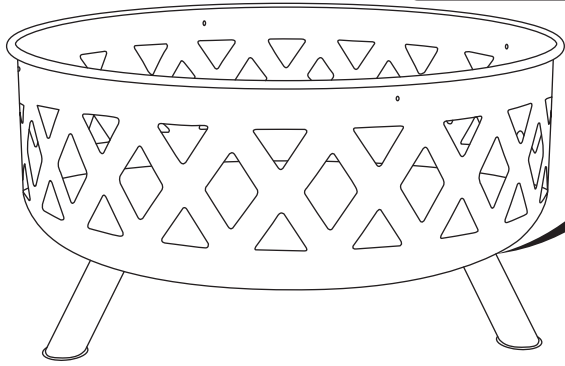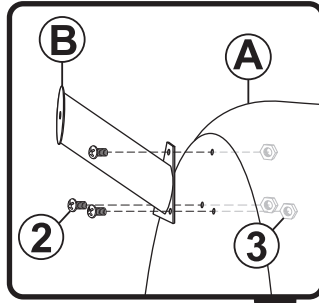


Ensuring the flat edge of the leg is facing outward, align Leg (B) with the bottom of Fire Bowl (A) and loosely fasten using three M6x12mm Bolts (2) and M6 Nuts (3).

Repeat to attach the remaining two legs.

Fully tighten hardware on all legs.

## STEP 2

- C: 4
- 2: 4

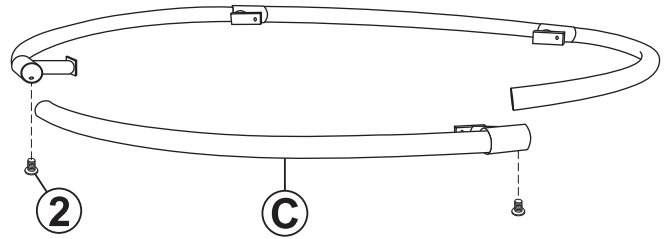

Align the mounting holes on the four Safety Rings (C) and loosely secure using four M6x12mm Bolts (2).


**Do not fully tighten bolts until after Step 3 is complete!**

## STEP 3

- 1: 4
- 3: 4



Assistance is recommended for this step.

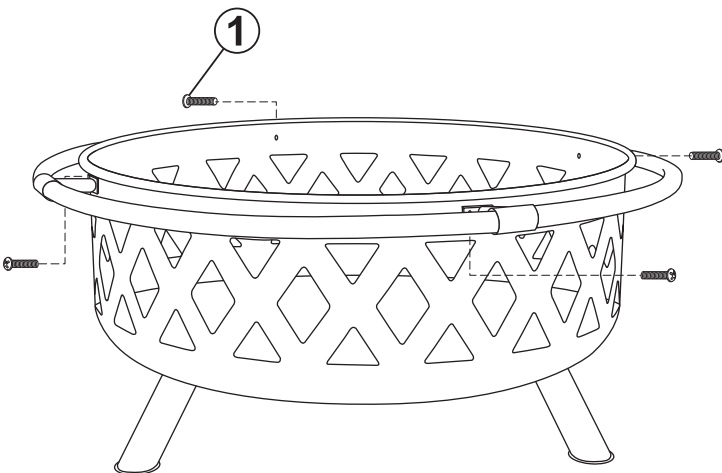


Carefully guide the assembled ring over the fire bowl and align the safety ring brackets with the mounting holes in the fire bowl. Then, loosely fasten the ring to the bowl using four M6x12mm Bolts (1) and M6 Nuts (3).

**Do not fully tighten hardware until after all bolts have been installed.**

## STEP 4

- D: 4

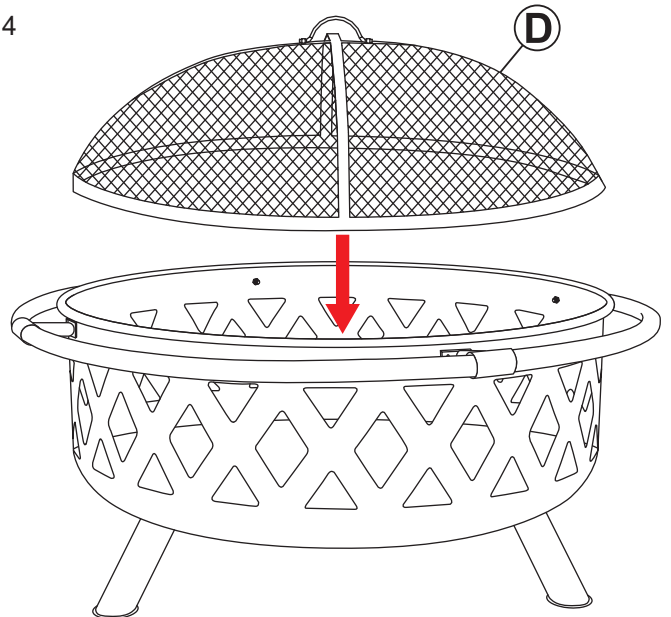

Fully tighten all hardware.

Place Spark Screen (D) onto the assembled unit.

# CARE & MAINTENANCE

**SAFE USE:** The screen will become extremely hot while in use. Always use the poker/lifter tool or heat-resistant gloves when handling the screen; if using gloves, ensure they are designed for handling hot metal.

**EXPOSURE & MAINTENANCE:** Long-term exposure to high-intensity heat can cause the mesh screen to warp and cause the high-temperature paint to flake or burn off the screen and fire bowl. If the paint burns off and steel is exposed to moisture, it will rust. As with any outdoor steel product, periodic maintenance is required to maintain integrity and appearance. Remove rust and refinish with a paint that is suitable for high-temperature surfaces; follow the paint manufacturer's instructions and ensure the paint is completely dry before using the screen again.

**CLEANING:** All fire pits must be cleaned and inspected periodically. Cleaning out ashes between each use is recommended. Do not allow ash to accumulate in the bottom of the pit. Before cleaning, make sure the metal is completely cool. Never drop your fire pit, as any breakage could cause permanent damage.

**AVOID ACCELERANTS:** Never use accelerants to start a fire; this is dangerous and can damage your fire pit.

**AVOID PLASTIC:** Never use any plastic materials in or nearby a fire pit. Plastic residue is very difficult to remove. Additionally, the emissions from burning plastic are toxic.

**USE ON A SAFE SURFACE:** Always use fire pits on a smooth, non-combustible surface; do not use them on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Also, do not use fire pits near combustible structures like vinyl or wood siding.

**COVER AND STORE:** Ensure the fire pit is completely cool before covering. Ashes can remain hot long after a fire dies down. We highly recommend cleaning the fire pit before covering it. Do not allow the fire pit to be exposed to water. The manufacturer is not liable for damage resulting from use and/or environmental conditions.

Store in a dry location; this will protect it from the effects of weather elements.

**EXTINGUISH:** Let fires die down gradually, do not use water to put out a fire as this may cause the metal to crack from the sudden drop in temperature.

## SAFETY STATEMENTS & WARNINGS

- For outdoor use only. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from buildings, balconies, or overhangs when in use.
- Only use this fire pit on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures such as wood decks, dry leaves or grass, mulch, vinyl or wood siding, etc.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene, as this may cause serious injury or product damage.
- The fire pit becomes very hot when in use. Use the lid lifter to handle the hot screen. Let the unit completely cool before cleaning or moving.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any fire pit during dry or windy conditions.
- Never leave unit unattended while hot or in use.
- Always supervise children and pets when the fire pit is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. Do not use water to extinguish hot fires or embers as this may cause serious injury and may damage the product.
- Ashes can remain hot for a long time after fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover and the unit.

**Contact the local authorities regarding possible burn restrictions before using this product.**

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.