


## 131502 / 3 Tier fountain Assembly Instruction

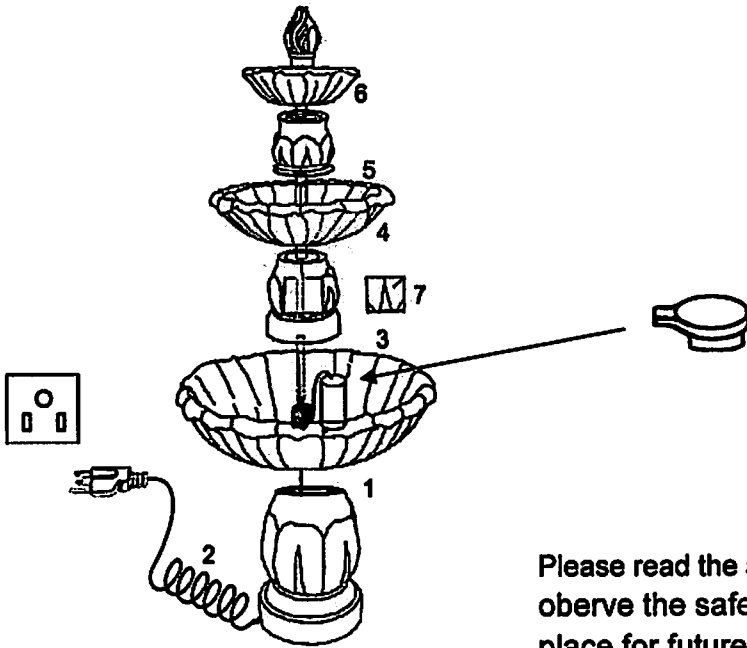

Please read the assembly and operating instructions carefully and observe the safety instructions. Keep these details in a safe place for future reference.

### ASSEMBLY

- \* Assemble components as per the diagram below on a smooth surface to avoid scratching
- \* Go pump cord through stand pipe and pedestal, twist and lock the bowl to the pedestal (1)
- \* Align the cord with groove on base(2)
- \* Connet the tubing to pump, and "Twist and lock" the riser to the bowl(3)
- \* Go tubing up to riser and 2nd bowl and slip fit the 2nd bowl into place (4)
- \* Go tubing up to 2nd riser and slip fit the 2nd riser into place (5)
- \* Connect the tubing to outlet of top feature and set the top into place (6)
- \* The pump flow can be adjusted with the regulator, this is usually found on the inlet of the pump.  
We recommend starting with the regulator full open and then adjusting down if required
- \* Ensure that any wires are not tangled or trapped when assembling the components
- \* Attach the black rubber cap to cover the pipe in the top of the large basin which the plug cord runs through to the base of the pedastal. **IMPORTANT** This will insure that there is no leaking down this pipe.
- \* Fill the feature with sufficient water to fully submerse the pump
- \* The access door (7) can be slid into place.
- \* Connect the plug to you mains outlet. If outdoors the outlet must be waterproof.
- \* If in doubt about any eletrical connections please consult a qualified electrician

### IMPORTANT CARE NOTICE

- \* Fill the fountain with sufficient water to ensure the pump is well submersed.
- \* Clean and top-up the water on a regular basis.
- \* Always shut off the power before cleaning and maintaining the pump.
- \* Never allow the fountain pump to run dry as this will cause damage and invalidate the warranty.
- \* It's no recommended to leave the fountain running constantly. We suggest turning the foutain on/off when required.

## **TROUBLESHOOTING**

If the water pump fails to operate, check the following:

1. If the pump cannot pump water check if the power is correctly connected or check if sufficient water is inside the reservoir.
  - (a) Check the pump and tubing for any form of obstructions.
  - (b) Remove the cover with the pump flow adjuster on it and gently lever off the inner cover to reveal the pump impeller and gently turn the rotor to check that it is not broken or jammed.
2. If the pump runs with slow water circulation check the following:
  - (a) The flow control on the body of the pump.
  - (b) Ensure the pump is completely submerged.
3. If any abnormal sound is heard during the pump operation, turn off the power supply and check the rotor assembly as follows:
  - (a) Remove the pump cover and rotor plate from the front.
  - (b) Grip the impeller and gently take out the rotor assembly from the pump.
  - (c) Rinse the motor assembly and the housing with clean water in order to remove any grit or debris.
  - (d) If any breakage or surface damage is found on the rotor assembly, please contact your supplier, if replacement needed.

We hope you continue to enjoy your water feature for many years. Over time the paint finish will gradually mellow in colour, this is part of the natural weathering process.