



## SIDEWINDER FITMENT GUIDE [SEPTEMBER 2020]

### SKATEPLATE FITS THESE 7 ¼" SIDEWINDER SAW MODELS

#### CORDED

Black & Decker	BDECS200C; BDECS300C; BD2694; CS1250L
Bosch	CS10; GKS190; PKS55-A; PKS55-2A
Bostich	BTE300K
Craftsman	10870; 135.27541; 27311; CMES510
DeWalt	DWE550; DWE560-EXB; DWE560-GB; DWE560-K; DWE560-LX; DWE575; DWE575K; DWE575SB; DWE576K; DWE576K-LX
Dexter Power	NC1300CS
Evolution	R185CCS; R185CCSL; R185CCSL240; R185CCSX; RAGE-B
Hitachi	C7BMR; C7BUR; C7SB2; C7SB3; C7SB3M; C7ST; C7UR
Kobalt	K15CS-06AC
Makita	5007F; 5007FA; 5007MG; 5007MGA; 5007NB; 5007NK; 5740NB; HS6601; HS7600
Milwaukee	6390-20; 6390-21; 6394-21
Porter Cable	PC13CSL; PC13CSLK; PC15CSL; PC15TCS; PC15TCSMK; PCE300; PCE310; PCTSM
Ridgid	R32021; R32022; R32051
SKIL	SPT67FMD-01; SPT67FMD-22; SPT67WE-01; SPT67WL-01; SPT67WM-22; SPT67WMB-01; SPT67WMB-22

#### CORDLESS

DeWalt	DCS570B; DCS570P1; DCS574; DCS575; DCS575B; DCS575T1; DCS575T2; DCS578B; DCS578XI
Hitachi Metabo	C3607DAQ4
Makita	DHS711Z; XSH01Z; XHS06Z; XSH07ZU; XSR01PT; XSR01Z
Milwaukee	48-59-1890PC; 2631-20; 2731-20; 2731-22HD
Ridgid	R8404437SBN; R8652; R8652B; R8653B; R8654; R8654B
Ryobi	CSB124; CSB125; CSB135L; CSB143LZ; CSB144LZK
SKIL	5080-01; 5180-01; 5280-01; 5380-01; 5480-00; 5480-01; 5580-00; 5282-00; 5585-01; 5587-01; 5680-01; HD5687
Stanley Fatmax	FME300K-QS; FME301

### SKATEPLATE DOES NOT FIT THESE 7 ¼" SIDEWINDER SAWS

DeWalt DW364K; DeWalt DW368K  
 Milwaukee M18 Fuel 2732-20 Cordless; Milwaukee M18 Fuel 2732-21HD Cordless  
 Porter Cable 315-1

### SKATEPLATE DOES NOT FIT 6 ½" SIDEWINDER SAWS

**NOTE:** Circular saw manufacturers are consistently releasing new saw models. If you do not see your saw model on this list, it means that it has not yet been tested for SkatePlate fitment. This will only be confirmed once tested.



## WORM DRIVE FITMENT GUIDE [SEPTEMBER 2020]

### SKATEPLATE FITS THESE 7 ¼" WORM DRIVE SAW MODELS

#### CORDED

Bosch	CS41MAG; CSW41; 1677M
DeWalt	DWS535; DWS535B; DWE535T
Hitachi	C7WDM
Makita	5277NB; 5377MG; 5477NB
Milwaukee	6391-21; 6577-20
Ridgid	R3210-1; R3210-2; R3210-4
SKIL	MAG77LT; MAG77LT-72; MAG77LT-75; SHD77; SHD77LA; SHD77M; SHD77M-02; SHD77M-72; SHD77M-73; SHF77-72; SHF77-73; SPT77W-01; SPT77W-22; SPT77WM-22; SPT77WML-01; SPT77WML-22

#### CORDLESS

DeWalt	DCS577; DCS577B; DCS577XI
Makita	DRS780Z
Milwaukee	2830-20; 2830-21HD
SKIL	SPTH77M

### SKATEPLATE DOES NOT FIT THESE 7 ¼" WORM DRIVE SAWS

Ryobi P508 Cordless

### SKATEPLATE FITS THESE 6 ½" WORM DRIVE SAWS

DeWalt	DCS391B Cordless
Milwaukee	2730-20 Cordless

**NOTE:** Circular saw manufacturers are consistently releasing new saw models. If you do not see your saw model on this list, it means that it has not yet been tested for SkatePlate fitment. This will only be confirmed once tested.