



BUMP FEED REPLACEMENT SPOOL

REPLACE THE SPOOL

1. Push in the tabs on the side of the spool retainer and pull to remove.
2. Install the spring, washer, and rewind spool, making sure that the lines are captured in the holding slots on the new spool.

NOTE: Make sure that the ends of the lines extend approximately 6 in. (152 mm).

3. Install the new spool so that the line ends align with the eyelets in the cutting head, and thread the line ends through the eyelets.
4. Pull the lines extending from the cutting head so that the strings release from the slots in the spool.
5. Install the spool retainer by pressing the tabs into the slots and pushing down on the spool until the spool retainer clicks into place.

CAUTION: Always wear proper eye protection. Unplug tool before changing, installing, or removing accessories. Read tool operator's manual for additional safety precautions before using this accessory.

CONTENTS MADE IN CHINA
Distributed by : YAT USA, Inc. 9048 E Bahia Dr, suite 105 Scottsdale, AZ 85260 , USA

