



MASSIMO
ELECTRIC

E11 Balance Bike

Owner's Manual



Always wear a properly fitted helmet and safety gear while riding.



Correct fitting:

Make sure your helmet is properly secured and strapped at all times while riding.



Incorrect fitting:

Ensure your forehead is not exposed and vulnerable to injury.

PLEASE READ THIS MANUAL THOROUGHLY

INSTRUCTIONS

In this manual, you'll be given instructions on safe operation and product usage that all riders should follow.

CAUTION

In this manual the word CAUTION indicates a potentially dangerous situation, and if not avoided could cause potential injury.

WARNING

In this manual the word WARNING indicates a potentially dangerous situation, and if not avoided could cause serious injury or death.


STORAGE NOTE

Avoid prolonged exposure to sunlight or rain. When not in use, store indoors.

INTRODUCTION

This manual is designed to give you the information needed for proper and safe use. Beginners should ride in open areas without obstacles. Please read and understand this manual before riding your bike.

1 Power switch

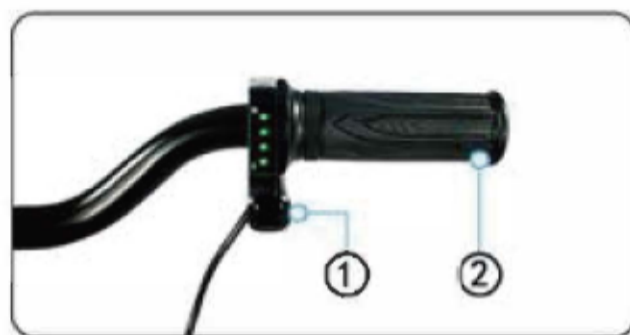

2 Throttle

Used to accelerate the bike.

3 Speed switch

The bike is set in first gear by default. For 2nd Speed Option, press the button.



4 Electric Brake

Pull the brake lever to reduce speeds while riding.



5 Charging port

Fully charge the battery (up to 4 hours) prior to first time use for best operation and longevity.



WARNING!

Please do not ride this bike in poor visibility, do not use for doing stunts or jumps and do not carry passengers.
Doing these actions increase the risk of injury.

SPECIFICATIONS

Model:	MMS-E11
Age:	3 to 8 Years
Net Weight:	19.4lbs. / 8.8kg
Weight Capacity:	100 lbs.
Battery Range:	9 Miles
Maximum Output Power:	150W
Maximum Torque:	6.6 ft. lbs.
Speed:	1st Gear 4.3 mph / 2nd Gear 9 mph
Front and Rear Tires:	12 Inch
Front Wheel:	5 Spoke Plastic Hub
Rear Wheel:	6 Spoke Plastic Hub
Seat Height:	11 in. - 17 in. Adjustable
Brake Type:	Mechanical Disc Brake
Drive Type:	Rear Drive

PRODUCT DETAIL SPECIFICATIONS



Rubber Handlebar Grips

Prevent hands from slipping for safer riding

Comfortable Seat

Cushioned ergonomic design for all day rider comfort.



Adjustable Seat

Adjust height (11" to 17") as needed for riders of various sizes

12" Front & Rear Tires

Superior grip while riding on all riding surfaces



NOTES

DRIVING

Wear bright, reflective clothing when riding at dusk

Do not ride on roads or highways

Do not perform stunts or jumps or carry passengers

BATTERY

Do not operate while battery is charging

Do not store the battery for long periods on a full charge

For best results deplete the battery fully prior to charging

PLEASE STOP USE UNDER THESE CONDITIONS

Any damage occurs to the bike

The battery releases abnormal odor or heat

PROPER STORAGE

Keep the battery out of reach of children and pets. Misuse can lead to serious injury or death.

CARE & MAINTENANCE

Do not use anti-rust agent to lubricate product parts.

If the bike is subjected to water dry it immediately.