



User's Manual for Fireproof Safe

Read all instructions before using this safe.

 
 
 
WARNING

- For security purposes, change the factory default code as soon as possible. Factory default code is 168 and 12345678
- Test registered pin code a few times before closing the safe door.
- Avoid leaving door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Do NOT store combustible materials in this unit.
- The safe can withstand heat up to 1,400°F for 30 minutes. The interior will reach up to 350°F. Avoid storing items such as pearls, digital media, back up tapes, data cartridge, CD's etc. These items sustain heat damage at temperatures much lower than 350°F.
- The safe has a proprietary insulation that has a high moisture content. To avoid humidity damage to contents we recommend placing a desiccant or dehumidifier inside the safe to protect the contents from rust or mildew.
- If you are storing delicate items such as jewelry, photos, etc. we recommend putting them in an air-tight container, prior to placing them in the safe for storage.
- In the event of a fire, we recommend caution when opening the safe. If you feel unsure about opening the safe because of the contents stored, contact your local fire department for assistance.
- Store emergency keys in a secure place; NOT inside of the safe.
- Keep children away from safe; they should not play with or around the safe at anytime. Children at play could accidentally get locked inside the safe or accidentally pull on the safe door causing safe to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death.

NOTE: BARSKA is not responsible for any damage or lost contents in the safe due to moisture.

NOTE: BARSKA is not responsible if the safe is stolen or contents in the safe.

PARTS OF THE SAFE

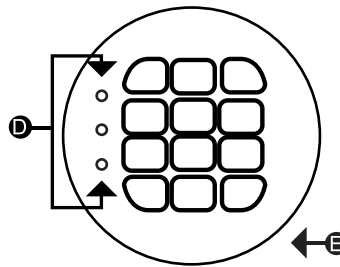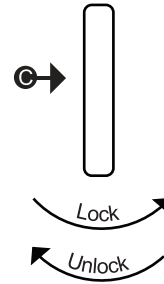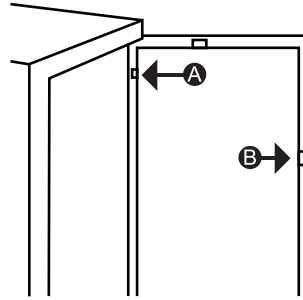


- A. Initialization Button
- B. Bolts
- C. Handle
- D. Indicator Lights
- E. Keypad and Keypad Cover
- turn keypad counter clockwise to expose Battery Compartment and Emergency Key Access

BATTERY & KEY ACCESS

Push down on button located under the key pad and turn keypad cover counter clockwise.

 DO NOT pull on the wires or touch the electronic components.

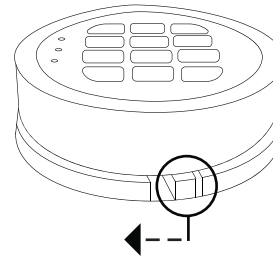

Install Battery

Insert one new 9V alkaline battery into the battery compartment and restore keypad cover.

Key Access

Insert access key into key slot and turn clockwise to open safe.

PIN CODE REGISTRATION

Safe retains 2 pin codes

1st Safe Default Pin Code : 168

2nd Safe Default Pin Code : 12345678

Changing First Pin Code

1. Press initialization button located on the inside of the safe, lock will beep twice and yellow indicator light will be lit.
2. Enter desired Pin Code (1-8 Digits) then press “*” button. 2 short beeps will be heard and yellow indicator light will disappear.
3. With door open turn handle counter clockwise to extend the bolts. Enter registered pin code and press “#” safe should unlock. Turn handle clockwise and retract bolts; registration is complete.

Note: If safe does not unlock then pin code registration was unsuccessful. Please start over with Pin Code Registration.

Changing Second Pin Code

1. Press “00” on the keypad, then press the initialization button located on the inside of the safe, lock will beep twice and yellow indicator light will be lit.
2. Enter second desired Pin Code (1-8 Digits) then press “*” button. 2 short beeps will be heard and yellow indicator light will disappear.
3. With door open turn handle counter clockwise to extend the bolts. Enter registered pin code and press “#” safe should unlock. Turn handle clockwise and retract bolts; registration is complete.

Note: If safe does not unlock then pin code registration was unsuccessful. Please start over with Pin Code Registration.

OPENING AND CLOSING SAFE WITH PIN CODE

WARNING: Safe will lock user out for 15 minutes after 3 consecutive incorrect password attempts. Leave Batteries in the safe and wait 15 min for safe functions to return. Batteries MUST REMAIN in safe.

Open

1. On the key pad enter in either of the registered Pin Codes and press and release “ # ” to confirm.
2. Turn the handle to the unlocked position and pull safe door open.

Close

Close the safe door and turn the handle to the locked position.

LOW BATTERY WARNING

If red indicator light flashes while accessing and using the safe, this indicates that the batteries are low, please replace battery as soon as possible.

FLOOR MOUNTING INSTRUCTIONS

The safe may be mounted to the floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

- Barska recommends that this safe be anchored to the floor.
- Your safe must be shimmed level to assure proper lock functions and to keep the door from swinging open too quickly or closing by itself.
- To avoid rust on the safe, never set the safe directly on a cement floor. We recommend a spacer be placed between the safe and the cement.
- Exposure to chemicals or other adverse environments may cause the warranty to become invalid.
- The safe is designed to support itself when the doors is opened. However caution should be used to avoid pulling it over. To maximize security and stability, bolting the safe to the floor is recommended.
- This safe comes with 4 pre-drilled holes measuring 3/8” diameter, located at the bottom of the safe.

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

CARE AND MAINTENANCE

- Your safe is built to last. However, please understand that the locking mechanism has some precision parts. If you experience ANY difficult opening or closing your safe, **DO NOT FORCE THE HANDLE.** If the handle is forced or **ABUSED**, it may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience for both the owner and Barska and may lead to claim denials.
- Keep liquids away from the keypad. Spills on the keypad will cause damage and possibly electric shock.
- If necessary use a damp cloth to clean the safe. **DO NOT** use chemicals or cleaning agents.
- Secure safe in a proper area to prevent it from falling and causing damage or injury.
- The mechanism inside the door and the hinges are permanently lubricated, this needing no maintenance. Occasionally it may be necessary to lubricate the door bolts. To do so, extend the door bolts completely with the door open. Wipe a small amount of oil around each bolt.
- **DO NOT** over stuff the contents of the safe, it can damage the motor mechanism or the contents.
- **DO NOT** disassemble the product. For all repairs and maintenance, contact BARSKA Customer Service.



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge **MUST** be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767