





User's Manual For Keypad Safe

Read all instructions before using this safe.

WARNING

- New safe is in factory default mode. Factory Pin Code is "159"
- Follow manual to set and test your personal pin code.
- Replace the cap on the Initialization Button after Pin Code Registration
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Test Emergency Keys and store them in a secure place, NOT inside of the safe.
- To maximize security and performance of the safe, test pin code every 6 months.

PARTS OF THE SAFE

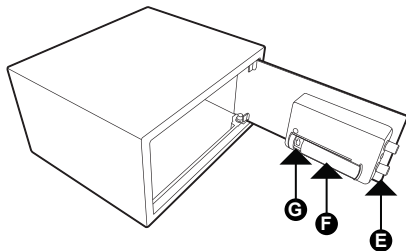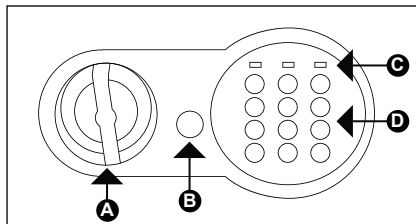

Inside of Safe Door
Actual model may vary

- A. Knob
- B. Emergency Key Access
- C. Indicator Lights
- D. Key Pad

- E. Bolts
- F. Battery Compartment
- G. Initialization Button

OPEN SAFE WITH EMERGENCY KEY

1. Remove round cap, and insert Emergency Key.
2. Turn Emergency Key counter clockwise and turn the Door Knob clockwise to open the safe.

INSTALL BATTERIES

1. Remove battery compartment cover.
2. Insert 4 AA batteries and restore battery cover.

Note: Do not mix old and new batteries

PIN CODE REGISTRATION

Safe retains 1 pin code
Factory default pin code is: "159"

1. Initialization Button is located inside of battery compartment. Please pull out the battery compartment cover until you see the button. Then press and release the initialization button. Indicator light under proceed should light up.
2. Enter desired 3-8 digit Pin Code and press "#"
key. Indicator light under proceed should disappear. Replace cap on the initialization button.

TEST REGISTERED PIN CODE

1. With safe door open, extend the bolts by turning the door knob counterclockwise.
2. Enter Registered Pin Code and press "*" key. Turn door knob clockwise.

Successful Registration

If you were able to turn the door knob with your registered pin code then registration was successful.

Unsuccessful Registration

If you were NOT able to turn the door knob with your registered pin code then registration was unsuccessful. Please follow Pin Code Registration again to register your desired pin code.

OPEN / CLOSE DOOR

Open

Enter registered Pin Code and press "*" button. Turn handle clockwise and open the door.

Close

Door: Close the door and turn handle counterclockwise.

Note: If 3 wrong Pin Codes are entered safe will activate alarm for 20 seconds and safe will be inoperable. Another 3 continuous wrong entries and alarm will activate for 5 min and safe will be inoperable.

SOUND OPTION

Sound On

Press "*66#"

Sound Off

Press "*633#"

Note: Door alarm will Not sound in Silent Mode.

LOW BATTERY WARNING

When safe is low on battery, low battery indicator light will light up. Follow steps under Install Batteries to install batteries.

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

Wall Mounting

Do not mount the safe without anchoring to the wall

- Find the studs in the wall, at your desired location.
Most studs are 16 inches or 24 inches apart
- Check the wall for concealed wires or pipes
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.



1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767