
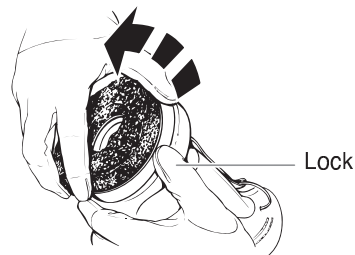


## Changing the disc

The disc on the Paint Eater™ will wear out over time and will need to be changed. You can find new discs at the original retailer where you purchased the Paint Eater™, or by calling customer service at 1-800-727-4023 and ordering replacement discs (part number 0513041).

To change discs, follow the instructions below.

1. Make sure the unit is turned OFF (O) and unplugged. Press the disc lock on the bottom of the unit and unscrew the disc by turning it counterclockwise.
2. While pressing the disc lock on the bottom of the unit, thread new disc onto unit by turning it clockwise and tightening by hand.

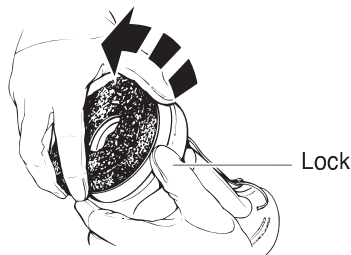

## Inspection and Cleaning



**Make sure the Paint Eater™ is turned OFF (O) and unplugged before performing any inspection or cleaning.**

Before using, inspect the general condition of the Paint Eater™. Check for loose screws, a cracked, broken, or worn disc, a damaged power cord or any other condition that could affect the safe operation of the Paint Eater™. If the Paint Eater™ makes an abnormal noise or vibration, take it to an authorized service center for repair. **Do not use damaged equipment.**

**IMPORTANT: Use only a clean cloth and mild detergent to clean the body of the Paint Eater™. Do not use solvents or immerse the Paint Eater™ into any liquid.**