



Purchase Date: ___ / ___ / ___ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>



TEAK FOLDING CHAIR JVA-292

Save this manual for future reference.

! IMPORTANT: When the chair is folded open for use, ensure the metal pin on the right side of the chair is fully inserted through the leg and into the back of the seat before sitting on the chair.

Care & Maintenance

Use this guide to help easily maintain and care for your teak furniture.

Teak wood has a natural resistance to mold and rot; however, unsightly mildew can still form on the surface of the wood if not cared for.

Regular cleanings will help prevent discoloration on both treated and untreated wood.

SAFE USE: Follow all safety statements and warnings. Only use on a flat, level surface. Never stand on the chair.

COVER: Covering outdoor furniture with a breathable cover helps protect it from the harmful effects of sunlight, dust build-up and collecting debris.

WINTER CARE & STORAGE: Protect wood furniture from inclement weather, especially ice and snow. Move to a dry, indoor location. Covering while in storage will help prevent dust build-up.

CLEANING: Regular cleaning of teak furniture will help prevent mildew build-up and potential discoloration.

Wet the furniture with clean water. Mix 1 cup of vinegar with 1 gallon of water and use a soft plastic brush to gently scrub the furniture. Never use metal brushes as they can damage the wood surface.

Thoroughly rinse with clean water. Place the furniture in a warm, shaded area to dry; do not allow it to dry in direct sunlight. Allow at least 24 hours of dry-time before using or attempting to clean it again. Some hard-to-clean stains may require a store-bought teak cleaner. When cleaning your teak, always start with a mild cleaning solution. Carefully follow the manufacturer instructions of any store-bought cleaner.

MAINTENANCE: If left untreated, the wood may weather. To maintain the appearance, apply a suitable penetrating wood oil (not included) at least once per year or when the wood looks particularly dry. Before application, clean the unit and store it in a dry, warm, indoor location. Allow the unit to dry thoroughly before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE USE OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

! SAFETY STATEMENTS & WARNINGS !

- For residential use only; commercial or industrial use automatically voids the product warranty.
- Do not exceed the weight capacity of the furniture.
- Do not stand or climb on any part of the unit.
- Do not put hot items on or near furniture.
- Keep furniture a safe distance from heat sources such as fire pits, patio heaters, and grills.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

