









WORX®






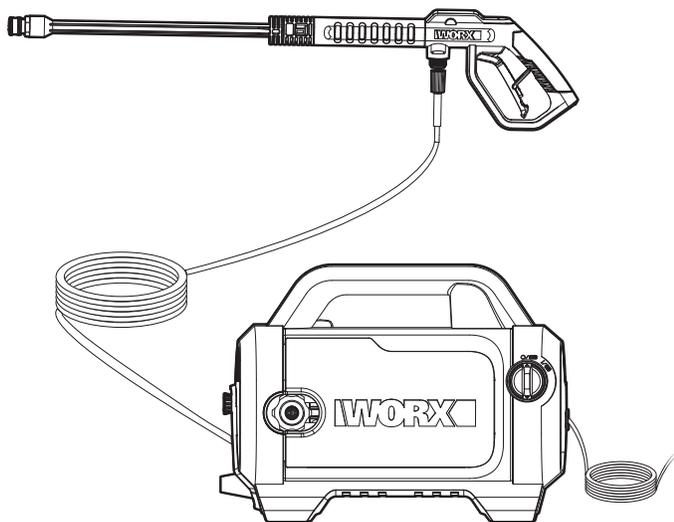








Electric Pressure Washer	EN	P02
Laveuse à pression électrique	F	P12
Lavadora a presión eléctrica	ES	P18

WG602

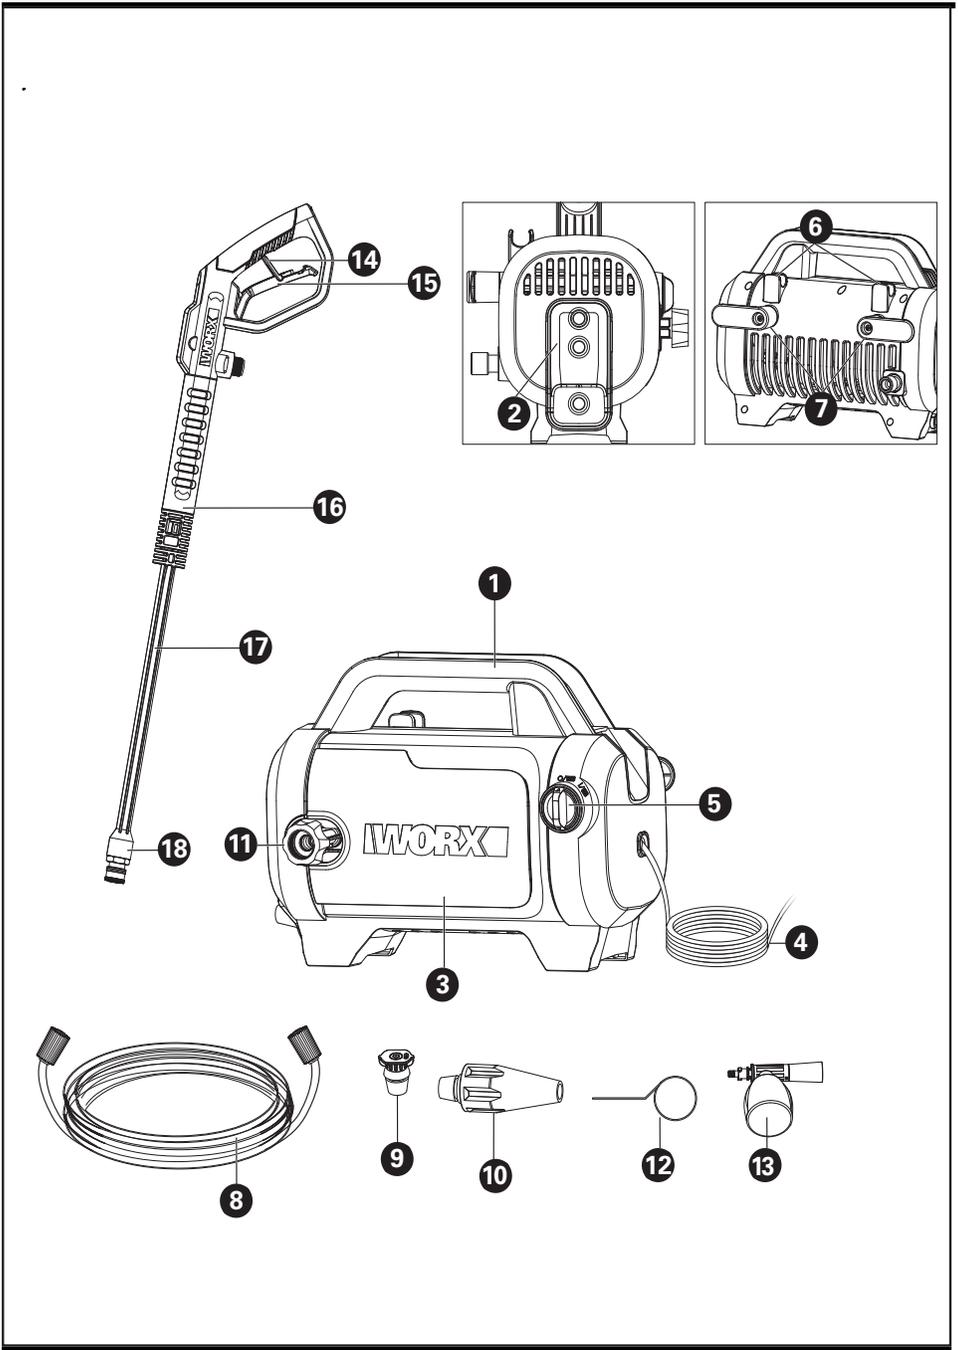

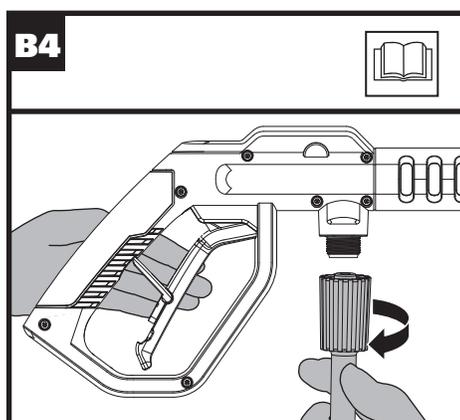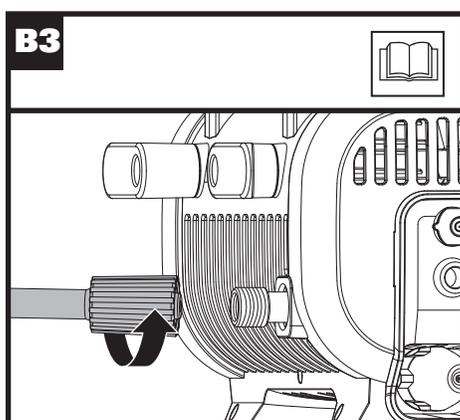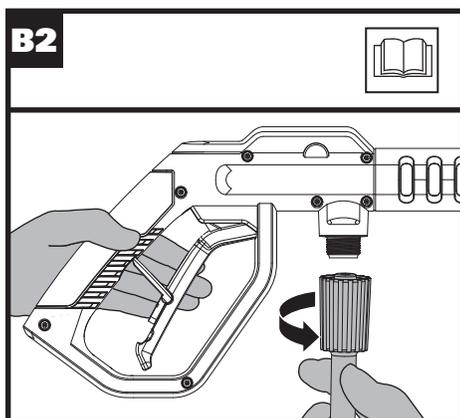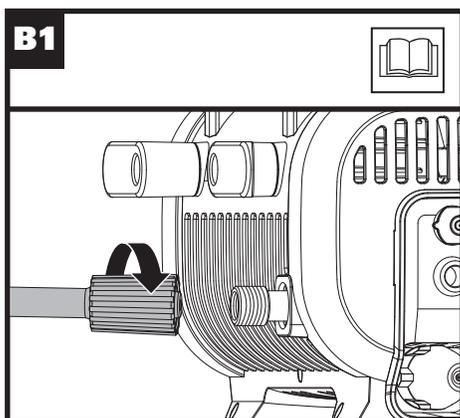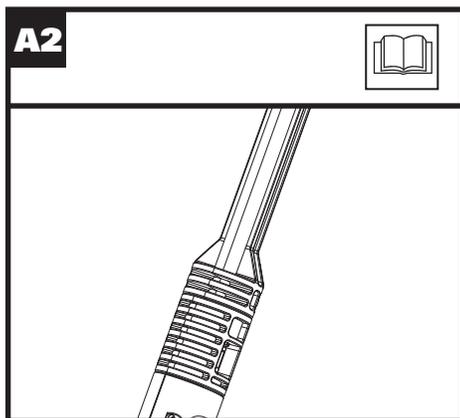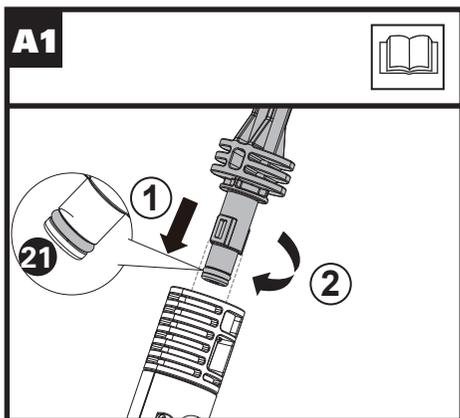

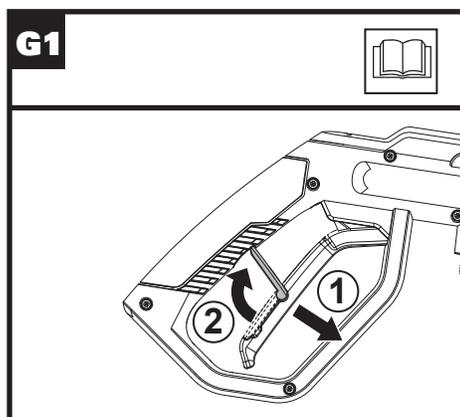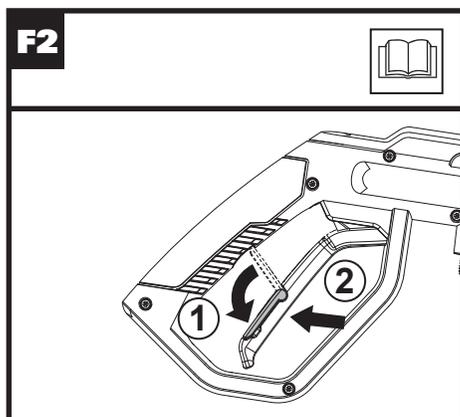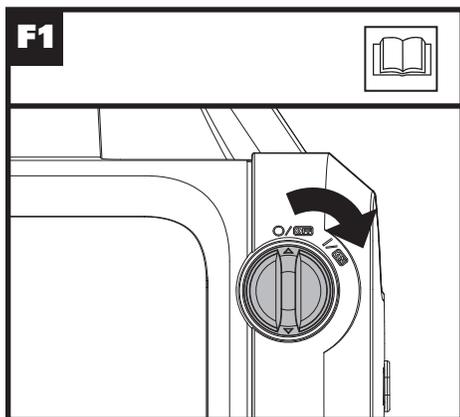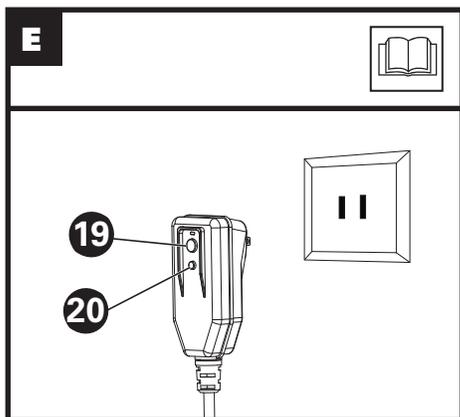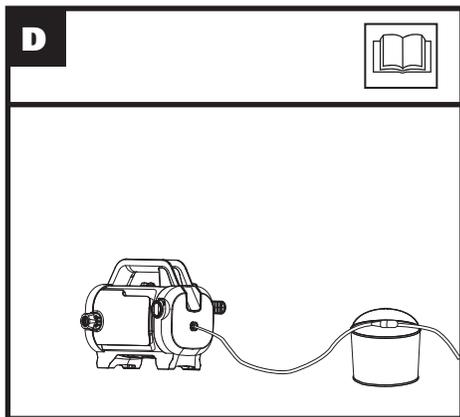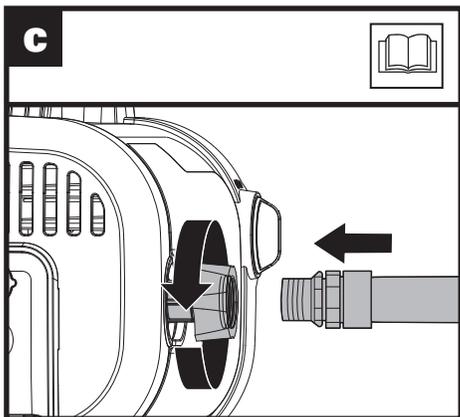


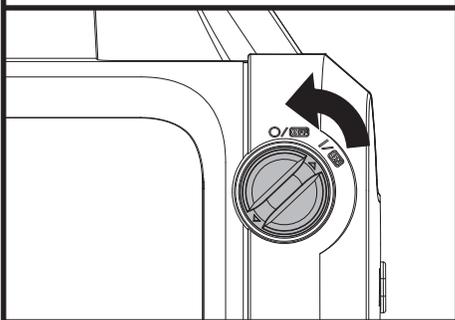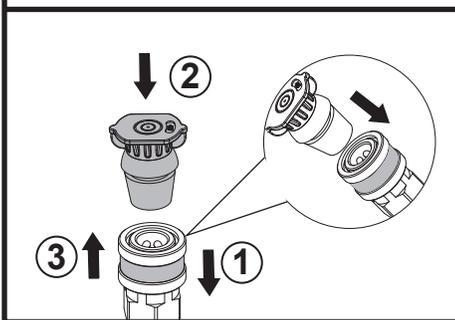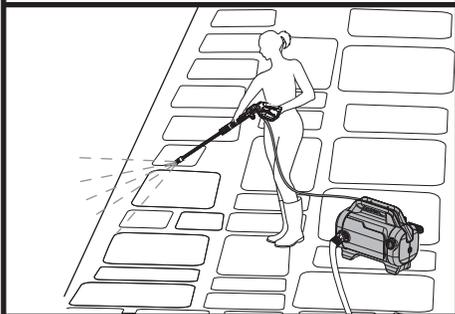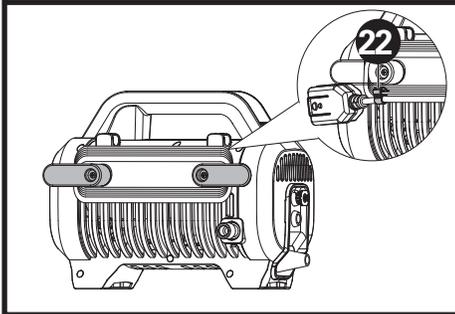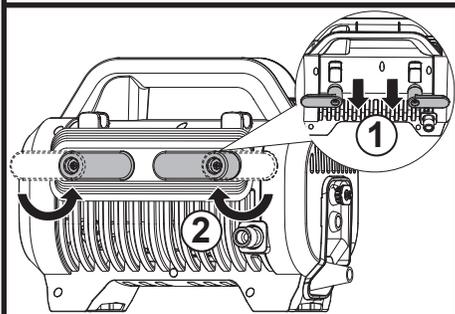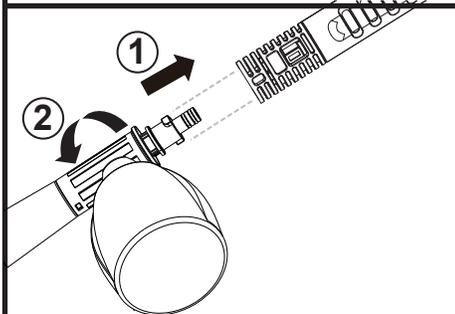G2**H****I****J1****J2****K**

L



M

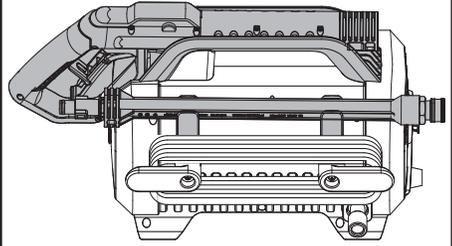

GENERAL SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS



WARNING – When using this product basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when a product is used near children.
3. Know how to stop the product and bleed pressures quickly. Be thoroughly familiar with the controls.
4. Stay alert – watch what you are doing.
5. Do not operate the product when fatigued or under the influence of alcohol or drugs.
6. Keep operating area clear of all persons.
7. Do not overreach or stand on unstable support. Keep good footing and balance at all times.
8. Follow the maintenance instructions specified in the manual.
9. This Product Is Provided With A Ground Fault Circuit Interrupter Built Into The Power Cord or Plug. If Replacement Of The Ground Fault Circuit Interrupter Or Cord Is Needed, Use Only Identical Replacement Parts.
10.  **WARNING** – Risk of eye injury. Spray can splash back or propel objects. Always wear properly rated eye protection such as safety goggles or face shield while spraying. (Safety glasses do not provide full protection.)

SAVE THESE INSTRUCTIONS

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

This pressure washer is provided with a ground-fault circuit-interrupter (GFCI) built into the plug or the power-supply cord. This device provides additional protection from the risk of electric shock. Should replacement of the ground-fault circuit-interrupter or cord become necessary, use only identical replacement parts.

SERVICING OF A DOUBLE-INSULATED APPLIANCE

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.

EXTENSION CORDS



WARNING: Inadequate extension cords can be dangerous.

If the appliance cord is equipped with a GFCI, do not use extension cords. If the appliance cord is not equipped with a GFCI, the appliance and any extension cord used should be connected only to a GFCI-protected power source.

1. Use only extension cords that have grounding-type plugs and female cord connectors that accept the plug from the product.
 2. Use only extension cords that are intended for outdoor use. These extension cords are identified on the packaging or on the cord by a marking "Acceptable for use with outdoor appliances; store indoors while not in use."
 3. Use only extension cords having an electrical rating not less than the rating of the product.
 4. Do not use a damaged extension cord. Examine extension cord before using and replace if damaged.
 5. Do not abuse extension cord and do not yank on a cord to disconnect.
 6. Keep cord away from heat and sharp edges.
 7. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.
- WARNING** – To reduce the risk of electrocution, use only a GFCI-protected extension cord or plug into GFCI outlet. Keep all connections dry and off the ground. Do not touch plug with wet hands.

ADDITIONAL SAFETY WARNINGS

1. The electric supply connection shall be made by a qualified electrician and comply with IEC 60364-1. It is recommended that the electric supply to this appliance should include either a residual current device that will interrupt the supply if the leakage current to earth exceeds 30 mA for 30 ms or a device that will prove the earth circuit.
2. **WARNING:** This appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the appliance.
3. **WARNING:** Do not use the appliance within range of persons unless they wear protective clothing.
4. **WARNING:** High pressure jets can be dangerous if sub-

ject to misuse. The jet must not be directed at persons, live electrical equipment or the appliance itself.

5. Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
6. Disconnect from the electrical power supply before carrying out user maintenance.
7. High pressure cleaners shall not be used by children or untrained personnel.
8. To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
9. WARNING: High pressure hoses, fittings and couplings are important for the safety of the appliance. Use only hoses, fittings and couplings recommended by the manufacturer.
10. Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.
11. Water that has flown through backflow preventers is considered to be non-potable.

SYMBOLS

	Read the manual
	Before any work on the machine itself, pull the mains plug from the socket outlet.
	Warning
	Lock
	Unlock
	Warning: Do not direct the jet at persons, animals and electrical equipment.
	Double insulation

COMPONENT LIST

- | | |
|------------|-------------------------------------|
| 1. | CARRY HANDLE(WAND HOLDER) |
| 2. | ONBOARD NOZZLE STORAGE |
| 3. | WATER PUMP |
| 4. | POWER CORD |
| 5. | ON /OFF SWITCH |
| 6. | LANCE HOLDER |
| 7. | POWER CORD HOLDER |
| 8. | HIGH PRESSURE HOSE |
| 9. | NOZZLE(40°) |
| 10. | TURBO NOZZLE |
| 11. | WATER INLET ADAPTER |
| 12. | RELOGGING NEEDLE |
| 13. | SOAP BOTTLE* |
| 14. | LOCK-OUT |
| 15. | TRIGGER |
| 16. | WAND |
| 17. | LANCE |
| 18. | NOZZLE COUPLER |
| 19. | RESET BUTTON (SEE FIG. E) |
| 20. | TEST BUTTON (SEE FIG. E) |
| 21. | O-RING (SEE FIG. A1) |
| 22. | POWER CORD CLIP(SEE FIG. J1) |

***Not all the accessories illustrated or described are included in standard delivery.**

TECHNICAL DATA

	WG602
Rated current	13 A
Rated pressure	1700 psi (117 bar)
Rated water flow rate	1.2 gpm
Power cord length	35 ft (10.5 m)
Protection class	□ /II
Machinery weight	16.1 lbs (7.3 kg)

ACCESSORIES

	WG602
40" Nozzle	1
Turbo Nozzle	1
Soap bottle	1
20ft Hose	1
Declogging needle	1

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

INTENDED USE

The electric high pressure washer is intended for residential cleaning projects—from porch to patio, driveways and decks, boats, pavers, bricks, BBQs and more.

ASSEMBLY & OPERATION

ACTION	FIGURE
ASSEMBLY	
Attach the lance to the wand. Note: when attaching, align the two projections on the lance with the grooves on the wand.	See Fig. A1 A2
Screw & Unscrew the high pressure hose Note: Make sure the hose is tightly connected. Note: For convenience of unscrewing the hose, please pull the trigger to drain water from wand when operation is completed and switch is in "O" position.	See Fig. B1,B2,B3,B4
Attach the garden hose Connect one end of the home garden hose (not supplied) to the adapter and another end to waterspout.	See Fig. C
OPERATION	
Extension cord It is not recommended to use the extension cord. If necessary, ensure the plug and extension cord connection is on an elevated surface that does not contact the water area.	See Fig. D
GFCI plug test Press "test", the light will be out. Press "reset", the power regains and the light will illuminate. Note: To keep good operation of GFCI, please implement it once a month.	See Fig. E
START/STOP	

Turn on the water supply tap. Connect the washer to the power supply and turn the switch to "I" position. Then press trigger

See Fig. F1,F2

Note: Before pressing trigger, Push the lock-out down into the trigger.



WARNING: Do not start the machine without connecting and turning on the water supply because it may cause damage to high pressure seals and reduce the service life of pump.

Release the trigger and turn the switch to "O" position. Turn Off the water supply tap

See Fig.G1,G2

Note:When not in use, Push the lock-out up until it clicks into the slot.

Select the right nozzles

Select the suitable nozzle for different cleaning jobs. Nozzle 40°(white) is applicable for cleaning on wooden and other soft objects . Turbo nozzle is applicable for cleaning concrete, bricks and masonry.

See Fig.H



WARNING: Do not change the nozzle pattern when the tool is powered on.

Cleaning

Begin with the nozzle 1-2ft away from the surface and approach with caution until it reaches the desired position for overly close spray may do harm to surface.

See Fig. I



WARNING: Do not connect the machine to water supplies that are dirty, rusty, muddy, or corrosive. (Including window cleaning liquids, plant foods, or fertilizers etc.)

Using the power cord holder

To wind the power cord, turn the holders outwards. To unwind the power cord, pull out the holders and turn them inwards.

See Fig.J1,J2

ATTACHMENT OF ACCESSORIES

Note : Do not attempt to use the washer with no lance or accessories attached.

Soap bottle

Soap bottle provides detergent suds for deeper cleaning of dirt. It is used in conjunction with wand. (See Fig. K)

MAINTENANCE

Remove plug from the socket before carrying out any adjustment, servicing or maintenance.

Inspect the product for damaged or worn parts before each use. Do not operate it if you find damaged or worn parts. Contact your supplier or the manufacturer for replacement parts.

Power cord maintenance

If the electrical cord is damaged, do not attempt to repair yourself; call the Worx solutions center for further assistance.

Pump maintenance

Inspect the pump frequently whether any leaking occurs around the pump seal. If leaking occurs, contact the solutions center for further assistance.

Nozzle maintenance

Remove the nozzle from the lance, then remove any possible obstructions using the included declogging needle (See Fig. L). Then use a garden hose to rinse the nozzle by backwashing



WARNING: Any other servicing should be performed by an authorized service representative.

STORAGE

1. Disconnect the water source. Turn on the pressure washer for a few seconds until the remaining water flows out. Then turn it off quickly.
2. Unplug the power supply. Wind power cord on the tool and use power cord clip to fix. (See Fig.J1)
3. Disconnect the high pressure hose and the garden hose (not supplied), and coil high-pressure hose for storage. Insert the Wand and lance separately into the Wand Holder and lance holder. (See Fig.M)
4. Store in a frost free area with a temperature above 0°C(32°F).

TROUBLESHOOTING

Symptom	Possible causes	Solution
Machine does not start when the switch is in "I" position.	Power cord is not plugged in.	Plug in power cord.
	Socket is defective.	Check or replace plug, socket, fuses.
	GFCI is triggered.	Press reset on GFCI plug.
Machine pressure is not consistent.	Pump is faulty.	Contact service center .
	Air in line.	Remove the nozzle, turn on the machine for a while and install the nozzle back.
	Water inlet adapter is clogged or dirty.	Remove the adapter, rinse it with water and put it back.
The pressure of the pump is not adequate	Water supply is Insufficient.	Open water source completely.
	Water supply is restricted.	Check if the water hose kinks or leaks.
	Diameter of garden hose is too small.	Replace with right garden hose .
	Leak or kink in hose .	Replace hose or untie kinks in hose.
Lance leaks	O-ring needs to be replaced (See Fig. A1) . .	Replace o-ring .If the problem is not solved ,contact service center to buy a new lance.