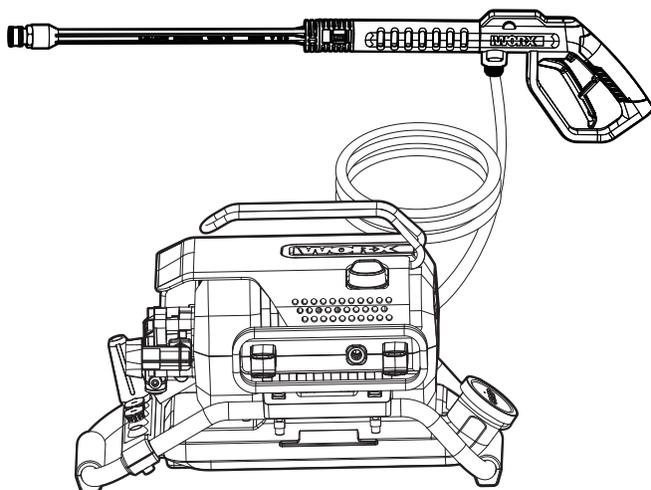


WORX®



Electric Pressure Washer

EN

P02

Laveuse à pression électrique

F

 
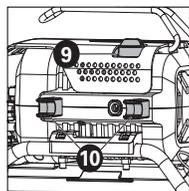
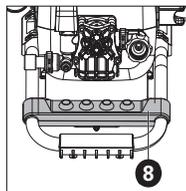
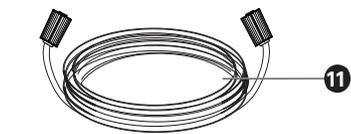
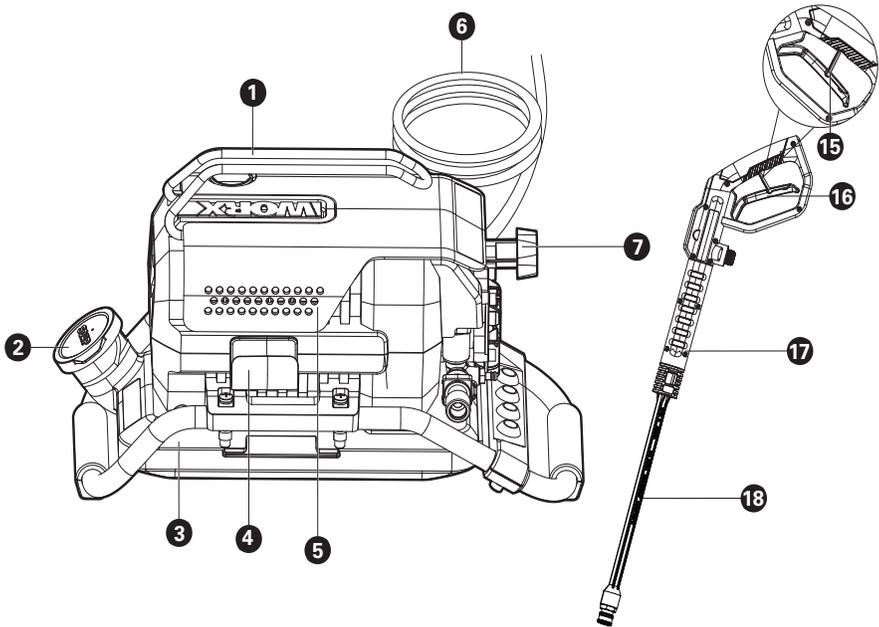
P12

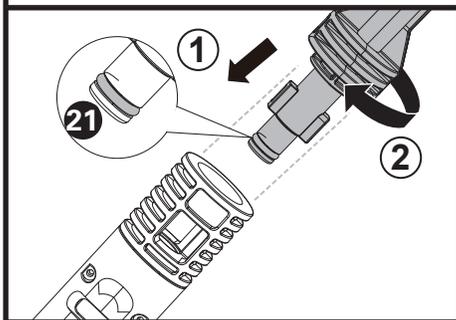
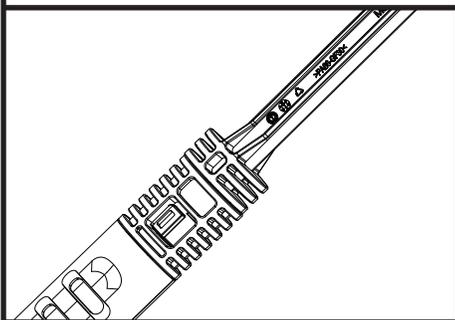
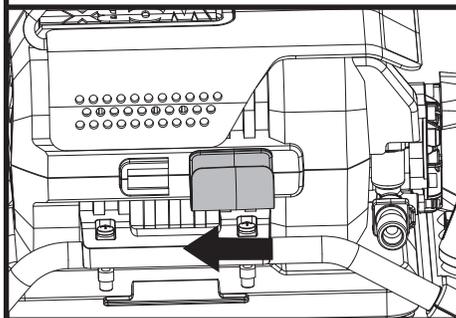
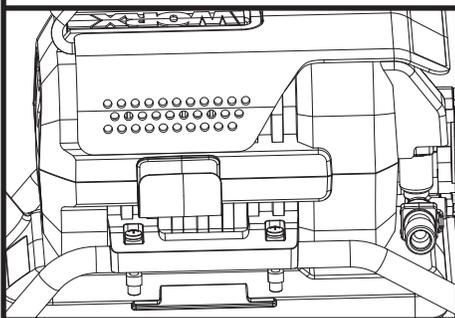
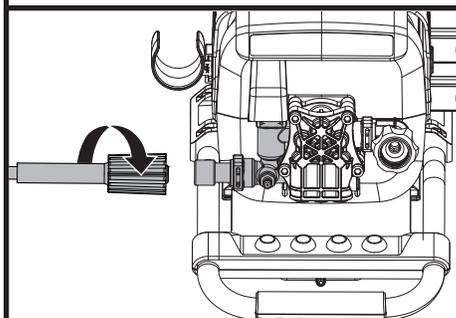
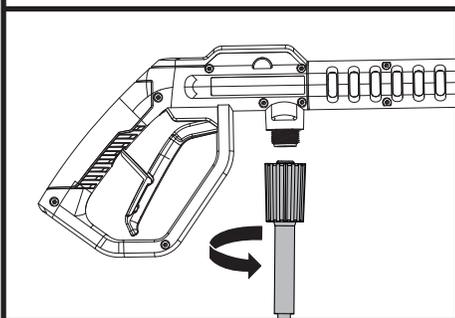
Lavadora a presión eléctrica

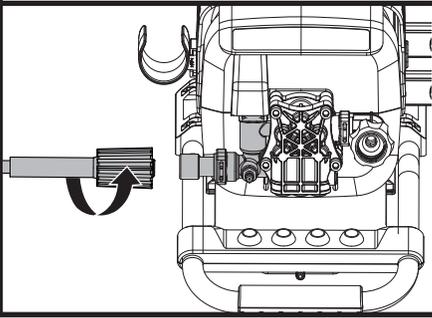
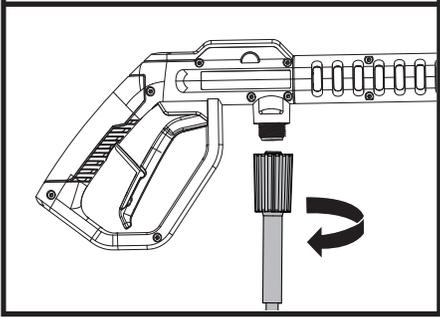
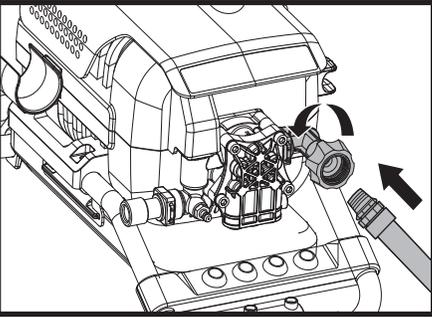
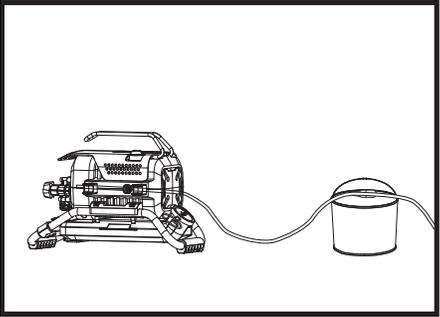
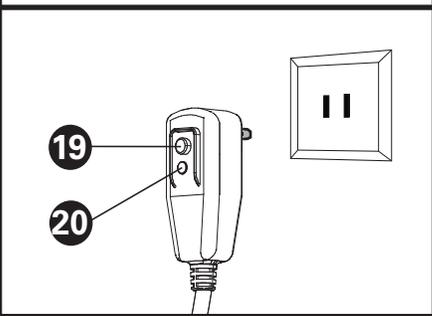
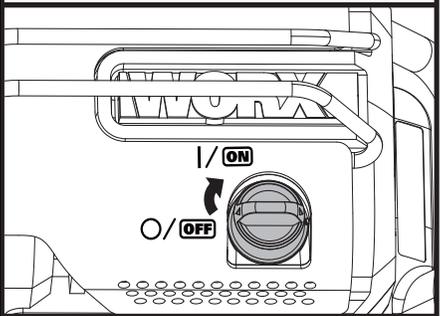
ES

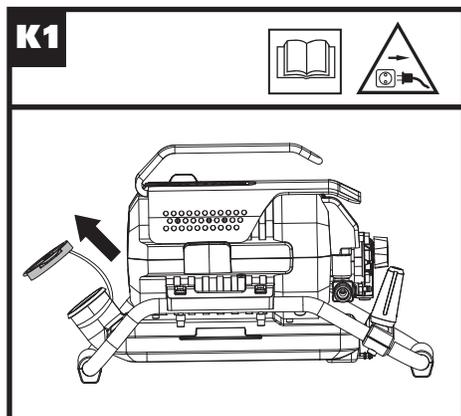
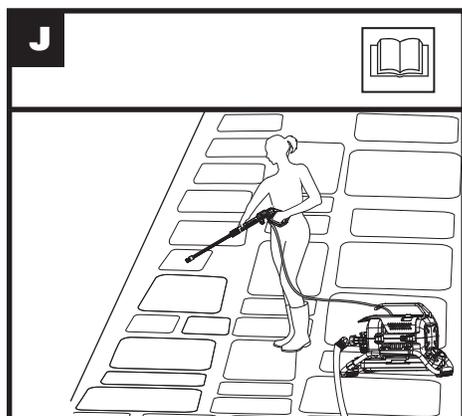
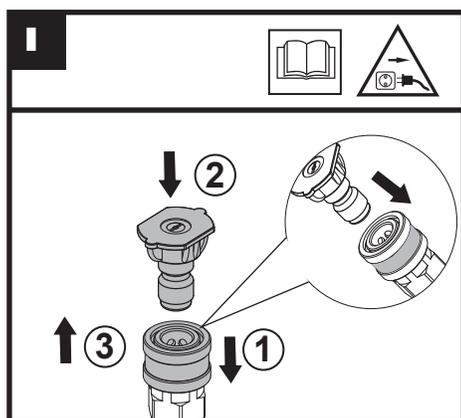
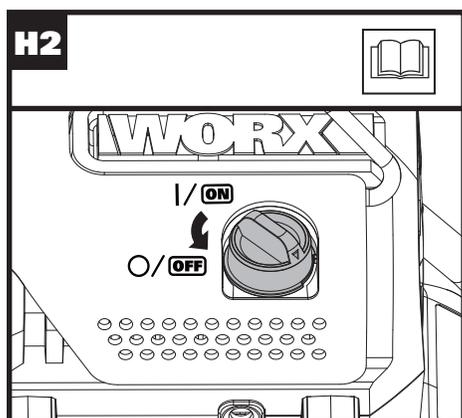
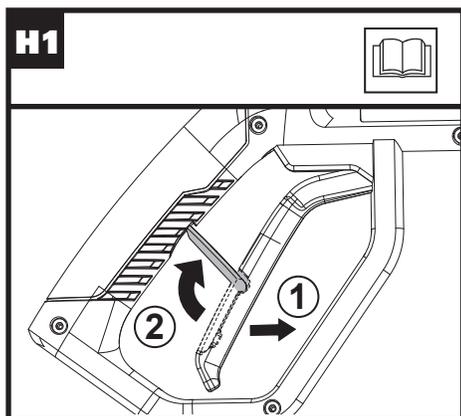
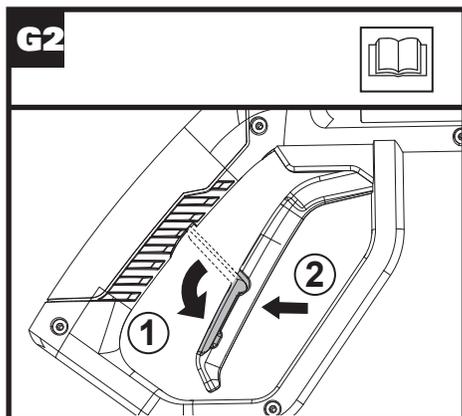
P18

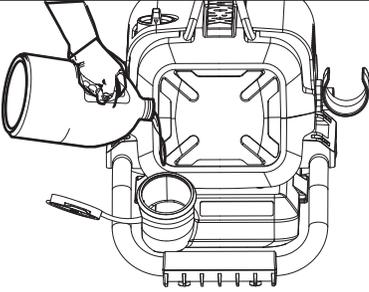
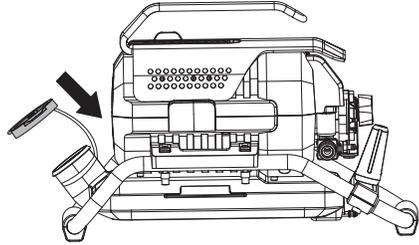
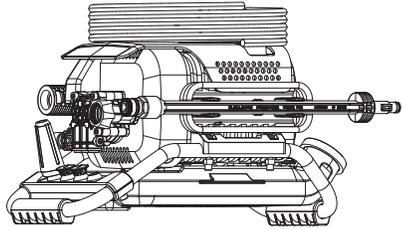
WG605



A1**A2****B1****B2****C1****C2**

C3**C4****D****E****F****G1**



K2**K3****L****M**

GENERAL SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS



WARNING – When using this product basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when a product is used near children.
3. Know how to stop the product and bleed pressures quickly. Be thoroughly familiar with the controls.
4. Stay alert – watch what you are doing.
5. Do not operate the product when fatigued or under the influence of alcohol or drugs.
6. Keep operating area clear of all persons.
7. Do not overreach or stand on unstable support. Keep good footing and balance at all times.
8. Follow the maintenance instructions specified in the manual.
9. This Product Is Provided With A Ground Fault Circuit Interrupter Built Into The Power Cord or Plug. If Replacement Of The Ground Fault Circuit Interrupter Or Cord Is Needed, Use Only Identical Replacement Parts.
10.  **WARNING** – Risk of eye injury. Spray can splash back or propel objects. Always wear properly rated eye protection such as safety goggles or face shield while spraying. (Safety glasses do not provide full protection.)

SAVE THESE INSTRUCTIONS

GROUND FAULT CIRCUIT INTERRUPTER PROTECTION

This pressure washer is provided with a ground-fault circuit-interrupter (GFCI) built into the plug or the power-supply cord. This device provides additional protection from the risk of electric shock. Should replacement of the ground-fault circuit-interrupter or

cord become necessary, use only identical replacement parts.

SERVICING OF A DOUBLE-INSULATED APPLIANCE

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.

EXTENSION CORDS



WARNING: Inadequate extension cords can be dangerous.

If the appliance cord is equipped with a GFCI, do not use extension cords. If the appliance cord is not equipped with a GFCI, the appliance and any extension cord used should be connected only to a GFCI-protected power source.

1. Use only extension cords that have grounding-type plugs and female cord connectors that accept the plug from the product.
 2. Use only extension cords that are intended for outdoor use. These extension cords are identified on the packaging or on the cord by a marking "Acceptable for use with outdoor appliances; store indoors while not in use."
 3. Use only extension cords having an electrical rating not less than the rating of the product.
 4. Do not use a damaged extension cord. Examine extension cord before using and replace if damaged.
 5. Do not abuse extension cord and do not yank on a cord to disconnect.
 6. Keep cord away from heat and sharp edges.
 7. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.
- WARNING** – To reduce the risk of electrocution, use only a GFCI-protected extension cord or plug into GFCI outlet. Keep all connections dry and off the ground. Do not touch plug with wet hands.

ADDITIONAL SAFETY WARNINGS

1. The electric supply connection shall be made by a qualified electrician and comply with IEC 60364-1. It is recommended that the electric supply to this appliance should include either a residual current device that will interrupt the supply if the leakage current to earth exceeds 30 mA for 30 ms or a device that will prove the earth circuit.
2. **WARNING:** This appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the appli-

- ance.
3. **WARNING:** Do not use the appliance within range of persons unless they wear protective clothing.
 4. **WARNING:** High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, live electrical equipment or the appliance itself.
 5. Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
 6. Disconnect from the electrical power supply before carrying out user maintenance.
 7. High pressure cleaners shall not be used by children or untrained personnel.
 8. To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
 9. **WARNING:** High pressure hoses, fittings and couplings are important for the safety of the appliance. Use only hoses, fittings and couplings recommended by the manufacturer.
 10. Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.
 11. Water that has flown through backflow preventers is considered to be non-potable.

CAUTION: This hose contains electrical connections:

- **do not use to collect water;**
- **do not immerse in water;**
- **the hose should be checked regularly and must not be used if damaged.**



Double insulation

COMPONENT LIST

1. **CARRY HANDLE**
2. **SOAP TANK CAP**
3. **SOAP TANK**
4. **WAND HOLDER**
5. **WATER PUMP**
6. **POWER CORD**
7. **WATER INLET ADAPTER**
8. **ONBOARD NOZZLE STORAGE**
9. **ON /OFF SWITCH**
10. **LANCE HOLDER**
11. **HIGH PRESSURE HOSE**
12. **TURBO NOZZLE**
13. **NOZZLE(40°,SOAP)**
14. **RECCLOGGING NEEDLE**
15. **LOCK-OUT**
16. **TRIGGER**
17. **WAND**
18. **LANCE**
19. **RESET BUTTON (SEE FIG. F)**
20. **TEST BUTTON (SEE FIG. F)**
21. **O-RING (SEE FIG. A1)**

Not all the accessories illustrated or described are included in standard delivery.

SYMBOLS

	Read the manual
	Before any work on the machine itself, pull the mains plug from the socket outlet.
	Warning
	Lock
	Unlock
	Warning: Do not direct the jet at persons, animals and electrical equipment.

TECHNICAL DATA

	WG605
Rated Voltage	
Rated current	
Rated pressure	1800 PSI
Permissible pressure	
Maximum inlet pressure	
Maximum rated flow	
Kickback force	
Maximum rated temperature	
Machinery weight	
Protection class	 /II

ACCESSORIES

	WG605
40° Nozzle	1
Soap Nozzle	1
Turbo Nozzle	1
20ft Hose	1
Declogging needle	1

We recommend that you purchase your accessories listed in the above list from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

INTENDED USE

The electric high pressure washer is intended for residential cleaning projects—from porch to patio, driveways and decks, boats, pavers, bricks, BBQs and more.

ASSEMBLY & OPERATION

ACTION	FIGURE
ASSEMBLY	
Attach the lance to the wand. Note: when attaching, align the two projections on the lance with the grooves on the wand.	See Fig. A1 ,A2
Attach the wand holder	See Fig. B1 B2
Screw & Unscrew the high pressure hose Note: Make sure the hose is tightly connected. Note: For convenience of unscrewing the hose, please pull the trigger to drain water from wand when operation is completed and switch is in "O" position.	See Fig. C1,C2,C3,C4
Attach the garden hose Connect one end of the home garden hose (not supplied) to the adapter and another end to waterspout.	See Fig. D
OPERATION	
Extension cord It is not recommended to use the extension cord. If necessary, ensure the plug and extension cord connection is on an elevated surface that does not contact the water area.	See Fig.E
GFCI plug test Press "test", the light will be out. Press "reset", the power regains and the light will illuminate. Note: To keep good operation of GFCI, please implement it once a month.	See Fig. F
START/STOP	

<p>Turn on the water supply tap. Connect the washer to the power supply and turn the switch to "I" position. Then press trigger</p> <p>Note: Before pressing trigger, Push the lock-out up and into the trigger.</p> <p> WARNING: Do not start the machine without connecting and turning on the water supply because it may cause damage to high pressure seals and reduce the service life of pump.</p>	See Fig. G1,G2
<p>Release the trigger and turn the switch to "O" position. Turn Off the water supply tap</p> <p>Note: When not in use, push the lock-out down until it clicks into the slot.</p>	See Fig.H1,H2
<p>Select the right nozzles Select the suitable nozzle for different cleaning jobs. Nozzle 40°(white) is applicable for cleaning on wooden and other soft objects . Turbo nozzle is applicable for cleaning concrete, bricks and masonry. The soap nozzle is applicable for soaping while other nozzles cannot be used to do it.</p> <p> WARNING: Do not change the nozzle pattern when the tool is powered on.</p>	See Fig.I
<p>Cleaning Begin with the nozzle 1-2ft away from the surface and approach with caution until it reaches the desired position for overly close spray may do harm to surface.</p> <p> WARNING: Do not connect the machine to water supplies that are dirty, rusty, muddy, or corrosive. (Including window cleaning liquids, plant foods, or fertilizers etc.)</p>	See Fig. J
<p>Add and use detergent Install the soap nozzle before operation. Note: If necessary, use a funnel (not supplied) to prevent accidental overflows of detergent outside of the tank.</p>	See Fig. K1, K2, K3

MAINTENANCE

Remove plug from the socket before carrying out any adjustment, servicing or maintenance.

Inspect the product for damaged or worn parts before each use. Do not operate it if you find damaged or worn parts. Contact your supplier or the manufacturer for replacement parts.

Power cord maintenance

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

Pump maintenance

Inspect the pump frequently whether any leaking occurs around the pump seal. If leaking occurs, please contact service center for repair.

Nozzle maintenance

Remove the nozzle from the lance, then remove any possible obstructions using the included declogging needle (See Fig. L).Then use a garden hose to rinse the nozzle by backwashing

 **WARNING:** Any other servicing should be performed by an authorized service representative.

STORAGE

1. Disconnect the water source. Turn on the pressure washers for a few seconds until the remaining water flows out. Then turn it off quickly.
2. Unplug the power supply and wind power cord on the lance holder. (See Fig.M)
3. Disconnect the high pressure hose and the garden hose (not supplied) .Then wind high pressure hose on the tool. Insert the Wand and lance separately into the Wand Holder and lance holder. (See Fig. M)
4. Store in a frost free area with a temperature above 0°C(32°F).

TROUBLESHOOTING

Symptom	Possible causes	Solution
Machine does not start when the switch is in "I" position.	Power cord is not plugged in.	Plug in power cord.
	Socket is defective.	Check or replace plug, socket, fuses.
	GFCI is triggered.	Press reset on GFCI plug.
Machine pressure is not consistent.	Pump is faulty.	Contact service center .
	Air in line.	Remove the nozzle, turn on the machine for a while and install the nozzle back.
	Water inlet adapter is clogged or dirty.	Remove the adapter, rinse it with water and put it back.
The pressure of the pump is not adequate	Water supply is Insufficient.	Open water source completely.
	Water supply is restricted.	Check if the water hose kinks or leaks.
	Diameter of garden hose is too small.	Replace with right garden hose .
	Leak or kink in hose .	Replace hose or untie kinks in hose.
No detergent	Wrong nozzle is attached	Attach the soap nozzle
Lance leaks	O-ring needs to be replaced(See Fig. A1) .	Replace o-ring .If the problem is not solved ,contact service center to buy a new lance.