 
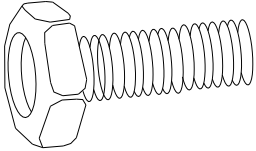
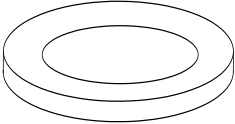
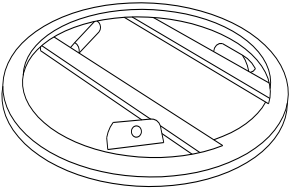

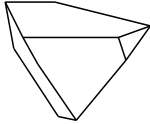


ASSEMBLY INSTRUCTIONS FOR CVFZR1731


PARTS LIST

A	1pc	B	6pcs	C	6pcs
ALLEN WRENCH		BOLT 6MMX40MM:		WASHER	
					
D	1pc	E	3pcs	F	1pc
TOP WOOD		WOOD LEG		WOOD CONNECTION	
					

STEP 1:


Assemble the wood leg (E) to the wood connection (F), one by one, with the bolt (B) & the washer (C) via the Allen wrench (A)

NOTE: DON'T TIGHTEN THE BOLTS NOW!

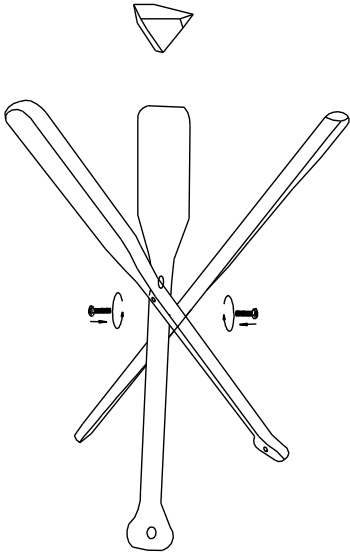

STEP 2:

Attach the wood legs onto the bottom of Wood top(D), tighten them with the bolts (B) & the washers (C) via the Allen wrench (A)

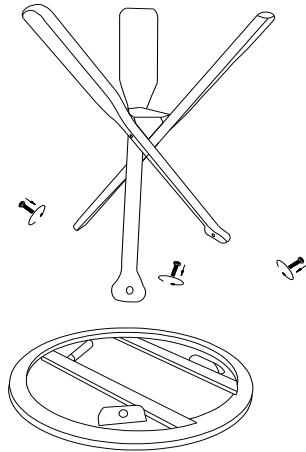

STEP 3:

Back to the wood connection, tighten the legs and wood connection.

