
Follow This Step-By-Step Guide To Using Your Generator

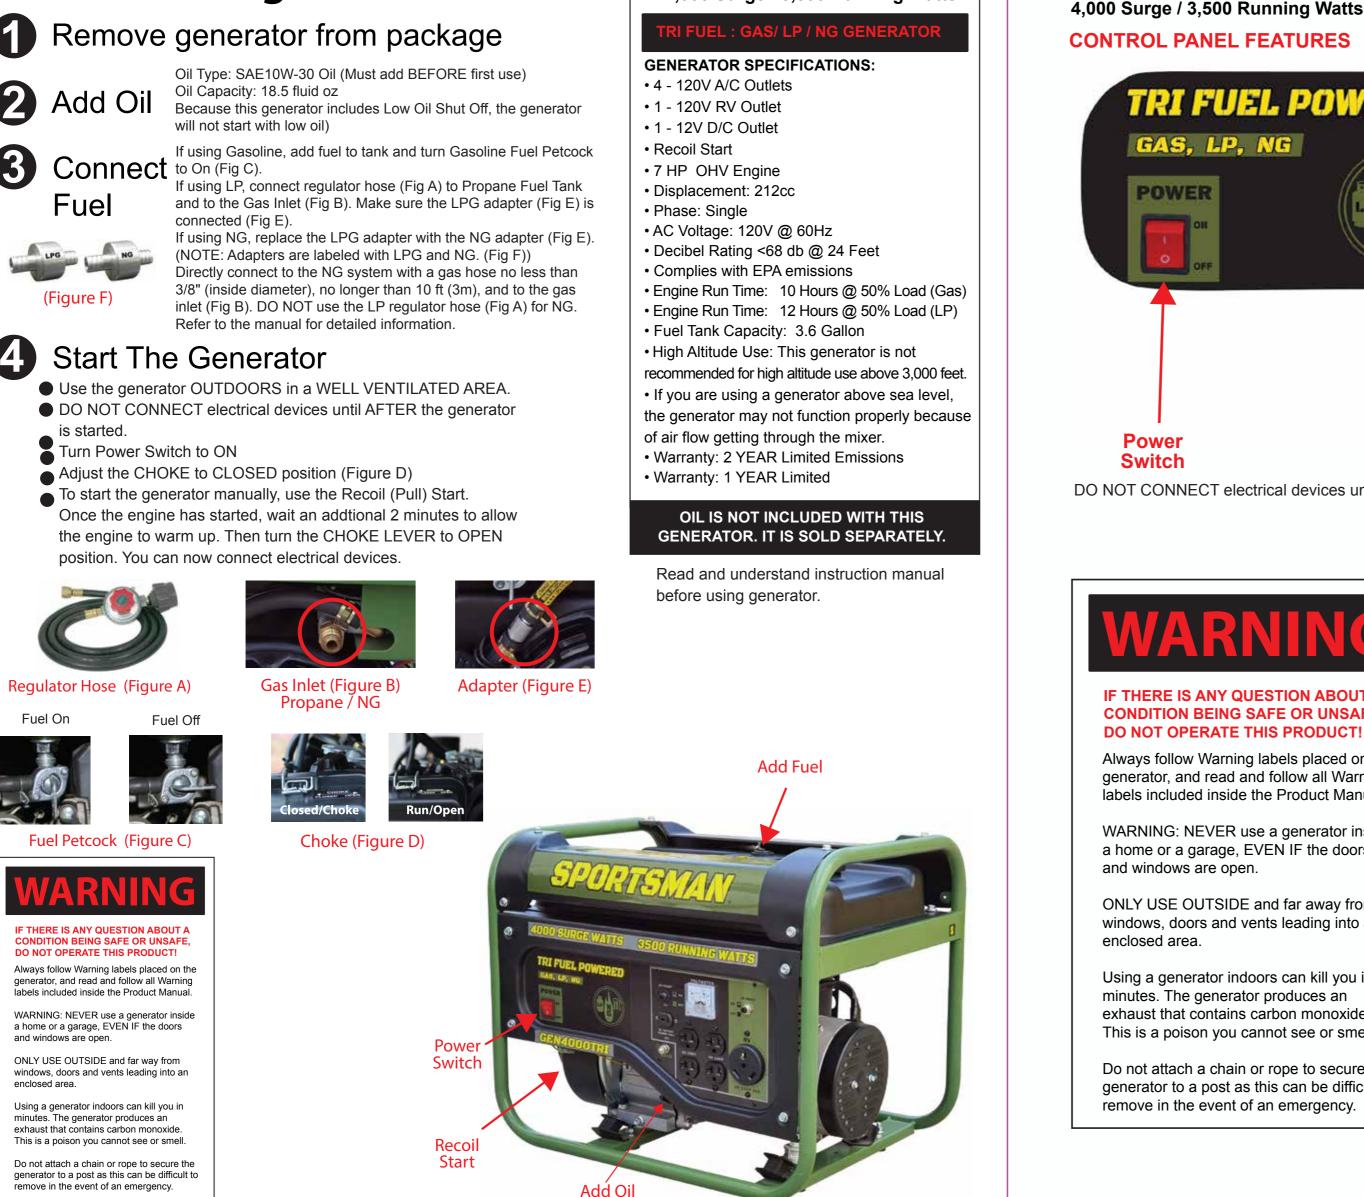

GEN4000TRI

4,000 Surge / 3,500 Running Watts

TOLL-FREE NATIONWIDE HELP LINE! 866-460-9436

Need Help? Call Us First! Monday-Friday 8:00-4:00 Central Time Visit our website for Troubleshooting & Frequently Asked Questions

SPORTSMAN.

www.sportsmanseriesbrand.com/generators





GEN4000TRI

RI FUEL : GAS/ LP / NG GENERATOR

12V DC Voltmeter **CONTROL PANEL FEATURES** DC Reset AC Reset TRI FUEL POWERED VOLTMETER AC RE DC RESET GAS, LP, NG н 🖬 , POWER 0 6 DC BATTERY 10 A0 120V AC 120V V 30A Power Ground **120V RV 120V AC** Switch

DO NOT CONNECT electrical devices until AFTER the generator is started.

VARNING

IF THERE IS ANY QUESTION ABOUT A **CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!**

Always follow Warning labels placed on the generator, and read and follow all Warning labels included inside the Product Manual.

WARNING: NEVER use a generator inside a home or a garage, EVEN IF the doors and windows are open.

ONLY USE OUTSIDE and far away from windows, doors and vents leading into an enclosed area.

Using a generator indoors can kill you in minutes. The generator produces an exhaust that contains carbon monoxide. This is a poison you cannot see or smell.

Do not attach a chain or rope to secure the generator to a post as this can be difficult to remove in the event of an emergency.

NOTES

Outlets available on this generator, from left to right: 4 x 120 Volt A/C Outlets

- 1 x 120 Volt RV Outlet
- 1 x 12 Volt D/C Outlet

TOLL-FREE NATION WIDE HELP LINE! 866-460-9436

Need Help? Call Us First! Monday-Friday 8:00-4:00 Central Time

Visit our website for Troubleshooting & Frequently Asked Questions

SPORTSMAN

www.sportsmanseriesbrand.com/generators