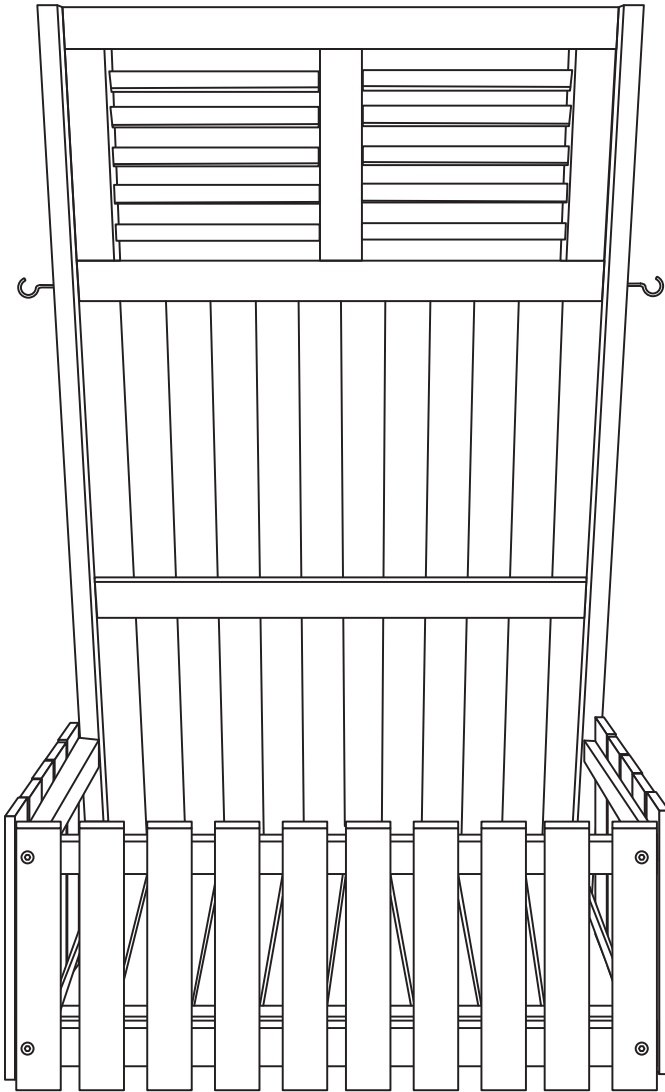


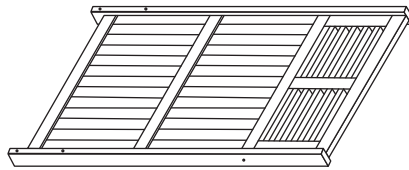

 
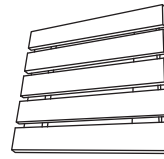
 


 
 

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

PLANTER DISPLAY STAND LAM-676

Read assembly instructions carefully and follow the care instructions. Save this document for future reference.
Assemble components on a soft, clean surface to avoid scratching or damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

| No. | PARTS | QTY. |
|-----|--|------|
| A |  Back Panel | 1 |
| B |  Screw Hook | 2 |
| C |  Front Panel | 1 |
| D |  Side Panel | 2 |
| E |  Bottom Panel | 1 |
| F |  JCBC 70mm Bolt | 4 |
| G |  JCBC 60mm Bolt | 4 |
| H |  Barrel Nut | 8 |
| I |  Barrel Nut Driver | 1 |
| J |  Hex Key | 1 |

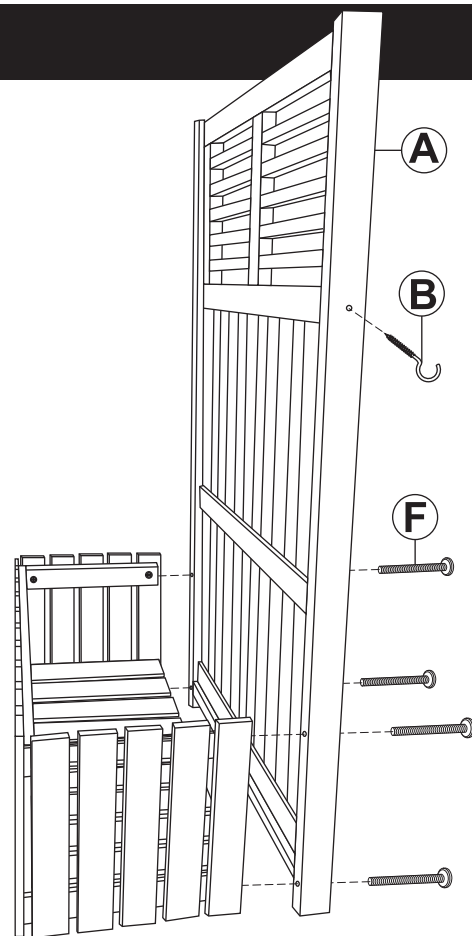
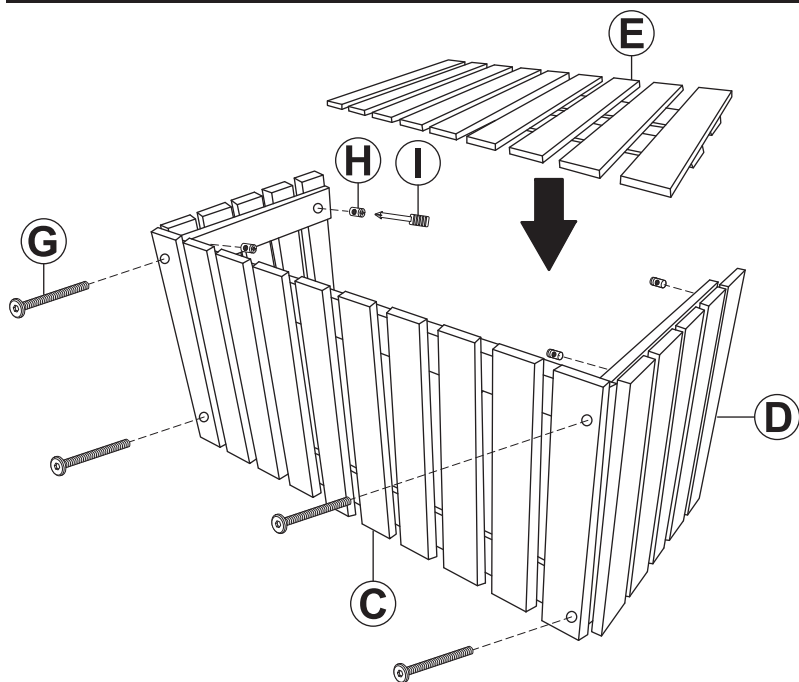
⚠ WARNING ⚠

CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.

⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY



1. Lay Side Panels (D) face-down on a clean, soft surface.
2. Place 4x Barrel Nut (H) into each side panel. Use Barrel Nut Driver (I) to turn the barrel nut so the threaded hole aligns with the pre-drilled hole.
3. Align Front Panel (C) with the side panels and loosely secure by hand-tightening JCBC 60mm Bolt (G), ensuring the bolts thread into the barrel nuts.
4. Carefully place Bottom Panel (E) into the assembled box.
5. Align the assembled box with the bottom of Back Panel (A) and loosely secure by hand-tightening JCBC 70mm Bolt (F), ensuring the bolts thread into the barrel nuts.
6. Tighten all bolts using Hex Key (J).
7. Fasten Screw Hook (B) into the back panel, as shown.

USE & CARE

INSPECT: Periodically check assembly points and tighten fittings as necessary.

CLEANING: Identify the direction of the woodgrain. Following the direction of the woodgrain, use a soft cloth or a soft-bristled brush, like a paintbrush, to remove loose dust, dirt and debris.

Do not use a pressure washer, harsh chemicals or abrasive materials to clean the unit.

WINTER CARE & STORAGE: Protect this item from ice and snow. Store in a dry, indoor location. Covering the unit while in storage will help prevent dust buildup.

MAINTENANCE: This item was treated with teak oil at the factory. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) yearly, or when the wood looks particularly dry. Clean the unit and bring into a warm, indoors location. Allow the unit to thoroughly dry before applying oil; drying may take several days. Only apply oil to wooden surfaces. Use a soft cloth or soft brush and carefully apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

Any modification to the product or failure to follow recommended care will void the product warranty.