 


 
 
HANGING HAMMOCK CHAIR WITH 3-PIECE SPREADER BAR

Read the assembly instructions carefully and follow the care instructions.

Save these instructions for future reference.

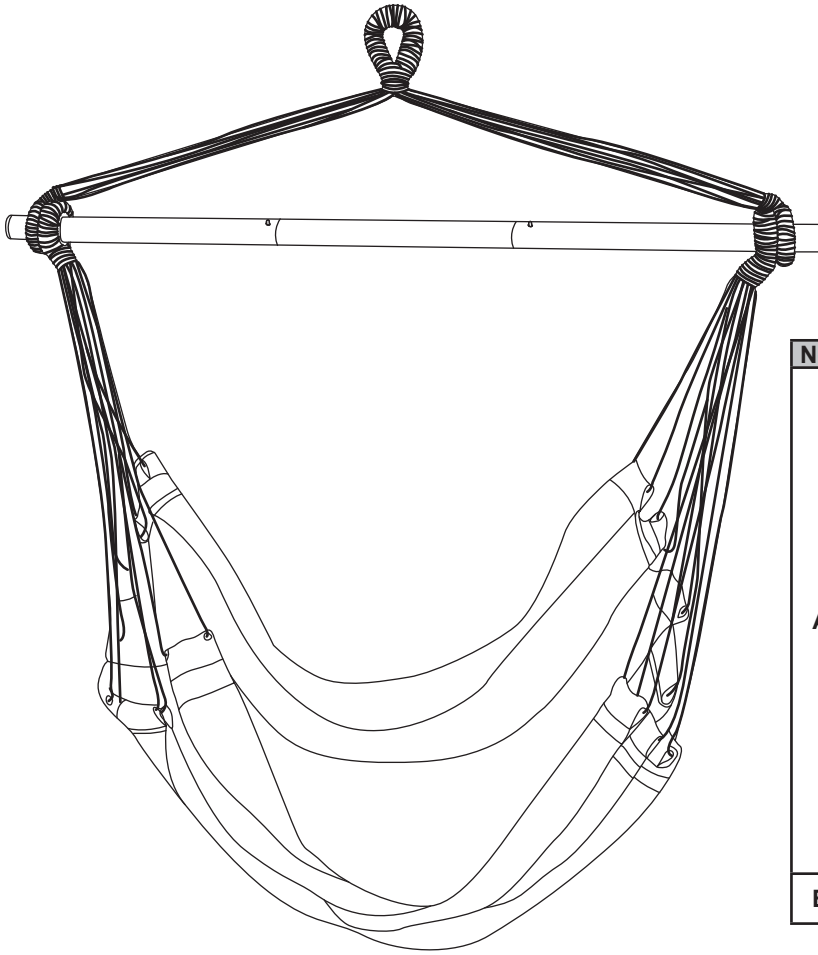

Ensure all parts are accounted for before disposing of packaging.

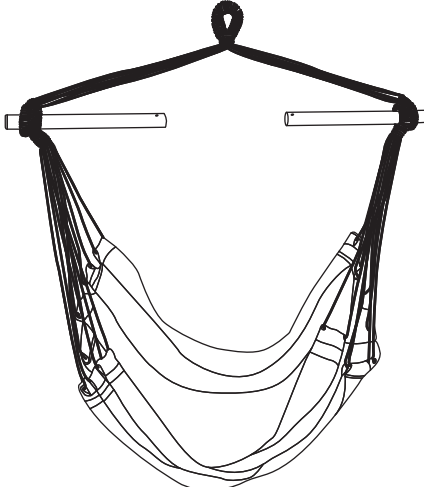No.	PARTS	QTY.
A	 Hammock Chair	1
B	 Crossbar	1

 
⚠ CAUTION ⚠

This hammock chair is not designed for use as a swing. Bouncing, swinging, or any other significant movements while in the chair may result in serious injury or death.

⚠ WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY

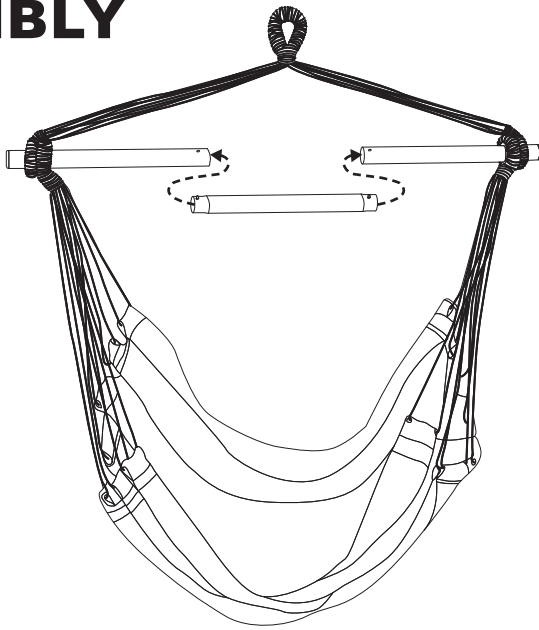

Align the spring button on Crossbar (B) with the hole in the spreader bar on Hammock Chair (A). Press the spring button down and carefully slide the crossbar into the spreader bar; the spring button will snap through the hole in the spreader bar when it is connected.

Repeat this process to connect the other side of the crossbar to the spreader bar.

USE & CARE

- **SAFE USE:** Do not swing, bounce, jump, twist, or make other excessive movements while using this chair. Misuse of the hammock chair can damage the product and result in serious injury.
- **INSPECT:** Before each use, inspect the ropes, fabric, and frame for wear or weakness.
- **SUN EXPOSURE:** All fabrics will eventually fade and degrade from sun exposure. The less direct sunlight the hammock chair is exposed to, the longer the life of the hammock chair will be.
- **CHILDREN:** Supervise children at all times while using this product. Do not allow children or pets to play in the hammock chair. Excessive swinging or rough play may damage the hammock chair and could cause injury.
- **CLEANING:** Clean when the fabric is soiled, or staining is present.
- **STORAGE:** Store indoors in a dry location when not in use. Always bring the chair indoors during inclement weather, winter, and when it will not be used for an extended time. Ensure the chair is completely dry before storing to prevent mold and mildew growth.

CLEANING



HAND-WASH ONLY



DO NOT USE BLEACH OR FABRIC SOFTENERS



LAY FLAT TO DRY

Spot clean with a damp cloth.

For more stubborn stains, hand-wash in a bathtub or kiddie pool using mild soap or detergent and a soft-bristled scrub brush. Soaking may be required for heavily soiled material. Keep all metal components out of the water as much as possible; exposure to moisture will lead to rust.

Thoroughly rinse all soap residue. Thoroughly air-dry on a flat surface to prevent the ropes from stretching. The ropes may shrink while drying but will stretch back out with use.



SAFETY STATEMENTS & WARNINGS



- Before each use, inspect your hammock chair for wear or weakness. Do not use if the ropes are frayed, the fabric is torn, or the frame appears damaged.
- Excessive swinging and other rough play may result in serious injuries as well as potential property damage.
- Children should not use the hammock chair unsupervised.
- Pets should not be allowed into hammock chairs as it may result in injury or damage to the product.
- Do not exceed the recommended weight capacity of the hammock: 265 pounds.
- Never untie the ropes.

Any modification to the product or failure to follow recommended care will void the product warranty.