 


newair[®]

NCH250SS00

250 Count Thermoelectric Cigar Humidor

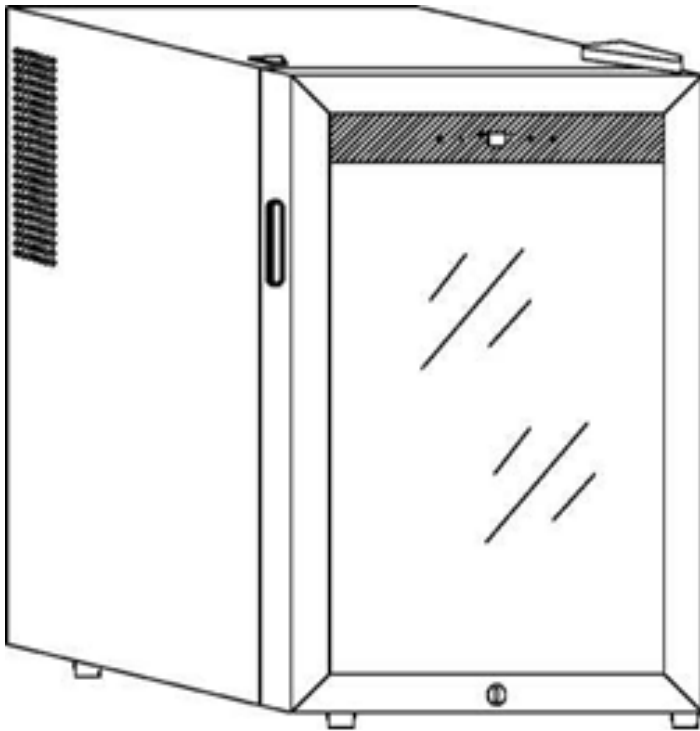

OWNERS MANUAL

Read and save these instructions.



Intertek
Manual v1.0

READ AND SAVE THESE INSTRUCTIONS.

TABLE OF CONTENTS

Register Your Product Online.....	3
Safety Information & Warnings	4
Parts List	5
Assembly & Installation	6
Operating Instructions	7
Cleaning & Maintenance.....	8
Troubleshooting.....	9
Limited Manufacturer's Warranty	10

SPECIFICATIONS

MODEL NO.	NCH250SS00
CAPACITY:	1.16 Cu. Ft.
VOLTAGE:	110-120V
CURRENT:	60W / 0.8A
FREQUENCY:	60Hz
TEMPERATURE CONTROL RANGE:	52 - 74°F
NET WEIGHT:	26.5 lbs.
GROSS WEIGHT:	30.8 lbs.

REGISTER YOUR PRODUCT ONLINE

Register Your NewAir Product Online Today!

Take advantage of all the benefits product registration has to offer:



Service and Support

Diagnose troubleshooting and service issues faster and more accurately



Recall Notifications

Stay up to date for safety, system updates and recall notifications



Special Promotions

Opt-in for NewAir promotions and offers

Registering your product information online is safe & secure and takes less than 2 minutes to complete:

newair.com/register

Alternatively, we recommend you attach a copy of your sales receipt below and record the following information, located on the manufacturer's nameplate on the rear of the unit. You will need this information if it becomes necessary to contact the manufacturer for service inquiries.

Date of Purchase: _____

Serial Number: _____

Model Number: _____

 
SAFETY INFORMATION & WARNINGS



To reduce the risk of electric shock or injury when using your appliance, follow these basic precautions:


- Read all instructions before using this cigar humidor cabinet.
- Never allow children to operate or play with this appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use any flammable vapors and liquids in the vicinity of this appliance. The fumes can create a fire hazard or explosion.
- This appliance is not intended for food storage.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, lack of experience or knowledge of its operation, unless well instructed or under supervision of a person responsible for their safety.

PARTS LIST

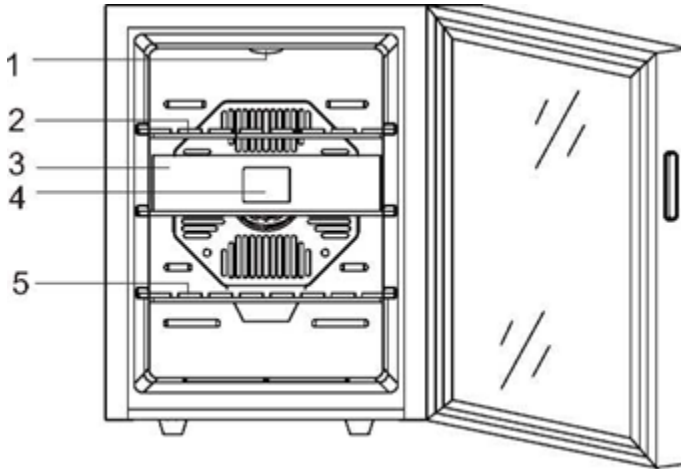

1. LED Light
2. Cedar Wood Tray
3. Cedar Wood Drawer
4. Hygrometer
5. Cedar Wood Tray

 ELECTRICAL DIAGRAM

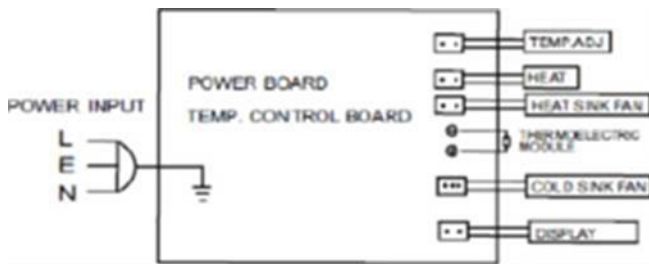

ASSEMBLY & INSTALLATION



Before connecting the appliance to a power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

Before using your cigar humidor, complete the following steps:

- Remove all exterior and interior packaging
- Make sure the following parts are included:
 - 3 wood shelves.
 - 1 Instruction manual.

Before operating your cigar humidor for the first time, follow these steps:

1. Clean the interior surface with lukewarm water using a soft cloth.
2. Place your appliance on a flat surface strong enough to support the appliance when it is fully loaded. To level your humidor, adjust the front legs at the bottom of the appliance.
3. Ensure the cabinet is located away from direct sunlight and sources of heat (i.e.: stove, heater, radiator, etc.). Direct sunlight may affect its acrylic coating. Extreme cold or hot ambient room temperatures may also cause the appliance to not perform properly and/or increase electrical consumption.
4. The appliance is intended for indoor use only.

CAUTION: Please keep the cabinet away from combustible materials or substances.

OPERATING INSTRUCTIONS

It is recommended that you setup the cigar cabinet in a place where the ambient temperature is between 68-77°F. If the ambient temperature is above or below recommended temperatures, the performance of the unit may be affected. For example, placing in extreme cold or hot conditions may cause the interior temperature to fluctuate or not reach the appliance's range.

The temperature may fluctuate depending on whether the interior light is on or off or how cigars are placed on the upper, middle, or lower section.

HOW TO SET TEMPERATURE:

There are four touch-buttons on the control panel:



increases or decreases the set temperature by 1 degree

(temp range is 52 - 74°F).



button turns on or off the interior light.



selects temperature display setting Fahrenheit or Celsius.

Note: This product is designed to operate in rooms with an ambient temperature range of 68-77°F and the internal temperature may only increase by a maximum of 3°F in comparison to the surrounding temperature.

E.g. If you live in a predominantly cold area with an ambient temperature of 68°F then the maximum internal temperature the unit can reach is 71°F.

A built-in cooling system can be used to set the internal temperature as low as 52°F.

CLEANING & MAINTENANCE

CLEANING YOUR CIGAR CABINET

To clean your cigar cabinet:

- Unplug the cigar humidor and remove its contents and trays.
- Clean the inside with a warm water and baking soda solution, about 2 tablespoons of baking soda to a quart of water.
- The outside of the cigar humidor should be cleaned with mild detergent and warm water.
- Take out the water reservoir and clean with warm water.

TRANSPORTING THE CABINET

- Remove all contents and sliding shelves.
- Secure all loose items inside the unit.
- Adjust the leveling legs up to the base to avoid damage.
- Secure door shut.
- Be sure the cigar humidor stays in an upright position during transportation.

DISPOSAL

1. Please remove the door before disposal of this appliance.
2. Do not dispose of this product as unsorted municipal waste. Collection of such waste should be treated separately. Flammable insulation and or gases should be disposed appropriately. Take the cabinet to a recycling plant.

TROUBLESHOOTING

You can resolve most common usage problems easily by reviewing and following the troubleshooting information below.

Problem	Possible Causes
Cigar cabinet does not operate.	<ul style="list-style-type: none"> • Not plugged in using different voltage. The circuit breaker tripped or there is a blown fuse.
Cigar cabinet is not cold enough.	<ul style="list-style-type: none"> • Check the temperature control setting. • Room temperature is too warm. • The door is opened too often. • The door is not closed completely. • The door seal is not working properly. • The humidor does not have the correct clearance.
The light does not work.	<ul style="list-style-type: none"> • Check with your service center.
Vibration.	<ul style="list-style-type: none"> • Adjust the front feet to securely level the appliance.
The cigar humidor makes too much noise	<ul style="list-style-type: none"> • The cabinet is not level. • Check the fan.
The door will not close properly.	<ul style="list-style-type: none"> • The cabinet is not level. • The doors were reversed and improperly installed. • The seal is weak.
LED could not display.	<ul style="list-style-type: none"> • Main control board does not work. • PCB Problem. • Electrical cord problem.
LED display error.	<ul style="list-style-type: none"> • Display panel problem. • Temperature point is off.
Cooling system not functional.	<ul style="list-style-type: none"> • Temperature controller panel is damaged.

LIMITED MANUFACTURER'S WARRANTY

This appliance is covered by a limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

Warranty Terms:

During the first year, any components of this appliance found to be defective due to materials or workmanship will be repaired or replaced, at the manufacturer's discretion, at no charge to the original purchaser. The purchaser will be responsible for any removal or transportation costs.

Warranty Exclusions:

The warranty will not apply if damage is caused by any of the following:

- Power failure
- Damage in transit or when moving the appliance
- Improper power supply such as low voltage, defective household wiring or inadequate fuses
- Accident, alteration, misuse or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions (extreme temperatures)
- Use in commercial or industrial applications
- Fire, water damage, theft, war, riot, hostility or acts of God such as hurricanes, floods, etc.
- Use of force or damage caused by external influences
- Partially or completely dismantled appliances
- Excess wear and tear by the user

Obtaining Service:

When making a warranty claim, please have the original bill of purchase with purchase date available. Once confirmed that your appliance is eligible for warranty service, all repairs will be performed by a NewAir™ authorized repair facility. The purchaser will be responsible for any removal or transportation costs. Replacement parts and/or units will be new, re-manufactured or refurbished and is subject to the manufacturer's discretion. For technical support and warranty service, please email support@newairusa.com.