

ADJUSTING SENSITIVITY

The Mole Trap's Base Plate should move up and down freely with little to no resistance. If this is not the case the Trap's sensitivity should be adjusted by loosening the Lock Nuts located on the Base Plate/Scissor Arm Joint (Refer to Mole Trap Schematic Above). Loosen each Lock Nut by quarter turns until the Base Plate moves freely. This will ensure success while trapping.