 




990005021
CORNER BOOKCASE

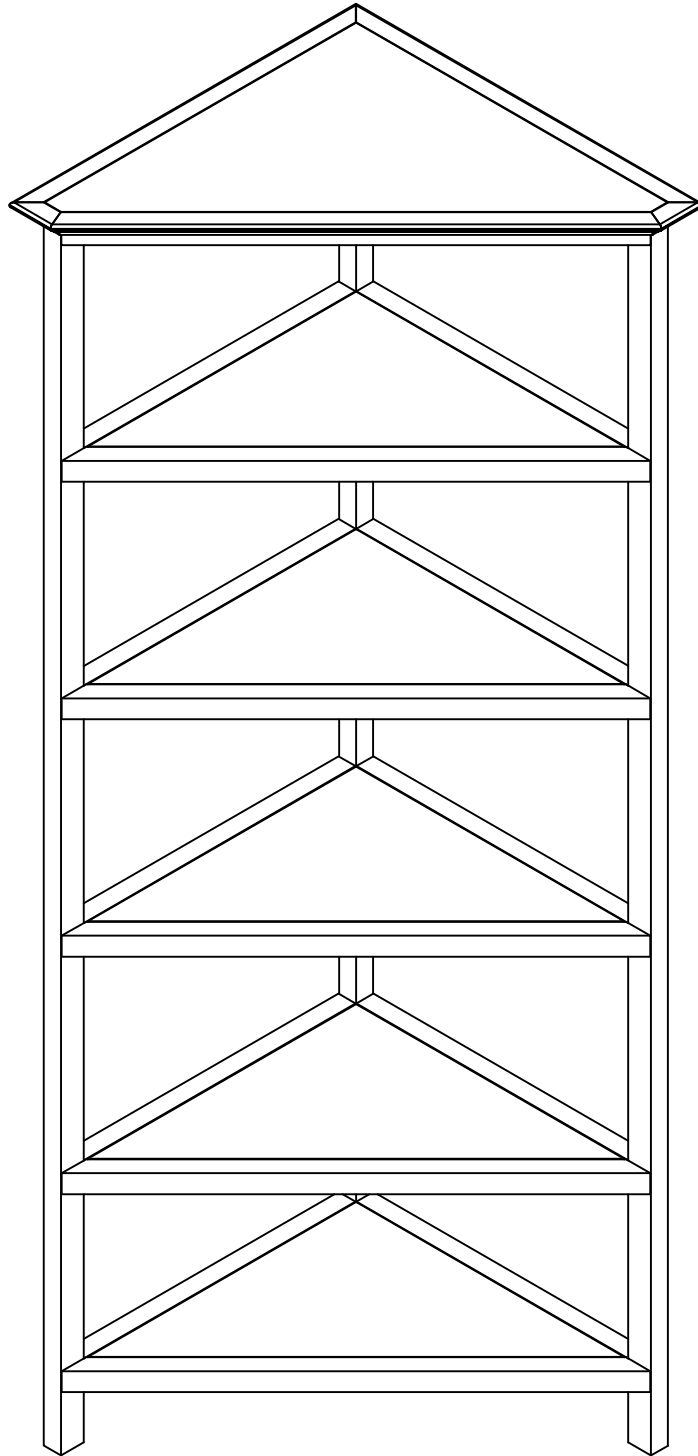



NO CLIMBING



  990005021 CORNER BOOKCASE

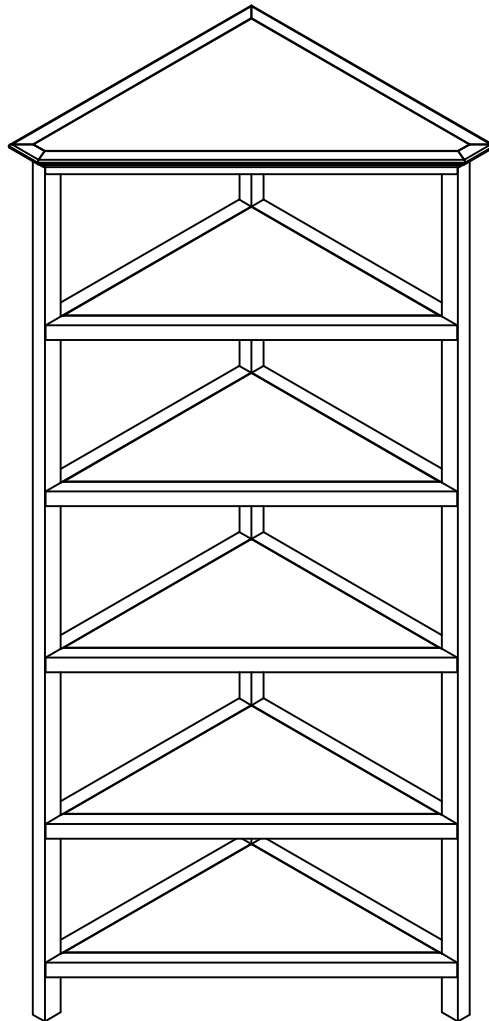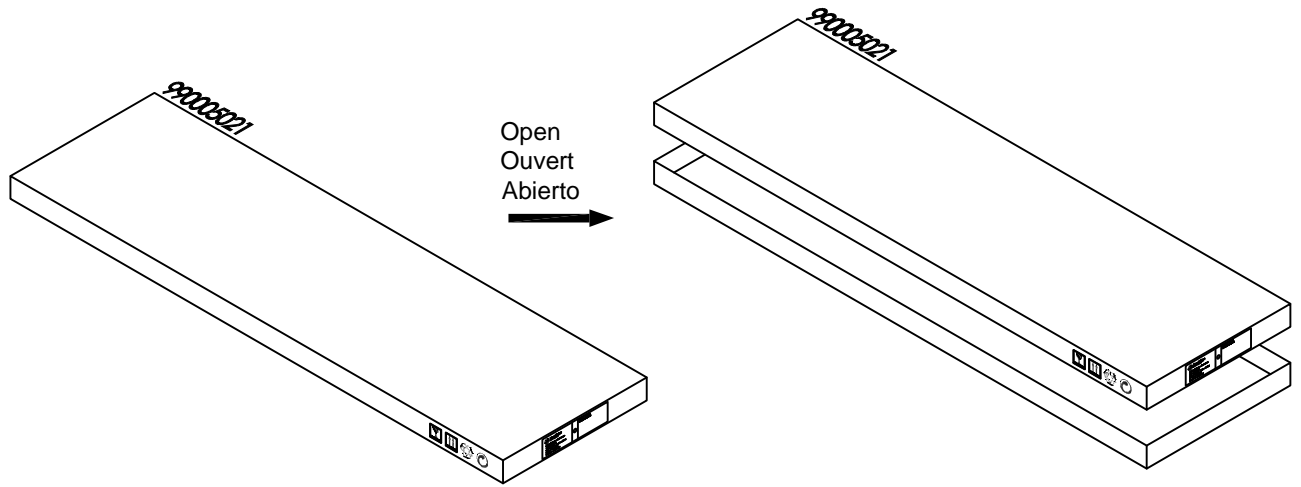




990005021




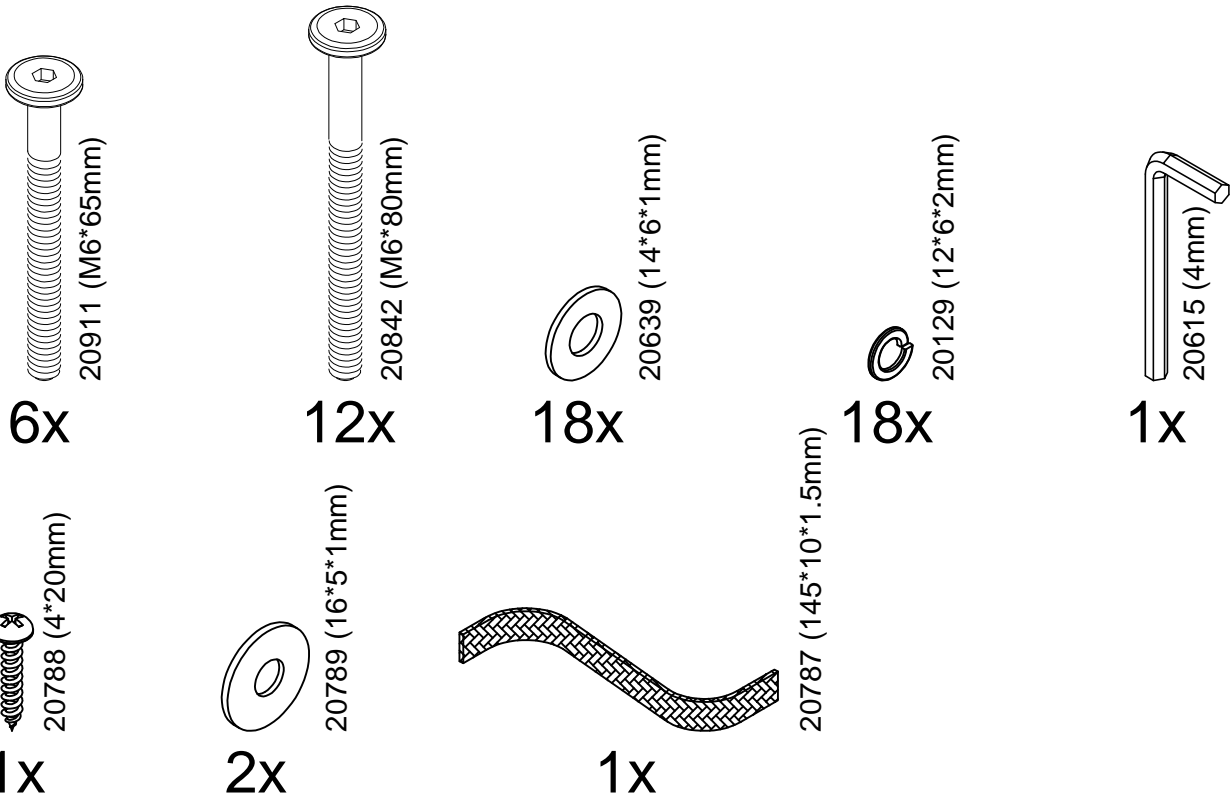 
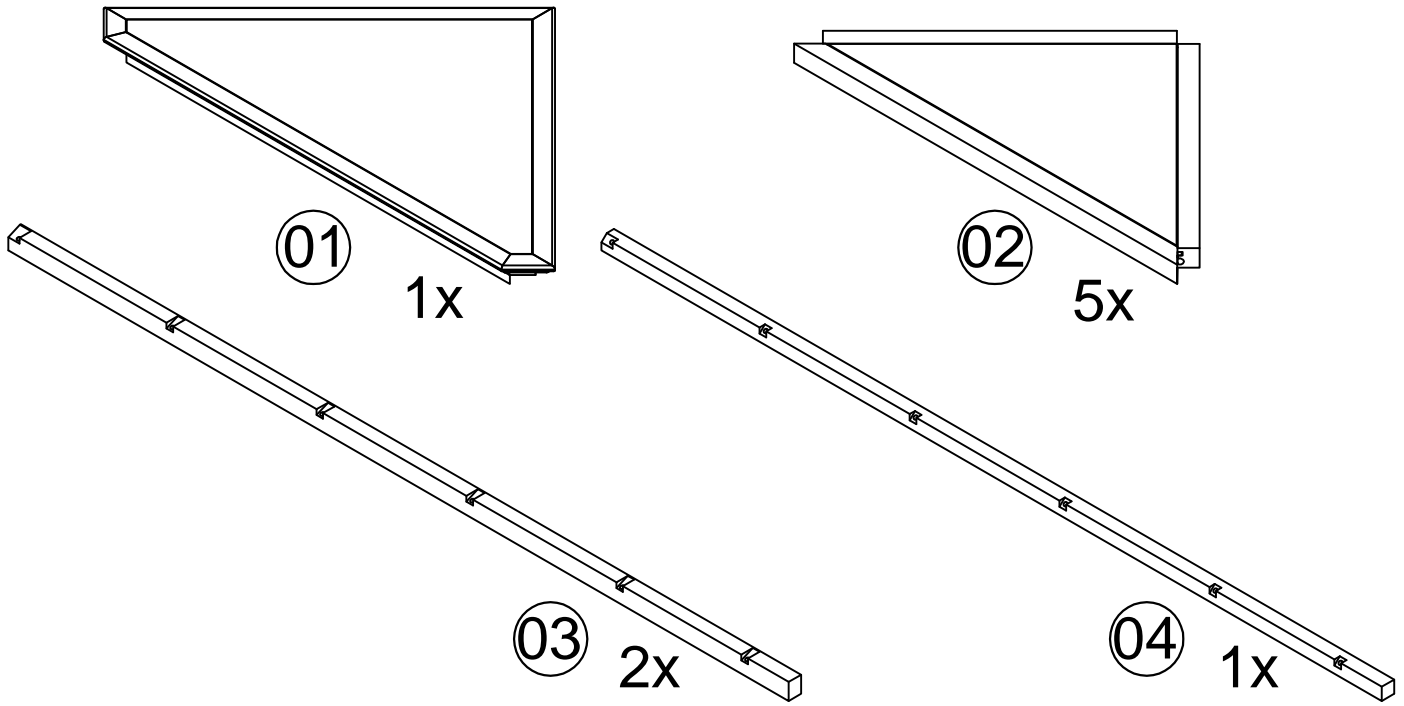 


⚠ WARNING:
CHOKING HAZARD--Small Parts
Not for children under 3 years.
To be Assembled by an Adult

        Not Include
Non Inclus
No Incluido



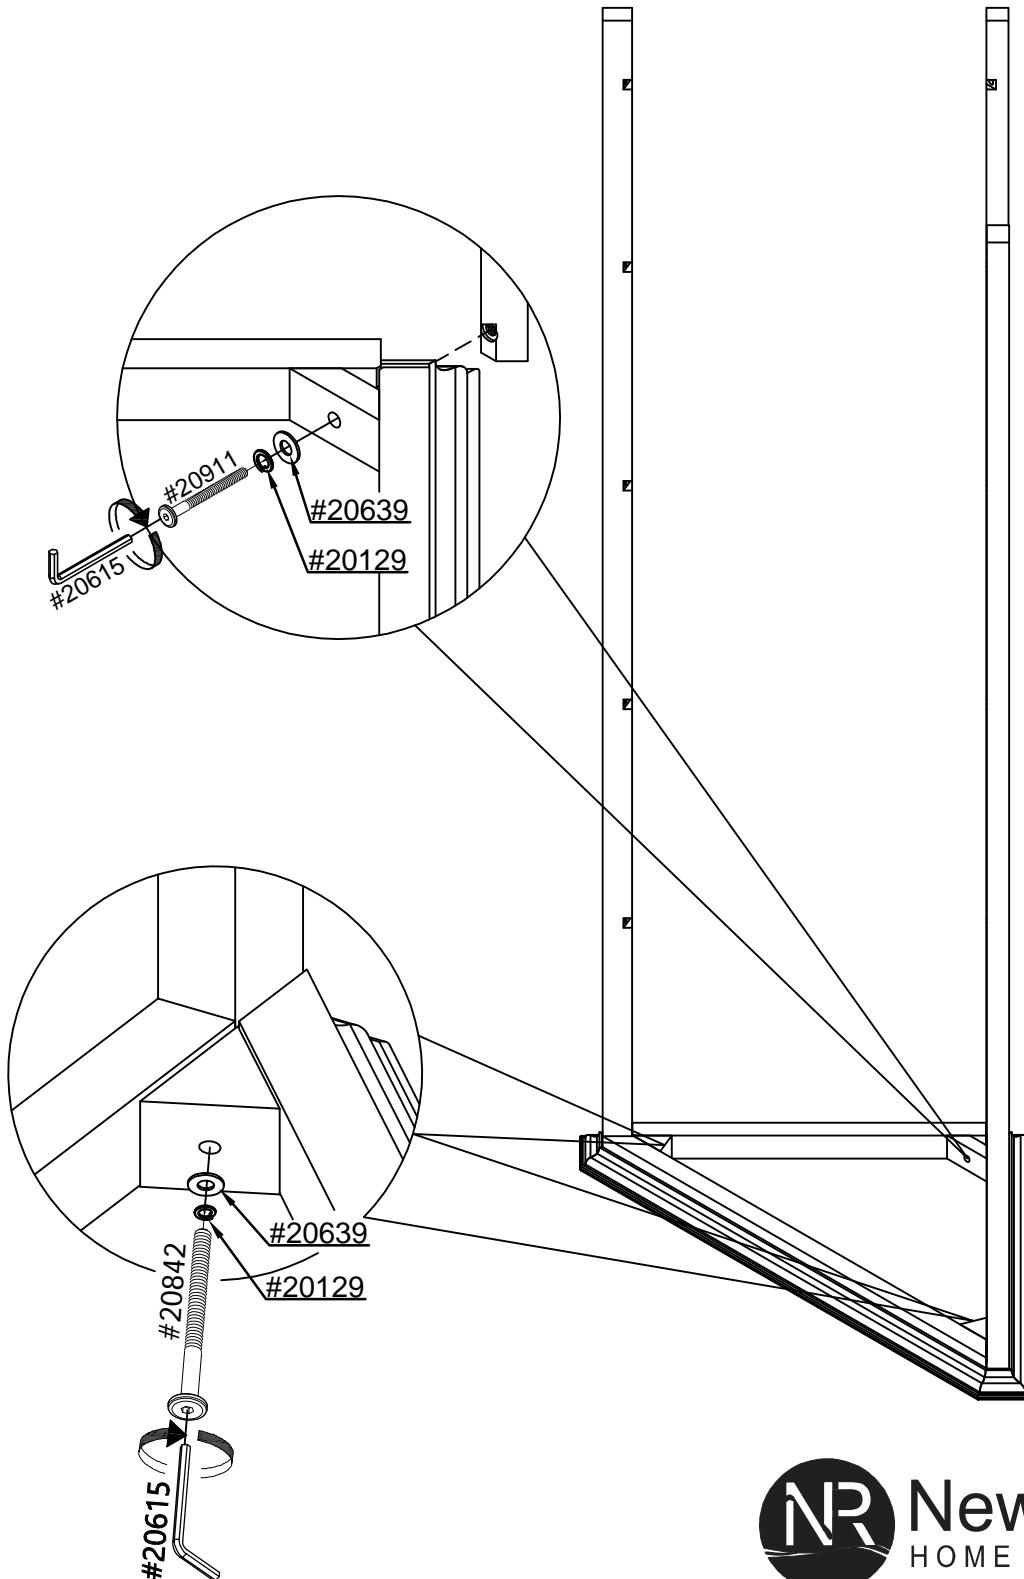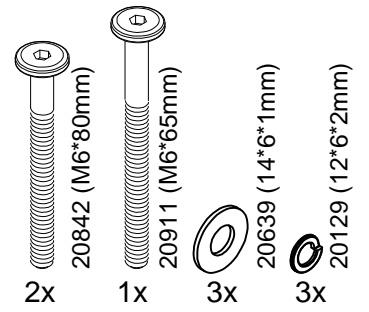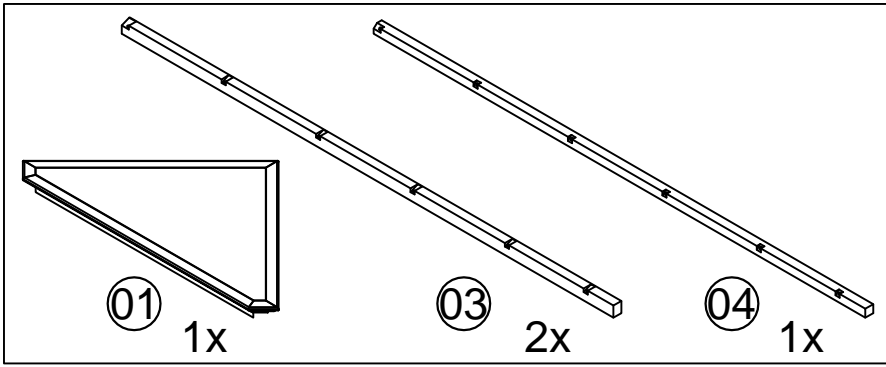

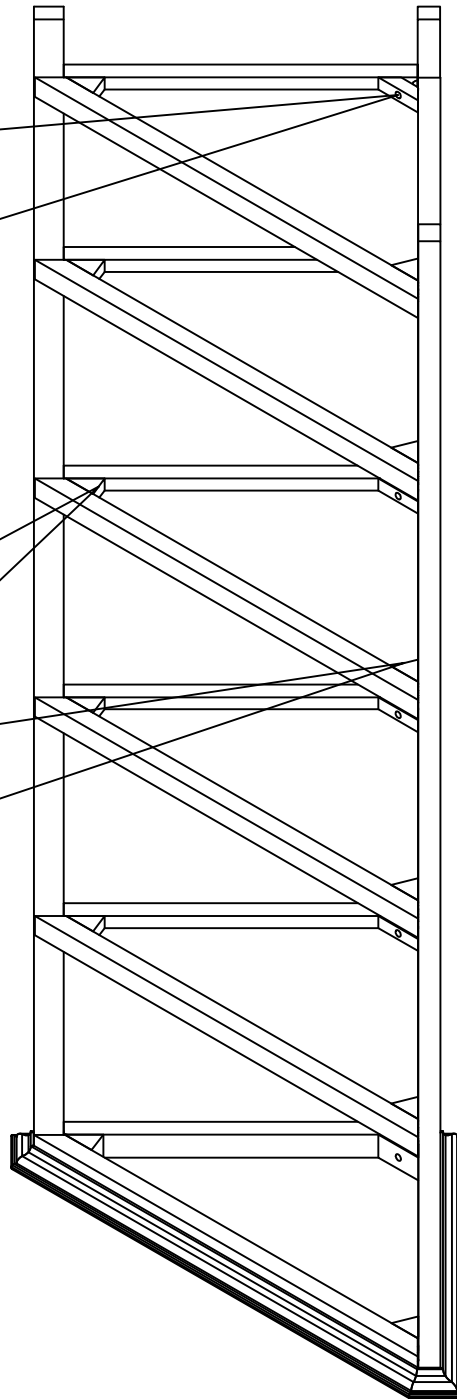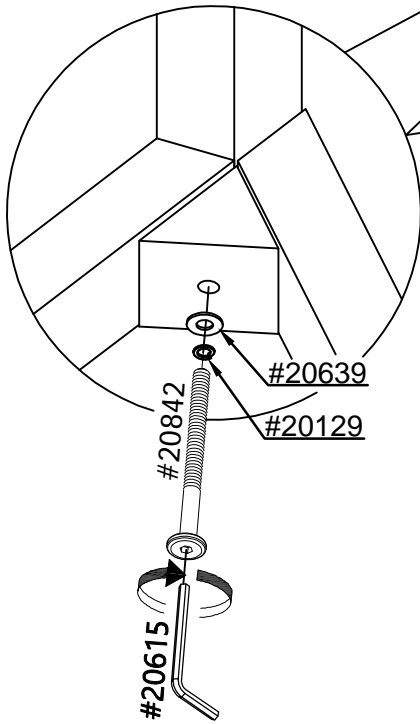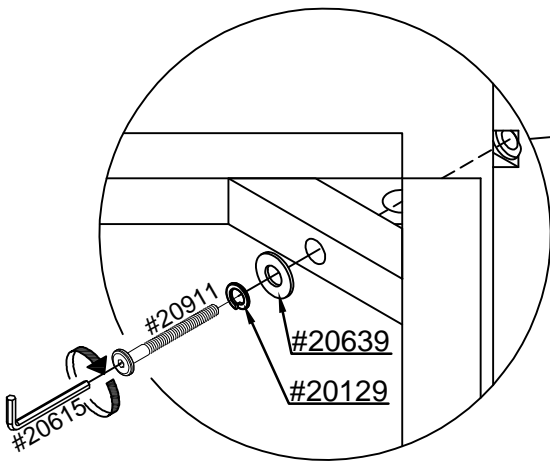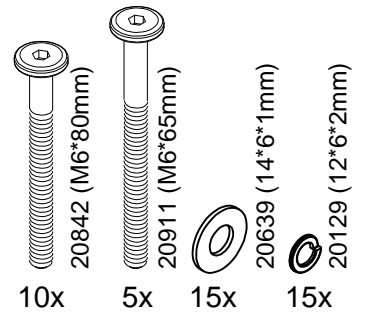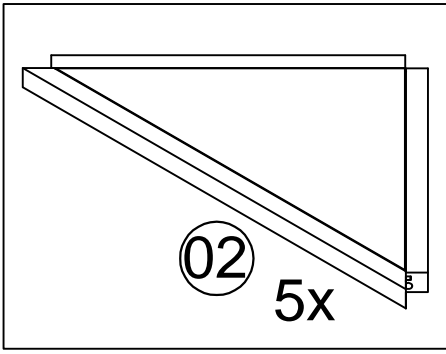

AN OPTIONAL TIPPING RESTRAINT DEVICE IS PROVIDED FOR ADDITIONAL SAFETY

- 1) See above Tipping Restraint Device
- 2) Open Tipping Restraint Device package and remove the screw, washer and strap.
- 3) Secure the strap under the top or middle shelf of the furniture with the provided washer and screw. Then connect the strap to the wall using an appropriate anchor, washer and screw (not included) for your wall.

