

Installation Instructions

Before mounting the Ball/Pintle confirm that there will be no interference from the tow vehicle and any other mounted accessories. Check for interference again after installation is complete.

1. Mounting structure must be capable of supporting the rated capacity of the pintle hook in accordance with SAE J849b.
2. Use the four 1/2" diameter grade 8 bolts and torque to 100ft. lbs.
3. For combination pintle hooks, torque ball locknut to 350ft. lbs.

Operating Instructions

PINTLE HOOK

1. Open pintle by removing safety pin and lifting latch.
2. Position lunette eye over the horn of the pintle and lower into place.
3. Close pintle and insert safety pin.

HITCH BALL/PINTLE

1. Open pintle by removing safety pin and lifting latch.
2. Replace safety pin in hole to retain latch in open position.
3. Position coupler over ball and lock into place, following coupler manufactures instructions.