



INSTALLATION INSTRUCTIONS

Part Number: TB-1016

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Remove stock air filter.
2. Clean any sealing surfaces from any dust or debris that may be present.
3. Using supplied K&N® sealing grease, apply a small bead of grease in the air box, where the halves of the air box come together. This will ensure that the K&N® air filter will seal over the gap in the air box where the air box matting surfaces come together. See Fig. 1
4. Before installing K&N® air filter into air box, apply a small bead of grease to the perimeter of the sealing surface of the K&N® air filter. See Fig. 2
5. Install K&N® air filter.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Left side of air box

Right side of air box

Fig.1



Fig.2

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.