



# Get Started!



# Classic In-Ground Fence™ Rechargeable Receiver Collar

With your new Classic In-Ground Fence™ Rechargeable Receiver Collar, you can provide the freedom and security of your Classic In-Ground Fence™ system to another pet. Any number of fuzzy friends can use the fence system — just get a separate receiver collar for each and complete the full fence training program with each pet.


The receiver collar has 7 levels of static correction plus a tone and vibration setting, allowing you to easily adjust the correction level to your pet's temperament. To protect your pet from being over-corrected, static correction duration is limited to a maximum of 15 seconds.

The only pets we do not recommend the receiver collar for are pets with a history of aggressive behavior, younger than 6 months of age, or under 5 pounds.


**Did you know?** The Classic In-Ground Fence™ Rechargeable Receiver Collar is compatible with all PetSafe® Pawz Away® Pet Barriers — a great way to keep your pet away from trouble spots indoors and outdoors. Scan the QR code to learn more.



# What you have:

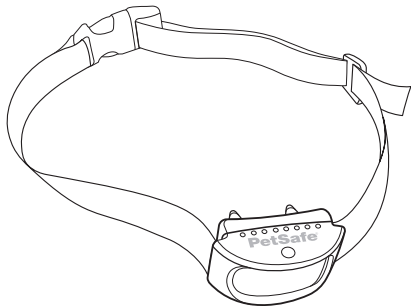

 Receiver collar with short contact points




Charging cable



Long contact points

## Let's invite another pup to playtime.


1

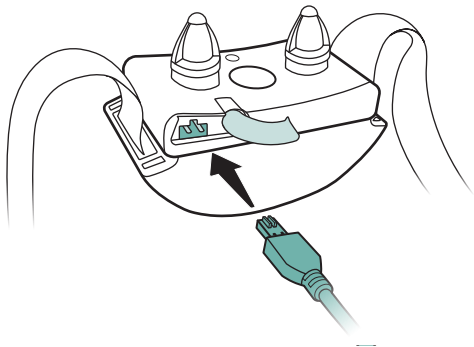

Locate the charging jack on the bottom of the receiver collar, covered by a rubber plug. Lift the plug and insert the small end of the charging cable into the charging jack.

Connect the other end of the charging cable to a USB charging port. The status light will blink green when the receiver collar is charging and will glow solid green when charging is complete (within 2-3 hours).

When the receiver collar is fully charged, unplug the charging cable and replace the rubber plug. Each charge can last up to 3 weeks, depending on frequency of use.

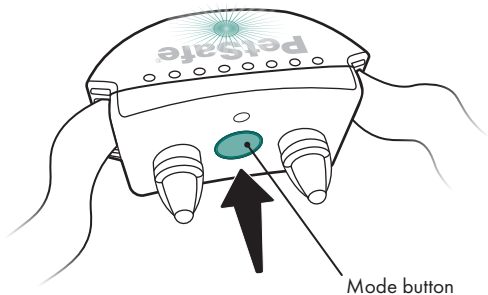


Turn the receiver collar on by pressing and holding the mode button for 1 second. The receiver collar will beep low to high and the status light will flash green.

While the receiver collar is on, the status light will flash every 5 seconds. The color of the status light indicates the current battery charge.

Status light color	Meaning
Green	Battery is sufficiently charged.
Yellow	Battery charge is below 40%.
Red	Battery charge is below 20%; charge immediately.

3

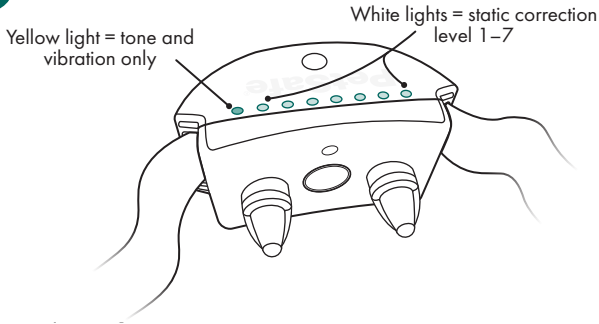


To determine the current correction level, press the mode button once and observe the row of correction level lights on the top of the receiver collar:


- If the yellow light illuminates, the receiver collar is set to tone and vibration.
- If one or more white lights illuminate, the receiver collar is set to static correction. The number of white lights illuminated indicates the current static correction level (one white light = level 1 static correction, two white lights = level 2 static correction, and so on).

## 4


Tone and vibration

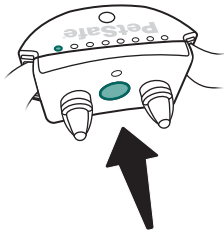

Level 1 static correction

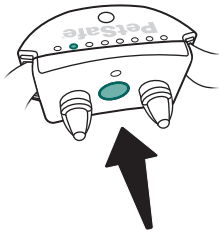


Level 2 static correction

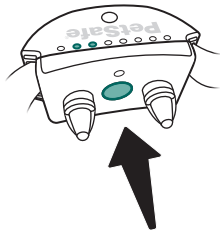

To change the correction level, press the mode button once to view the current correction level, then press it again within 8 seconds. Each time you press the mode button within 8 seconds of the previous press, the correction level increases by one.

The levels increase up through level 7 static correction and then start over at tone and vibration. The collar retains the current correction level each time you turn it off and back on.

5

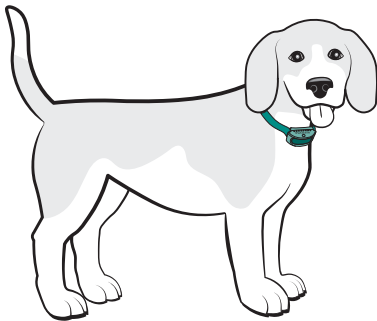


Turn the receiver collar off by pressing and holding the mode button for 5 seconds. The receiver collar will beep high to low and the status light will turn off.

With your pet standing comfortably, place the receiver collar around your dog's neck. The PetSafe® logo should be right side up, and the contact points should be centered directly under your dog's chin, touching his skin. If your dog has long hair, it may be necessary to switch to the long contact points provided or trim (not shave) the hair around the contact points.

Check the tightness of the receiver collar by inserting one finger between the end of a contact point and your dog's skin. The fit should be snug but not constricting.




6

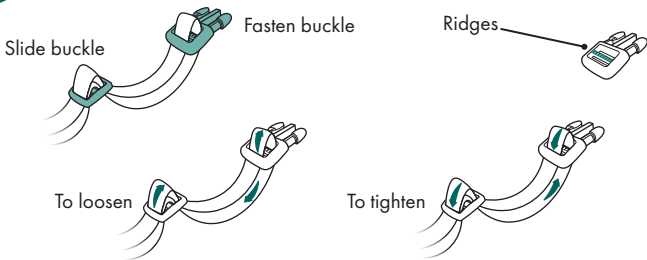

Adjust the fit of the receiver collar as needed. Make sure the ridges on the fasten buckle are facing up and the strap is threaded through the slide buckle to prevent it from becoming loose around your pet's neck.

Once you are satisfied with the fit of the receiver collar, remove it from your pet and trim it (allow room for growth or a thicker winter coat). Seal the edge of the cut collar by applying a flame along the frayed edge.

Remember to recheck the fit of the receiver collar frequently as your dog becomes comfortable wearing it.

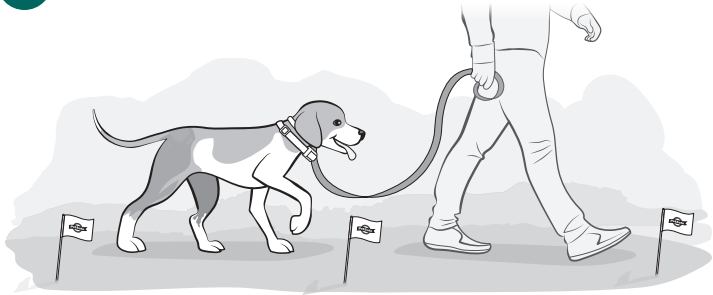

Replace the boundary flags at the edge of your pet area and begin training your pup to understand and respect the boundary. The fence training guide provided with your Classic In-Ground Fence™ system will lead you through our recommended training program step-by-step. (You can also find this information on [support.petsafe.net](http://support.petsafe.net) or request it from our Customer Care team.)

Every pet is unique, so training time will vary. Carefully watch over your pet in the boundary area until you have completed the full training program and are confident your dog consistently respects the boundary regardless of distractions or temptations.

**Freedom for your pet,  
peace of mind for you.  
Now that's a win-win.**



# Let us help!

For questions or additional tips:

+1 (800) 732-2677

[petsafe.com](https://petsafe.com)

1-Year Warranty | ©2021 Radio Systems Corporation | Models: PIG00-17441 | YU400-2534

For important safety instructions, please see the customer care guide.

For a list of patents protecting this product, please visit [radiosystemscorporation.com/patents](https://radiosystemscorporation.com/patents)