

10 Inch Touch Screen User Guide

Ver 1.1 © Massimo Electric LLC



CONTENTS

Topic	Page
Product Overview	1
Device Registration	2
Main Interface	3
Interface Reference	4
Vehicle Information	5
Navigation / GPS	6
Bluetooth Music	7
Video Monitoring	8
Notification Messages	9
Settings	10-17

Product Overview

Product interface:




num	icon	function
1	(h)	Screen Backlight
2		Home Screen
3	t)	Return
4	4 +	Increase Volume
5	◄ -	Lower Volume
6		SIM card slot

Device Registration

User Registration

Important information, such as service bulletins and vehicle status alerts can be relayed to the Registered Owner.

On initial startup, the registration interface will be displayed as shown below:

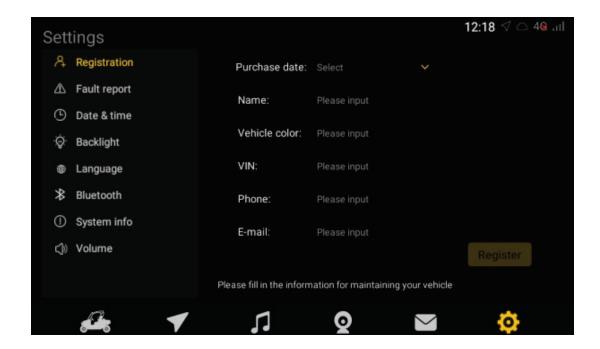

Note: If the SIM card is not installed, the system will display a notification on startup. For functions that rely on updated location and data services, a SIM card with an active network connection is necessary. The SIM Card slot is located on the rear side of the display, accesible by removing the upper dash panel. Please see your dealer or retailer for further details.

Main Interface

The display screen will turn on automatically when the vehicle key is turned to ACC mode or the engine is started. After the boot sequence has completed, the main interface will be displayed as shown in the figure below.



(See Main Interface Reference Chart on following page)

Main Interface Reference Chart

Num	Icon	Description
1	<u>~</u> • • • • • • • • • • • • • • • • • • •	Engine Fault Alert Low Oil Pressure Warning Top Light / Light Bar Low Beam Headlight Hi Beam Headlight
2	+ →	Right & Left Turn Indicators
3	5:22 PM \$ ✓ △ 4G .ııl	System Status Bar
4		Front and rear axle status
5	P	Gear Indicator
6	Top Light	Top light on/off (if equipped)
7		Vehicle information
8		Navigation / GPS
9	IJ	Media & Music
10	Q	Video Camera Monitoring
11		Messages
12	\$	System Settings



Vehicle Information Screen



- Left: Tachometer / RPM Gauge
- Middle: Speedometer and Odometer
- Right: Fuel Level, Battery Voltage and Water Temperature
- Red Illumination will indicate Error or Fault



Navigation / GPS



GPS & Navigation are powered by Maps.Me, the world's Number 1 Offline Map service. Your device will be pre-loaded with USA maps. For updated map data, a SIM card with data plan is required.

Route Directions and Turn-By-Turn Directions are available.


Note: GPS functions require a clear view of the sky and may not function correctly indoors or under heavy cover.

Full instructions and details for the Maps functions can be found on Maps.Me/app/

A full Maps.me Guide is also available via the Massimo Electric website or customer service.

Bluetooth Music

Tap the music icon " " in the bottom navigation bar to open the music APP. If Bluetooth is not currently connected, the interface will display as shown below:

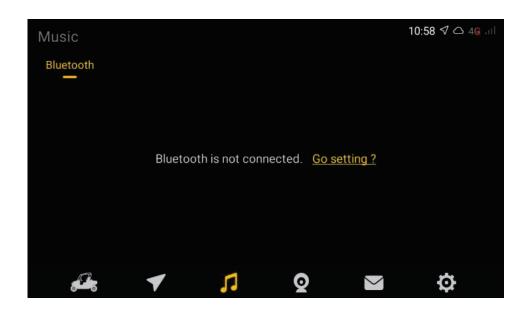


Tap "Go Settings" to pair and connect a Bluetooth device.

Optional Speakers must be installed by a certified installer. Connections for Right & Left Audio Channels (R+, R-, and L+, L-) are located on the rear of the device, accesible behind the dash.



Video Monitoring


Tap the video monitoring icon " in the bottom navigation bar to open the video monitoring APP. When the camera is not connected, the interface is shown in the figure below.

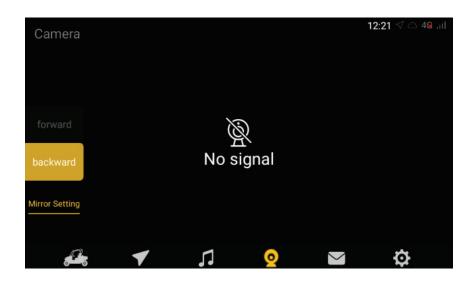

- Front and rear camera monitoring screen switching: rear monitoring is displayed by default. Tap the two buttons on the left to switch two viewing angles.
- Tap on the "Mirror Configuration" to display image camera images: horizontal mirror image, vertical mirror image, horizontal vertical image. Tap on any camera area to display the camera image in full screen.

Notification Message

In the process of using the vehicle, the user may receive a message pushed by the manufacturer to notify the user of required vehicle maintenance, or to push some service or informational messages. Tap the message icon " in the bottom navigation bar to view the received message.

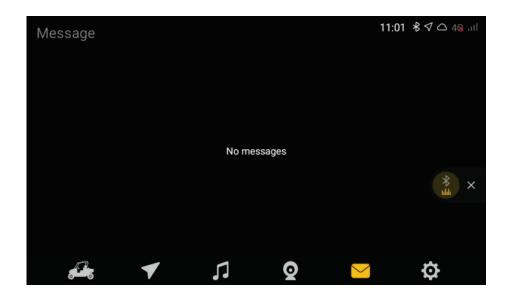


System Settings

Touch the screen and Tap the setting icon " in the bottom navigation bar, as shown below. The Settings menu includes the following options:

Registration, failure reporting, time setting, backlight setting, language setting, Bluetooth setting, language setting, Bluetooth setting, screensaver setting.


Settings > Registration

In the process of using the vehicle, in order to facilitate contacting the supplier, some information will be registered, so that the supplier can find and locate the vehicle for various service and maintenance.

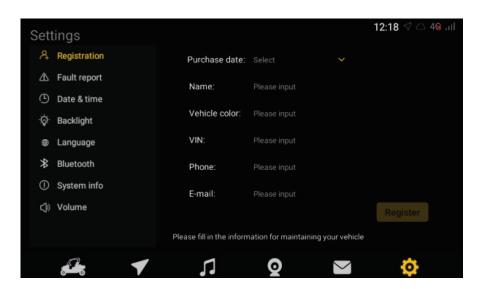

Settings > Fault Report

In the process of driving the vehicle, if the vehicle encounters a fault, it will automatically report to the platform. At the same time, users can also submit faults to the platform and the platform management will log required events for further support.

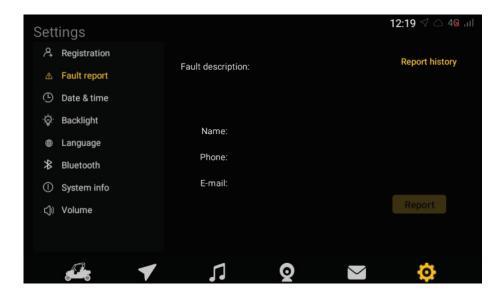


Tap "Report History" to query your history.

Settings > Date & Time


The time setting interface is as follows. The date and time are automatically determined by default, or can be set manually.

Time can be displayed in 12:00 hour (AM/PM) format, or 24:00 hour format.

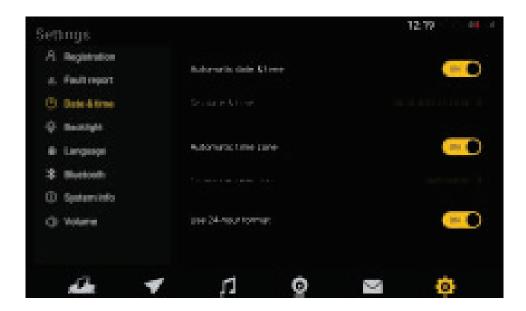

Settings > Backlight


The Backlight can be set to "automatic" or "manual" mode. The manual setting interface is shown in the figure below.

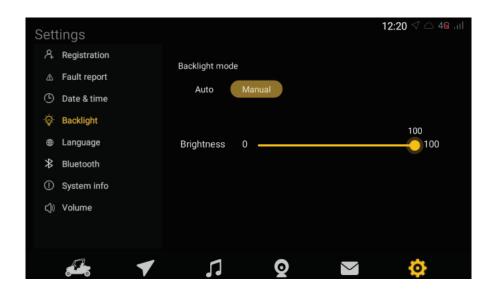

Automatic brightness is adjusted based on the current headlight state. If the headlights are on, it is considered to be night and the screen brightness is dimmed. If the headlights are off, it will be considered daytime and the screen brightness will be increased automatically.


Settings > Language

Select your Language. The device currently supports three languages: English, Spanish, and Chinese.

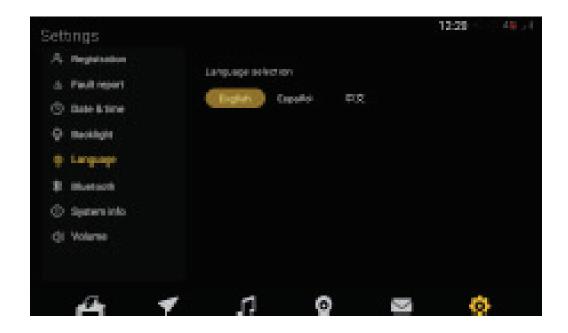


Settings > Bluetooth

Bluetooth function can be turned on / off; Find the Device Name for easy pairing with your mobile device, or rename it to your preference; The Bluetooth devices found and their connection are displayed below.

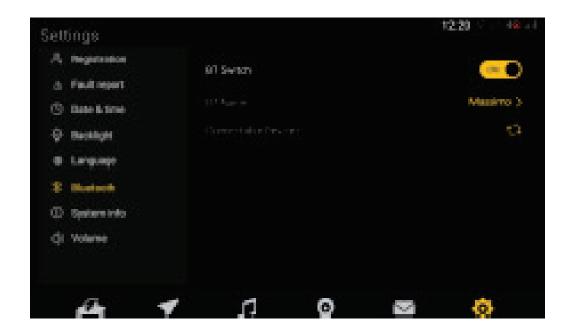


Settings > System Info

The system information interface is as follows, showing the device name, software version information, hardware version information, etc.

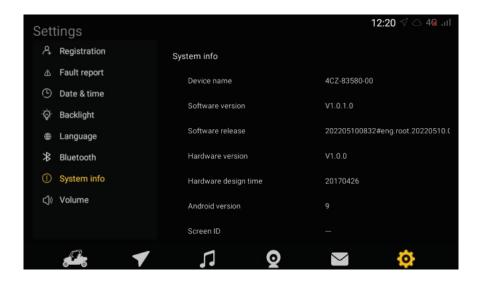

Settings > Volume

Use the slider to adjust the system volume.

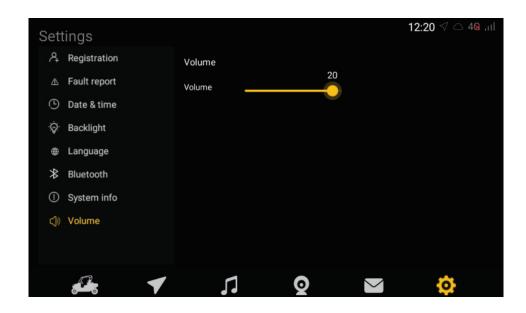

For additional details and information, please visit us at

MassimoElectric.com