



# ARCHERY GROUND BLIND INSTRUCTIONS

## WARNINGS

- For your safety be sure to read all instructions carefully.
- Do not allow open flames or other sources of ignition to come in contact with the material of this hunting blind.
- Do not use a heater in the blind. Unvented fumes can cause sickness or death.
- Do not shoot a firearm through the shoot through screens. The muzzle flash could ignite the screen material.
- Do not use expandable broadheads with shoot through screens. The blades may open prematurely. Use fixed blade broadheads only.
- Do not allow children to play with this blind without adult supervision.

## CONTENTS

- Blind Carry Bag
- Hunting Blind
- Instruction Sheet
- Ground Stake Bag
- (8) Ground Stakes
- (4) Tie Down Cords



## SETUP UP INSTRUCTIONS

STEP 1: Remove your blind from the carry bag and lay it on the ground.

STEP 2: Spread out the corners of the blind to locate the center hub on the ROOF of the blind.

STEP 3: Firmly pull the strap attached to the center hub ring until the ROOF pops out.

STEP 4: Locate the center hub on one of the WALLS and firmly pull the hub until the WALL pops out.

STEP 5: Continue around the blind, pulling the hubs one at a time until all four WALLS are set up. The blind is now ready for use. (Optional ground stakes are included to secure your blind to the ground.)





**STEP 3**



**STEP 5**



**STEP 6**

## TAKE DOWN INSTRUCTIONS

STEP 1: Close all the windows, but leave the door unzipped.

STEP 2: Remove any stakes and tie down ropes

STEP 3: Using your hand, push on the hub in the center of one of the WALLS until it disengages

STEP 4: Repeat step 4 on the remaining WALLS, and the blind will begin to collapse.

STEP 5: Once all the WALLS have collapsed, push on the center hub of the ROOF until the hub disengages.

STEP 6: With the blind laying on the ground, pick up the corners of the blind and fold inward. All the hubs will come together.

STEP 7: Place the blind in the carry bag with the hubs going into the bag first.

**⚠ WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

**⚠ WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). WASH HANDS AFTER USE. WAIVER OF LIABILITY: Use only as intended. The manufacturer assumes no responsibility for injury, damage or loss arising from the use of this product howsoever caused.

**Blind must never be packed while damp, as mildew will form within a few days.  
Allow to dry completely before collapsing and storing blind.**

**MUD**  **®**