


# 1/2" AIR DRILL

## EXPLODED VIEW SP-7527

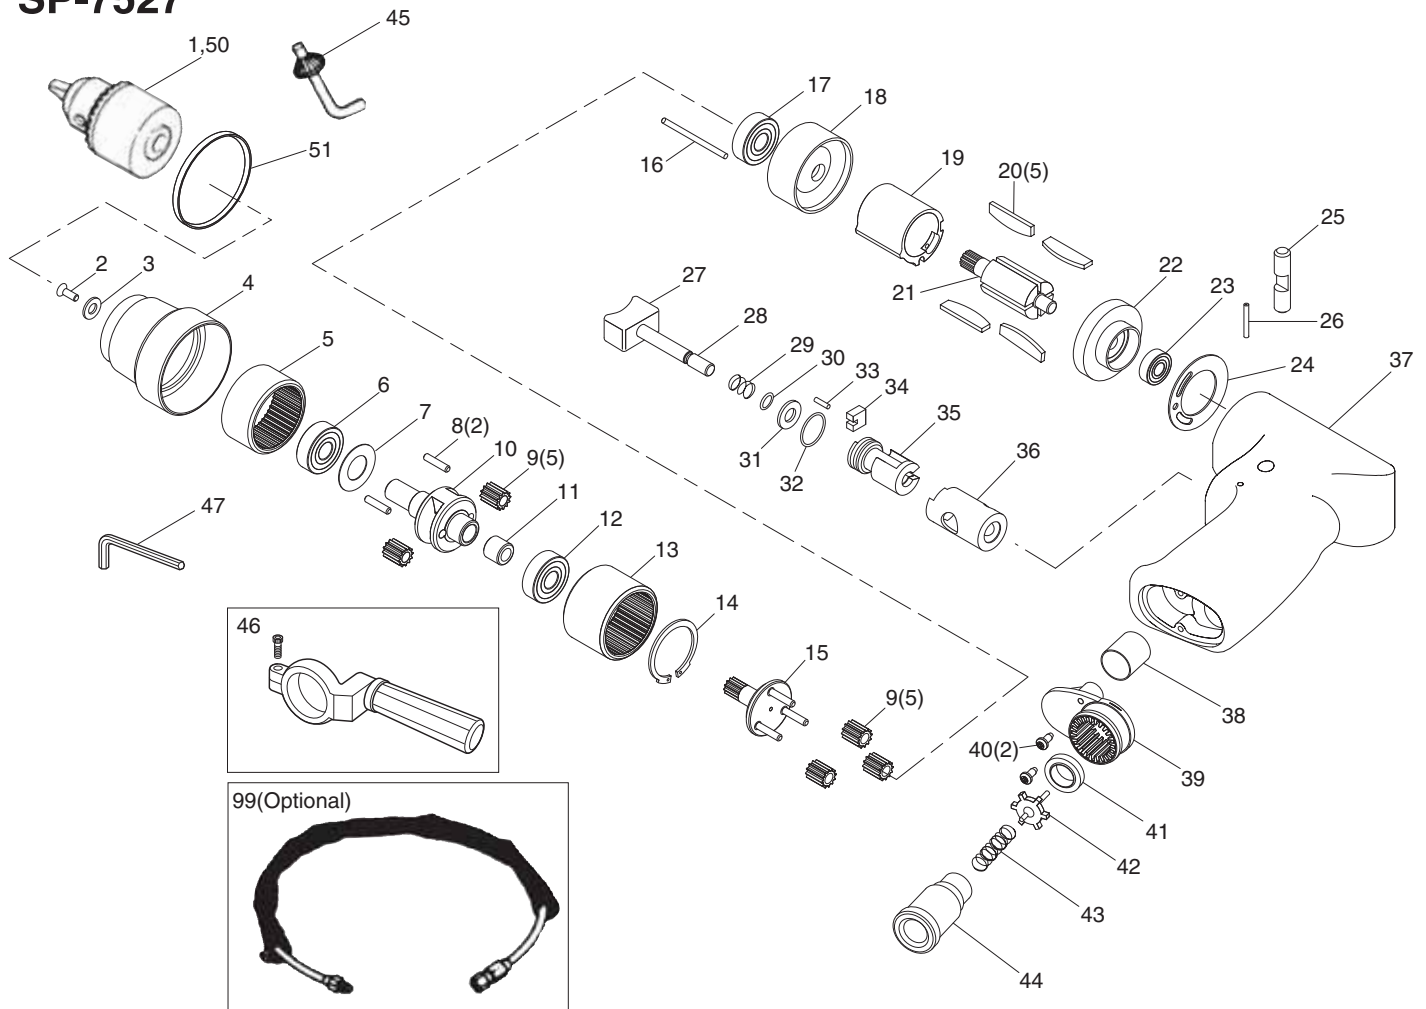

### PARTS LIST

Index No.	Parts No.	Description	Qty. Per tool
1	7527-01	Drill Chuck	1
2	7527-02	Screw	1
3	7527-03	Chuck Spacer	1
4	7527-04	Clamp Nut	1
5	7527-05	Internal Gear	1
6	7527-06	Ball Bearing	1
7	7527-07	Washer	1
8	7527-08	Planet Gear Pin	2
9	7527-09	Planet Gear	5
10	7527-10	Planet Carrier	1
11	7527-11	Needle Bearing	1
12	7527-12	Ball Bearing	1
13	7527-13	Internal Gear	1
14	7527-14	Retaining Ring	1
15	7527-15	Planet Carrier	1
16	7527-16	Motor Pin	1
17	7527-17	Ball Bearing	1
18	7527-18	Front End Plate	1
19	7527-19	Cylinder	1
20	7527-20	Rotor Blade	5
21	7527-21	Rotor	1
22	7527-22	Rear End Plate	1
23	7527-23	Ball Bearing	1
24	7527-24	Motor Gasket	1
25	7527-25	Reverse Button	1
26	7527-26	Roll Pin	1
27	7527-27	Trigger	1
28	7527-28	Valve Shaft	1
29	7527-29	Spring	1

Index No.	Parts No.	Description	Qty. Per tool
30	7527-30	O-Ring	1
31	7527-31	Washer	1
32	7527-32	O-Ring	1
33	7527-33	Needle Roller	1
34	7527-34	Slide Plate	1
35	7527-35	Reverse Valve	1
36	7527-36	Reverse Bush	1
37	7527-37	Motor Housing	1
38	7527-38	Silencer	1
39	7527-39	Deflector	1
40	7527-40	Screw	2
41	7527-41	Valve Seat	1
42	7527-42	Valve	1
43	7527-43	Valve Spring	1
44	7527-44	Air Inlet	1
45	7527-45	Chuck Key	1
46	7527-46	Handle Kit	1
47	7527-47	Hexagon Wrench	1
50	7527-50	Key Less Chuck	1
51	7527-51	Ring	1
99	7527-99	Exhaust Hose Set (Optional)	1