




45-0587 / 45-0588


15 / 25 GALLON SPRAYER


PRINTED IN USA FORM NO. 3-154 (09/21/21)

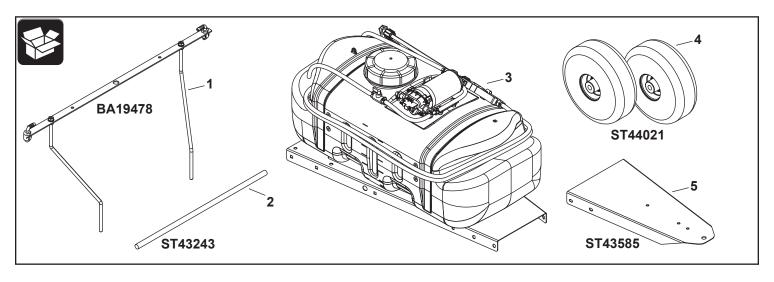


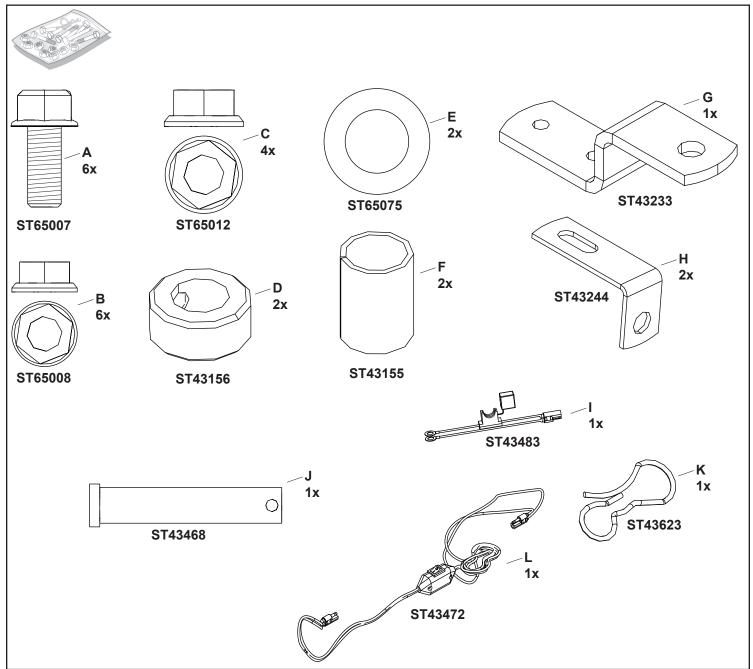


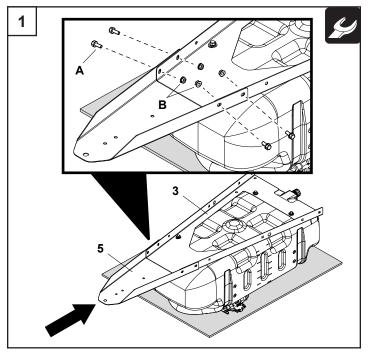


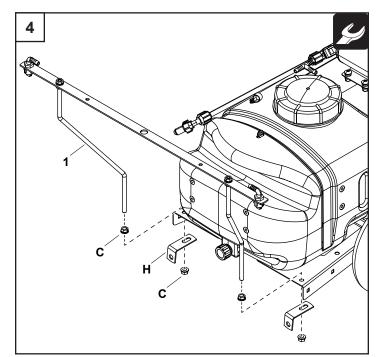


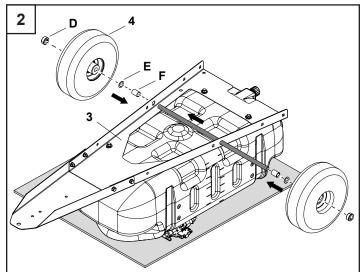


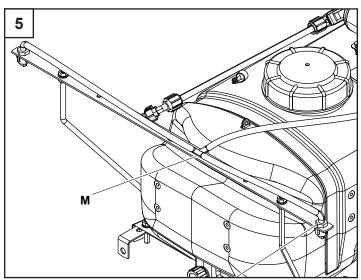

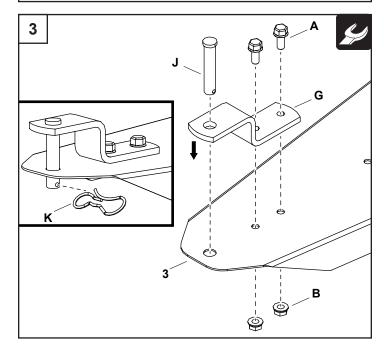

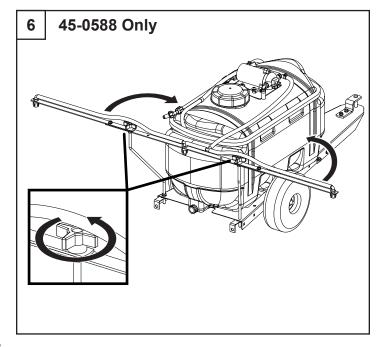

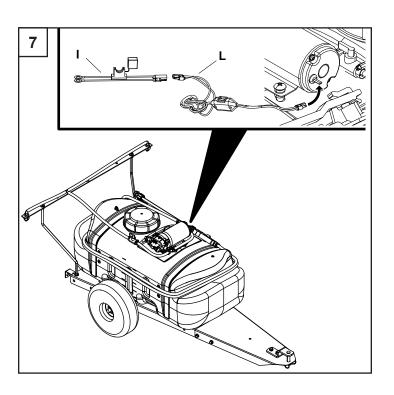

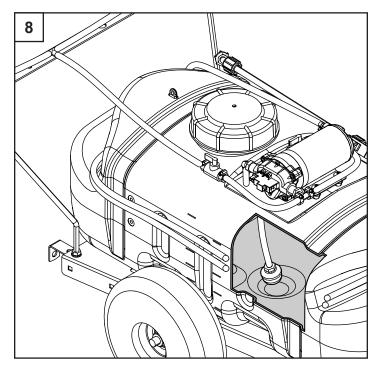

ENGLISH

SAFETY

- Read this owners manual and the vehicle owners manual before using this sprayer.
- 2. Never allow children to operate this sprayer.
- 3. Do not allow anyone to ride on or sit on this sprayer.
- 4. Keep the area clear of all persons, especially small children.
- 5. Read the chemical label before handling or mixing chemicals.
- 6. Wear eye and hand protection and protective clothing when handling and applying lawn chemicals.
- 7. Do not spray on windy days.
- 8. Be aware of your tractor's capabilities. Attaching this sprayer may affect your tractor's braking and stability.
- 9. STAY OFF STEEP SLOPES. Refer to the vehicle owner's manual concerning safe operation on slopes.
- 10. Operate at reduced speed on rough terrain, along ditches and on hillsides to prevent loss of control.

ASSEMBLY

The meanings of symbols used in the illustrations are as follows:

Do not tighten yet.



Tighten now.



OPERATION




CAUTION: Connect to a 12 V battery only.

PUMP PRESSURE SWITCH

The pump pressure switch turns off the pump when it reaches its maximum pressure setting. Very low flow demand may cause the switch to rapidly cycle the pump on and off. Rapid on and off cycling must be limited to no more than 6 times per minute. Cycling could cause the motor to heat beyond the recommended maximum temperature and reduce the operational life of the pump and pressure switch.

SPRAYER CONTROLS

Boom ON-OFF valve shuts off the flow to the boom nozzles Recirculation valve adjust spray wand pressure and recirculation of spray material to the tank.

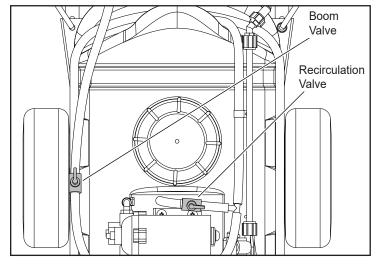

ADJUSTABLE SPRAY GUN NOZZLE

Twisting the nozzle will adjust the spray pattern from a cone shaped mist to a solid stream.


BEFORE STARTING

- 1. Attach the sprayer to the tractor hitch.
- 2. Connect the wire harness from the switch to the pump.
- Check for leaks using plain water. Fix leaking fittings with thread tape.USING THE SPRAYER



CAUTION: Wear eye and hand protection and protective clothing when handling and working with lawn chemicals.

- 1. Determine the application rate (gallons per 1,000 sq. feet) based on the chemical manufacturers recommendations.
- Estimate the size of the area to be sprayed and the amount of solution that will be needed. This can help avoid unneeded solution left in the tank.
- Refer to the application chart below to help determine the speed required to achieve the manufacturers recommended application rate.
- Use plain water to set the correct boom spraying pressure. Turn the boom valve to the "ON" position. If misting occurs, gradually start closing the valve until misting stops.
- Add the chemical solution to the tank, following the manufacturers recommendations.
- Unfold Boom arms (25 gallon model only). Check height of spray tips to ground (A) is approximately 17" (43 cm). If necessary, adjust boom height by raising or lower the boom on the threaded boom supports (B).

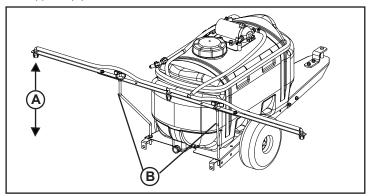

- Begin spraying, making each pass so that the spray pattern slightly overlaps the spray pattern from the previous pass.
- 8. Stay clear of flowers, shrubs and evergreen trees when spraying to prevent contact of the solution with these sensitive plants.

APPLICATION CHART

Sprayer	Tip Size	PSI	GMP One Nozzle
25 Gallon	TP11008VP	30	0.69
15 Gallon	IFIIUUOVF	35	0.75

Corovor	Gallons per 1000 Sq. Ft.				
Sprayer	2 mph	3 mph	4 mph	5 mph	6 mph
25 Gallon	1.57	1.05	0.78	0.63	0.52
15 Gallon	1.7	1.13	0.85	0.68	0.57

USING THE SPRAY GUN

1. Shut off the boom by turning the boom valve to "OFF".

SPRAYER RECIRCULATION

- 1. The sprayer is equipped with a recirculation valve to aid in material agitation and pressure control.
- 2. This valve is in the "open" position when the valve handle is in line with the hose (pictured), "closed" when perpendicular to the hose.
- Adjusting the recirculation valve between the open/closed positions will affect the pressure coming through the spray wand only.
- 4. Closed position is full pressure through spray wand or boom.
- It may be helpful to adjust the pressure when spraying with the spray wand to avoid damage to plants from excess pressure.
- This valve should be in the "closed" position when operating the boom.

MAINTENANCE

AFTER EACH USE

- Fill the sprayer part way with water and pump the water out through the boom assembly and the handgun. Use the handgun to wash the inside of the tank.
- 2. Refill the tank about half full with water and a chemical neutralizer solution and repeat the cleaning instructions above. Follow the manufacturers instructions for disposal of all chemicals.


AS NEEDED

- Periodically clean the tank strainer on the end of the intake hose. Remove the nylon swivel nut from the hose, pull out the screen and flush it with water.
- 2. Periodically clean the strainers in the boom nozzles. Remove the nozzle, pull out the screen and flush it with water.

WINTER STORAGE

- Drain all water out of the sprayer, especially the pump and handgun. These items are prone to damage from freezing temperatures.
- 2. Winterize the sprayer by pumping a 50-50 solution of water and R. V. antifreeze through the boom assembly and the hand gun.

45-0587 / 45-0588

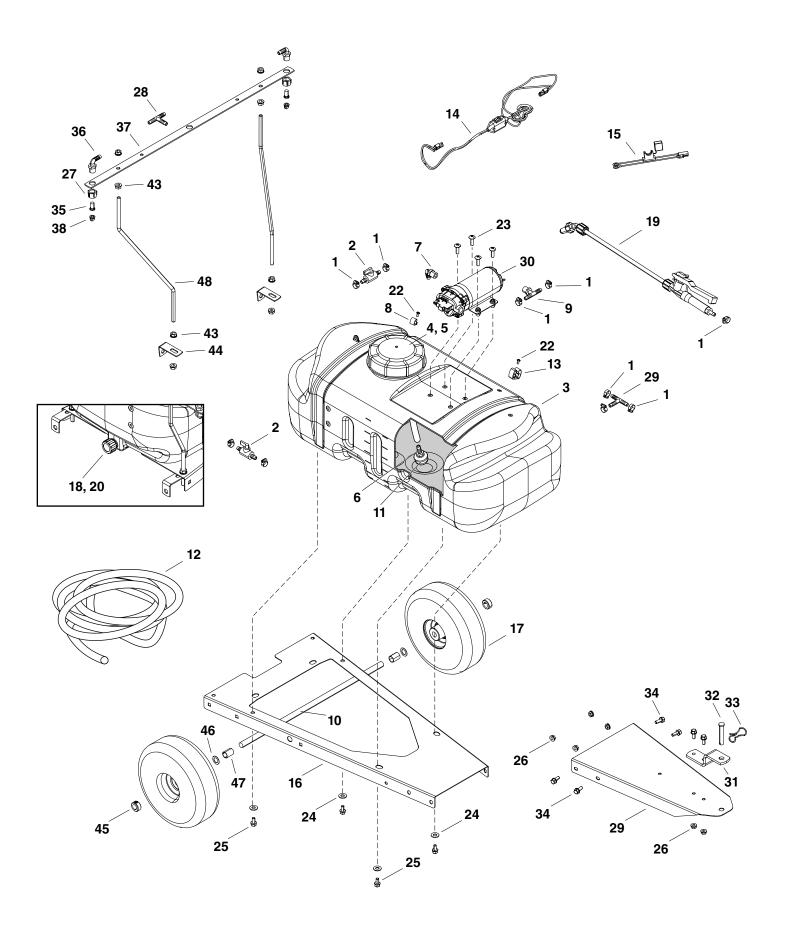

45-0587 / 45-0588

	PART NO.	QTY.	DESCRIPTION		PART NO.	QTY.	DESCRIPTION
1	ST43652	11	Hose Clamp, 1/2"	25	ST65011	4	5/16" x 5/8" flange bolt
2	ST43014	2	In line valve 3/8" barb	26	ST65008	6	5/16 Flange Nut
3	ST44020	1	15 Gallon Tank, White	27	ST43012	2	Tip Fiting Cap Nut
	ST43519	1	25 Gallon Tank, White*	28	ST43013	1	Tee 3/8" barbs
4	ST43175	1	Tank fill cap	29	ST43585	1	Hitch triangle
5	ST44017	1	Lanyard for Tank Fill Cap*	30	ST43918	1	Pump 12V, 100psi, 2.2gpm
6	ST43182	1	Sump fitting 3/8" barb	31	ST43233	1	Hitch Clevis
7	ST43183	1	Elbow 3/8" MP - 3/8" barb	32	ST43468	1	Hitch Pin
8	ST43191	1	Hose holder 3/8"	33	ST43623	1	Bowtie Clip, Large
9	ST43235	1	Tee 3/8" barb - 3/8" barb - 3/8" MP	34	ST65007	6	5/16 x 3/4 Flange Bolt
10	ST43243	1	Axle 5/8"	35	ST43016	2	Spray Tip Screen
11	ST43258	1	Sump strainer 3/8"	36	ST43011	2	3/8" Elbow Fitting w/Nut
12	ST43286	25	3/8" hose, 3/8" ID, 200 psi, black EPDM	37	ST43169	1	Boom
13	ST43287	1	Spray wand holder, large	38	ST43466	2	Spray Tip, 11008EVS
14	ST43472	1	Wire harness, switch	39	ST43170	2	Side Boom* (25 Gallon)
15	ST43483	1	Wire harness, battery	40	ST43289	2	3/8 Plastic Knob* (25 Gallon)
16	ST43508	1	Main frame	41	ST65031	2	5/16 x 1/2 Carriage Bolt* (25 Gallon)
17	ST44021	2	Wheel-tire assembly (4.10/3.50-4" 10in Tire, 5/8 Roller Bearing, Grey Rim)	42	ST43192	1	3/8 Barbed Tee, w/ Nut* (25 Gallon)
18	ST43516	1	Drain cap	43	ST65012	8	3/8 Flange Nut
19	ST43673	1	Spray wand with brass tip	44	ST43244	2	Tank / Parking Support
20	ST43684	1	Washer for drain cap*	45	ST43156	2	5/8 Locking Collar
21	ST43844	2	Grommet 5/8 ID, 1-1/8 OD, 7/8 Groove*	46	ST65075	2	5/8 Shim Washer
22	ST65000	2	10-24 x 3/8" truss head screw	47	ST43155	2	5/8 x 1 Axle Spacer
23	ST65001	4	10-24 x 1" truss head screw	48	ST43532	2	Boom Support Rod
24	ST65003	4	3/8" washer (M10)	49	3-154	1	Owners Manual*

ADDITIONAL SERVICE PARTS

PART NO.	DESCRIPTION
ST43921	Pump Head Service Kit
ST44031	Pump Pressure Switch
ST43466	Spray Tip, 11008EVS
ST43012	Spray Tip Cap Nut
ST43016	Spray Tip Screen
ST43124	Spray Wand Valve/Handle
ST43514	Spray Wand Brass Tip
ST43515	Spray Wand Extension
ST50749	Fuse 32V 15A ATO/ATC

SpeedEPart the fastest way to purchase parts www.speedepart.com

REPAIR PARTS

Agri-Fab, Inc. 809 South Hamilton Sullivan, IL. 61951 217-728-8388 www.agri-fab.com

This document (or manual) is protected under the U.S. Copyright Laws and the copyright laws of foreign countries, pursuant to the Universal Copyright Convention and the Berne convention. No part of this document may be reproduced or transmitted in any form or by an means, electronic or mechanical, including photocopying or recording, or by any information storage or retrieval system, without the express written permission of Agri-Fab, Inc. Unauthorized uses and/or reproductions of this manual will subject such unauthorized user to civil and criminal penalties as provided by the United States Copyright Laws.