




## **Manual Instruction**

Food Slicing

SKU#: 1A-FS205Q

120V~60Hz, KB10min 180W

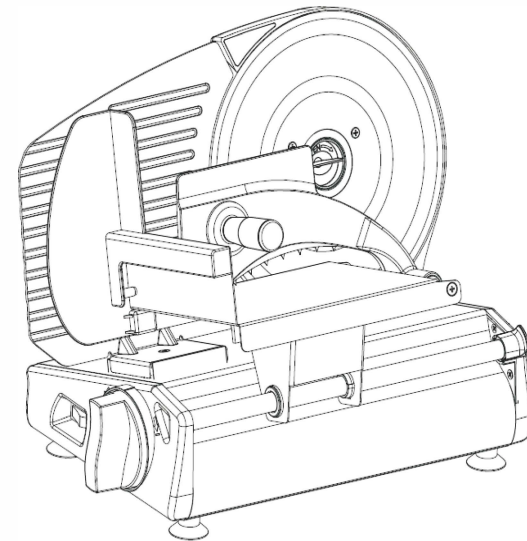

**HOUSEHOLD USE ONLY**

## CONTENTS

|                             |     |
|-----------------------------|-----|
| PRODUCT PARTS .....         | 2   |
| IMPORTANT SAFEGUARDS.....   | 3   |
| OPERATION INSTURCTIONS..... | 4-5 |
| CLEAN AND MANTIANANCE.....  | 6   |

## CLEAN AND MANTIANANCE

### Important safety advice for cleaning the slicer

1. Before starting to clean the slicer, switch it off, pull the plug out of the mains socket and set the food support plate into the "P" setting.
2. Do not immerse the slicer in water.
3. Danger of injury: the cutting blade is very sharp!  
It is necessary to clean the slicer at regular intervals as perishable food scraps could accumulate on the slicer or behind the cutting blade .Remove the piece holder and clean it in warm water and washing –up liquid (not in the dishwasher). Wipe the housing<sup>1</sup> and sliding feed table using a slightly damp cloth. Do not use any cleaning powders, scouring pads or hard brushes.
4. If it is necessary to removing the food carriage bar and cleaning the food carriage, please switch it off, pull the plug out of the main socket and set the food support plate into the "0" setting. Push the button per Figure 1, take the food carriage bar. Before running the machine, making sure that the food carriage has been assembled correctly.

Figure1



Slide carriage release button to right to release carriage rod

### Removing the cutting blade

Rotate the locking piece in blade center clockwise, then pull out the blade When taking out the blade make sure that you handle it by the center. Wash it by hand in warm water with a little washing-up liquid (not in the dish washer!). Clean the housing behind the blade with a dry cloth or a soft brush.

- slicer for slicing deep-frozen foods, bones, foods with large kernels or for slicing packaged foods.
4. Never use the slicer for more than 10 minutes continuously.
  5. The cutting blade<sup>3</sup> continues to rotate after the slicer has been switched off.
  6. For reasons of safety the slice thickness must be returned to the “0” setting after use.

#### Running the slicer

Pushing the switch to “ON”, the cutting blade runs. Stopping continuous operation: Move the switch quickly into the “OFF” position and wait until the cutting blade comes to a complete standstill.


#### Setting the slice thickness

The slice thickness can be set to between 0 and approx.15mm. Set the required slice thickness using the knob<sup>7</sup>. The settings on the scale do not correspond with the slice thickness in mm. For safety reasons the blade is covered in setting “P”.

Place the food to be sliced on to the sliding feed table, press the food to be sliced with the piece holder<sup>5</sup> lightly against the food support plate<sup>6</sup>. Switch the device on and, whilst lightly pressing the food to be sliced forward, guide it along the cutting blade<sup>3</sup>. After using the slicer always set the food support plate into the “P” setting so that the sharp blade is covered. The cutting blade<sup>5</sup> is ideally suitable for cutting wafer-thin slices of cold cuts of boiled ham .

To safeguard your fingers always use the sliding feed table<sup>4</sup> and the piece holder<sup>5</sup> (except perhaps when slicing large pieces of food).

## PRODUCT PARTS

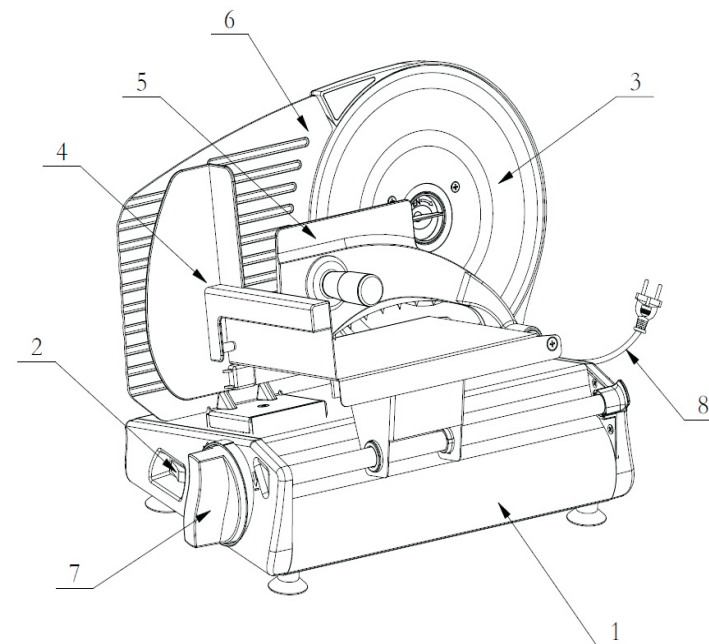

| Part# | Description        | Qty. | Part# | Description              | Qty. |
|-------|--------------------|------|-------|--------------------------|------|
| 1     | Housing            | 1    | 5     | piece holder             | 1    |
| 2     | Switch             | 1    | 6     | Food support plate       | 1    |
| 3     | Cutting Blade      | 1    | 7     | Knob for slice thickness | 1    |
| 4     | Sliding feed table | 1    | 8     | plug                     | 1    |

## IMPORTANT SAFEGUARDS

1. The slicer must be connected to a 110-120V AC electricity supply only.
2. Always pull the plug out from the socket before you are cleaning the slicer, if something becomes faulty, or when you have finished using it .To disconnect the device from the electricity supply, never pull the plug out using the chord, always pull directly from the plug.
3. Indoor use only. Never immerse the device in water or expose the device to rain or moisture .If the device should fall into water first pull the plug out of the socket and only then remove the device from the water. Afterwards have the slicer examined by an authorized service center before you use it.
4. Do not use the slicer if your hands are wet or if you are standing on a wet floor. Do not use the slicer if it is wet or moist.
5. The slicer is designed exclusively for domestic use and not for commercial purposes.
6. Set up and store the slicer out of reach of children.
7. Do not leave the slicer unattended if it can be switched on and operated.
8. Always ensure that the slicer is safely set up or installed before you start to use it
9. The slicer should always be used with the sliding feed table and piece holder in position, unless this is not possible due to the size or shape of the food. Do not use the slicer to slice through bones or deep-frozen foods.
10. Do not use the slicer if it is damaged in any way. Have the slicer immediately repaired at an authorized service center or other suitably qualified repairer.
11. Use the slicer with the supplied accessories only.
12. No claims under the guarantee or liability for damages will be accepted if they result from improper/incorrect use of the slicer.
13. Switch off the slicer before using knives around machine..
14. If the supply cord is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified persons in order to avoid a hazard.
15. Always disconnect the appliance from the supply if it is left unattended, before assembling, disassembling, or cleaning.
16. This appliance should not be operated by children. Keep the appliance and its cord out of reach of children.
17. Appliances can be used by persons with reduced physical sensory or mental capabilities, if they are given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
18. Children should not play with the appliance.

**SAVE THESE INSTRUCTION**

## OPERATION INSTURCTIONS

Before using the slicer for the first time please make sure to read carefully and thoroughly through these operating instructions and the safety advice and familiarize yourself completely with the functions of the device .You will find it useful to open out the page showing the figures illustrating the slicer and its operation. Be careful to keep these notes and if necessary pass them on to a third party.

### Proper use

This device is intended exclusively for slicing normal household foods. The food to be sliced must be thawed, unpacked and free from bones before it can be sliced in the device.

Any other use or modification to the equipment shall be considered as improper use and could give rise to considerable dangers.

### Technical information

**Nominal voltage:** 120V, 60Hz, KB 10min Before using, machine should cool for 30min

**Power rating:** 180 W

**Cutting blade:** reinforced, non-rusting fine blade, 19cm

### Before first use

Take the slicer carefully out of its packaging. Remove all the packaging material and keep it together with the packaging. Clean the slicer before it comes into contact with any food (refer to the section headed 'Cleaning')

### Setting up the slicer

#### Specific safety advice on the location of the slice

1. Never set the slicer up on a hot surface or near an open flame.
2. Make sure that the mains lead does not pass over hot or sharp –edged objects
3. Do not allow the mains lead to become kinked or trapped and do not wind it around the slicer .
  - ◆ Set up the slicer on a flat, non-slip surface close to an electrical socket.
  - ◆ Unwind the required length of mains lead, Insert the plug into the mains socket.
  - ◆ Push the piece holder<sup>5</sup> on to the sliding feed table<sup>4</sup>.

### Slicing

#### Specific safety advice for slicing and for handling the slicer

1. Never touch the blade when the slicer is operating! Danger of injury!
2. Always use the piece holder (except perhaps for very large pieces of food). Press the piece of food to be sliced forward using the piece holder.
3. Use the slicer only for slicing normal household foods and not other purposes. Do not use the