

IMPORTANT SAFETY INSTRUCTIONS

Read and save these instructions:

WARNING: To reduce the risk of electric shock and injury to persons only install and use this Jan Fan motor with Jan Fan branded guards, blades, and mounting. Other non-Jan Fan branded guards, blades, or mounting cannot be substituted.

WARNING: Unplug or disconnect the fan from power supply before cleaning or servicing.

WARNING: To reduce the risk of fire or electrical shock do not use this fan with any solid state speed control device.



CONSIGNES DE SÈCURITÈ IMPORTANTES

Lisez et mettez de côté les instructions suivantes:

MISE EN GARDE: Pour réduire de choc électrique ou de blessure à la personne, installer ou utiliser le ventilateur JAN FAN seulement avec les gardes, les lames et les supports fabriqués seulement par JAN FAN. PAS DE SUBSTITIONS OU DE REMPLACEMENT.

MISE EN GARDE: Dèbrancher et dèconnecter alimentation le ventilateur JAN FAN avant de nettoyer ou d'entrettenir.

MISE EN GARDE: Pour réduire le risquè d'incendie ou choc électrique, n'utilisez pas ce ventilateur avec un ètat solide dispositife de contrôle de Vitesse.




IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



MODEL # JF-110V-HEM-DCS (MOTOR ASSEMBLY)

ASSEMBLY INSTRUCTIONS:

*To Extend Drop Cord Length of Remote Switch Order 3', 6', or 12' Extension Cord Model # JF-DCS-EXT 3, Model # JF-DCS-EXT 6, or Model # JF-DCS-EXT 12 (Not Shown)

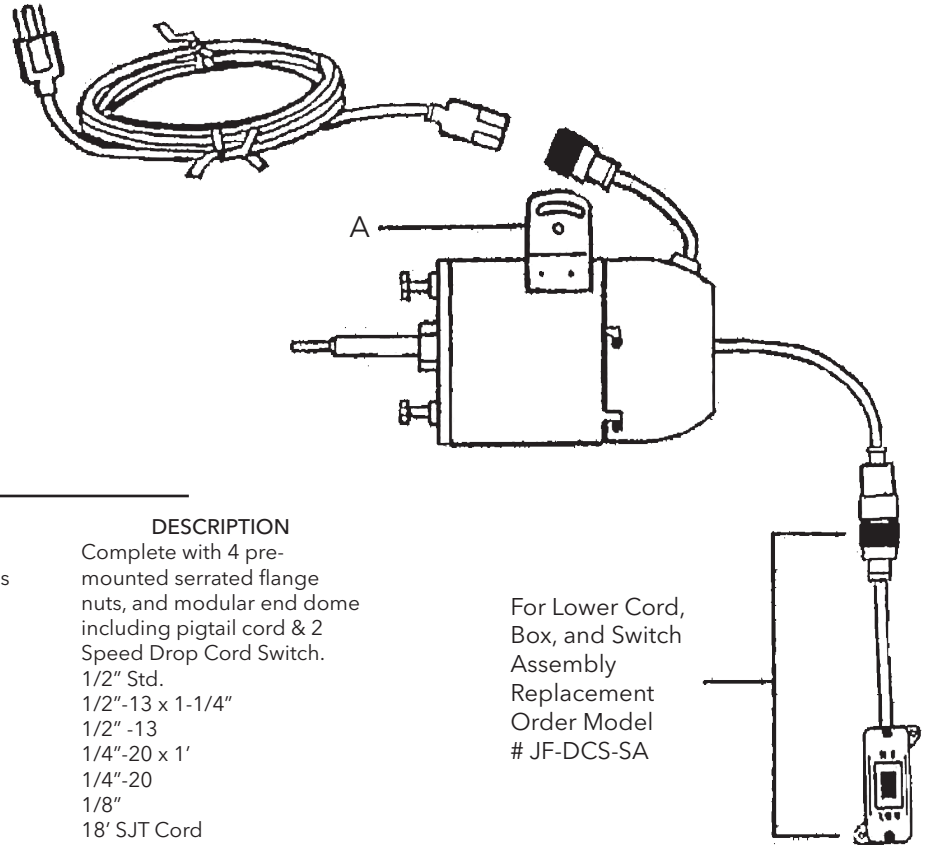

For Lower Cord, Box, and Switch Assembly Replacement Order Model # JF-DCS-SA

CONTENTS OF THIS CARTON INCLUDE:


QUANTITY	ITEM	DESCRIPTION
1	1/4 Motor and Pre-mounted Accessories	Complete with 4 pre-mounted serrated flange nuts, and modular end dome including pigtail cord & 2 Speed Drop Cord Switch.
1	Split Washer	1/2" Std.
1	Bolt, Hex Head	1/2"-13 x 1-1/4"
1	Nut, Hex	1/2" -13
1	Bolt, Hex Head	1/4"-20 x 1'
1	Serrated Flange Nut	1/4"-20
1	Allen Wrench	1/8"
1	Power Cord	18' SJT Cord

ASSEMBLY INSTRUCTIONS

Slide Motor Mounting bracket (A) onto selected mount. Secure in place with 1/2" bolt, washer, and nut. Adjust angle of motor and securely tighten. Slide 1/4"-20 x 1" bolt through adjustment slot and add 1/4"-20 nut and tighten securely. For attachment of fan guard unit, see instructions packed in guard/blade carton.

WARNING

A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK.

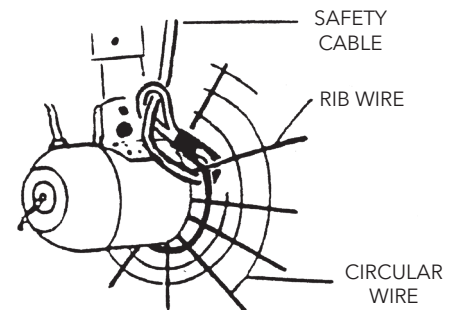


IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



MODEL # JF-110V-HEM (MOTOR ASSEMBLY)

ASSEMBLY INSTRUCTIONS:

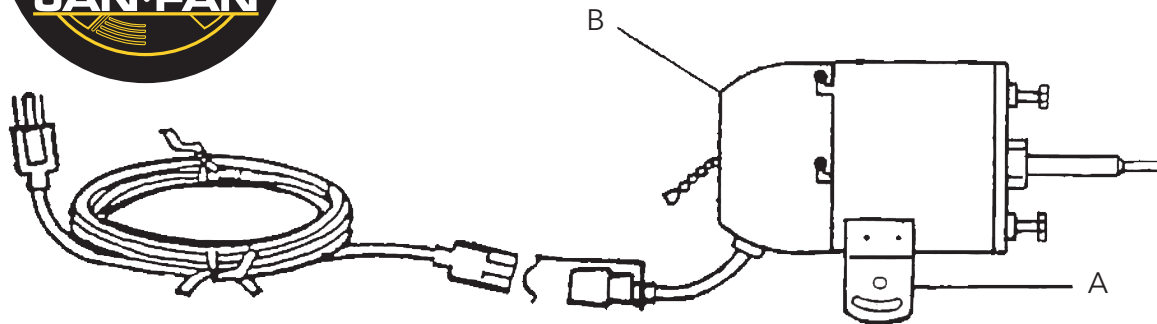

CONTENTS OF THIS CARTON INCLUDE:

QUANTITY	ITEM	DESCRIPTION
1	1/4 Motor and Pre-mounted Accessories	Complete with 4 pre-mounted serrated flange nuts, and modular end dome including pigtail cord & pull chain switch
1	Split Washer	1/2" Std.
1	Bolt, Hex Head	1/2"-13 x 1-1/4"
1	Nut, Hex	1/2" -13
1	Eye Bolt	1/4"-20 x 1"
2	Serrated Flange Nut	1/4"-20
1	Key (taped to motor)	1/8"x1/8"x 1-1/8"
1	Allen Wrench	1/8"
1	Extension Cord	18' SJT Cord

ASSEMBLY INSTRUCTIONS


Slide motor mounting bracket (A) onto selected mount. Secure in place with 1/2" bolt, washer, and nut. Adjust angle of motor and securely tighten. Add 1/4"-20 nut to eyebolt (safety chain attachment) with hex side toward eye. Slide through adjustment slot and add 1/4"-20 nut and tighten securely. For attachment of fan guard unit, see instructions packed in guard/blade carton.

CHANGING MODULAR DOME

The Modular End dome (B) which houses the capacitor, switch, and pigtail cord can be purchased for quick modular replacement of these components. Order Model #JF-MMS-HE.

WARNING

A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK.

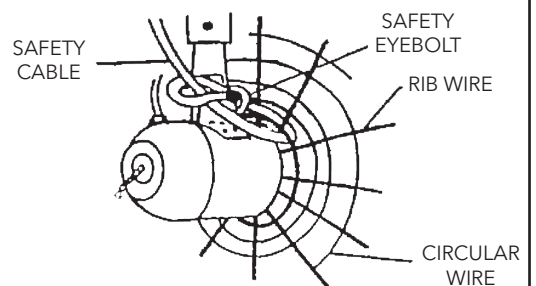

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS




MODEL # JF-230-DCS 50HZ (MOTOR ASSEMBLY)

ASSEMBLY INSTRUCTIONS:

*To Extend Drop Cord Length of Remote Switch Order 3', 6', or 12' Extension Cord Model # JF-DCS-EXT 3, Model # JF-DCS-EXT 6, or Model # JF-DCS-EXT 12 (Not Shown)

CONTENTS OF THIS CARTON INCLUDE:

QUANTITY	ITEM	DESCRIPTION
1	1/4 Motor and Pre-mounted Accessories	Complete with 4 pre-mounted serrated flange nuts, and modular end dome including pigtail cord & 2 Speed Drop Cord Switch.
1	Split Washer	1/2" Std.
1	Bolt, Hex Head	1/2"-13 x 1-1/4"
1	Nut, Hex	1/2" -13
1	Bolt, Hex Head	1/4"-20 x 1'
1	Serrated Flange Nut	1/4"-20
1	Allen Wrench	1/8"
1	Power Cord	18' SJT Cord

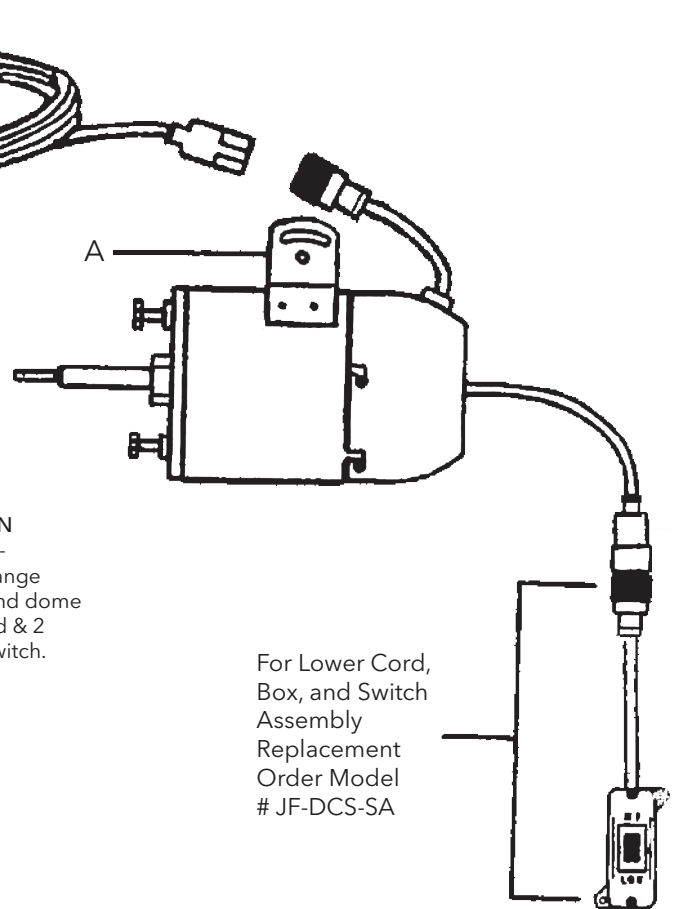


ASSEMBLY INSTRUCTIONS

Slide Motor Mounting bracket (A) onto selected mount. Secure in place with 1/2" bolt, washer, and nut. Adjust angle of motor and securely tighten. Slide 1/4"-20 x 1" bolt through adjustment slot and add 1/4"-20 nut and tighten securely. For attachment of fan guard unit, see instructions packed in guard/blade carton.

WARNING

A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK.

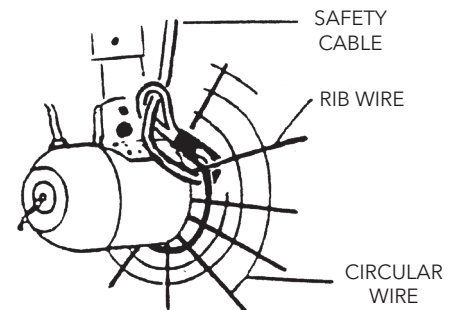



IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

**MODEL # JF-20GB, #JF-24GB, AND #JF-30GB
INSTRUCTIONS FOR RAPID ASSEMBLY OF 20", 24", AND 30"
HINGED GUARD AND BLADE TO MOTOR**



EACH GUARD AND BLADE SET CONTAINS

- 1 FRONT AND 1 REAR GUARD
- 4 SAFETY HINGE PINS *
- 1 STEEL FAN BLADE

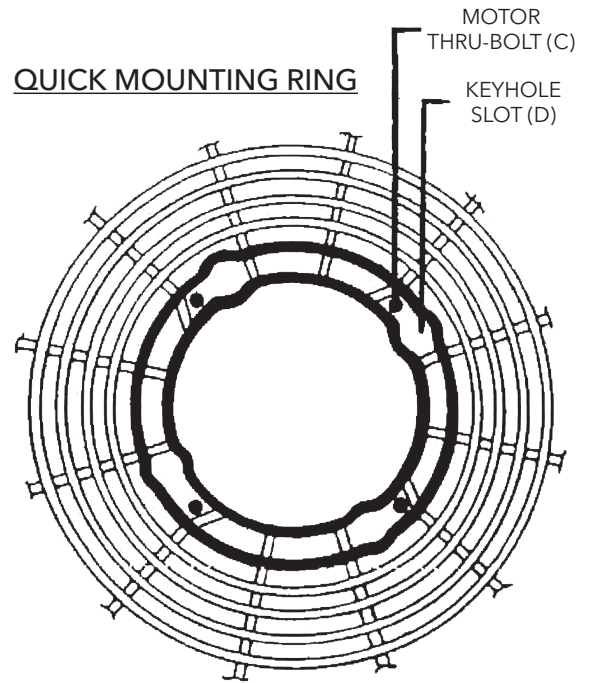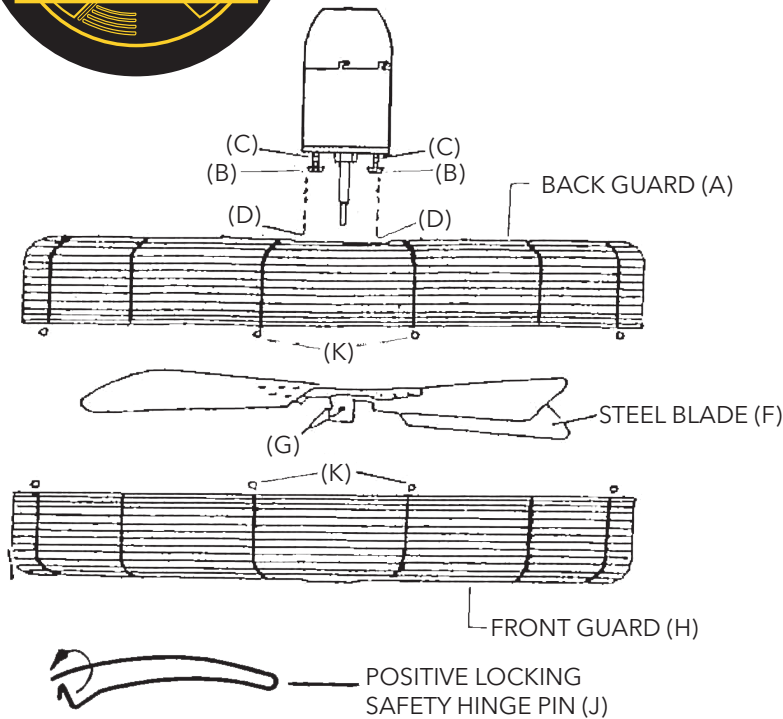


- Fasten front guard (H) to back guard (A) by inserting four* safety hinge pins (J) (each through two hinge pin loops (K) on front guard and two hinge pin loops on rear guard) thereby joining securely front guard to rear guard. Close safety hinge pins as they are installed.
- Front guard is now securely fastened to rear guard.
- By removing all but one safety hinge pin it will then act as a hinge for ease of cleaning or replacing the blade.

- Install back guard (A) which has four keyhole slots (D) over the four serrated flange nuts (B) that are pre-mounted on motor thru-bolts (C).
- Turn guard clockwise so that motor thru-bolts are at small end of keyhole slots.
- Tighten all four serrated flange nuts. Rear guard is now securely fastened to motor.
- Slide blade (F) over shaft with hub away from motor. So that the blade centers properly in the guard, the 20" and 30" Blade Hub should be pushed to the rear limit of the 1/2" portion of the shaft. The 24" Blade Hub should be at the front limit of the 1/2" portion of the shaft. Tighten set screws (G) securely.
- See instructions sheet packed with Motor for recommended use of safety cable.

HINGING GUARD

SAFETY HINGE PIN (J)

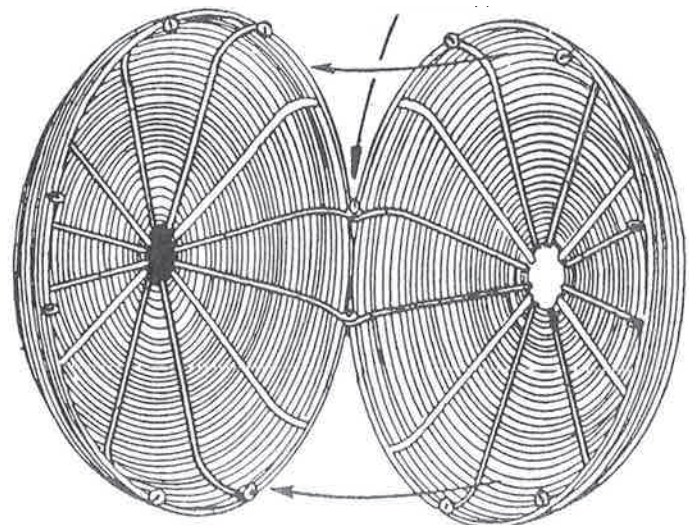

* 20" Guard has only 3 safety hinges pins

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

MODEL # JF-AK (ADAPTOR KIT)

(USED WHERE USER PREFERS TO DESIGN THEIR OWN MOUNT USING 1-1/2" PIPE)


ASSEMBLY INSTRUCTIONS:



CONTENTS OF THIS CARTON INCLUDE:

- Motor Adaptor with Set Screw
- 3 Nylon Ty-Wraps

THREE NYLON TY-WRAPS

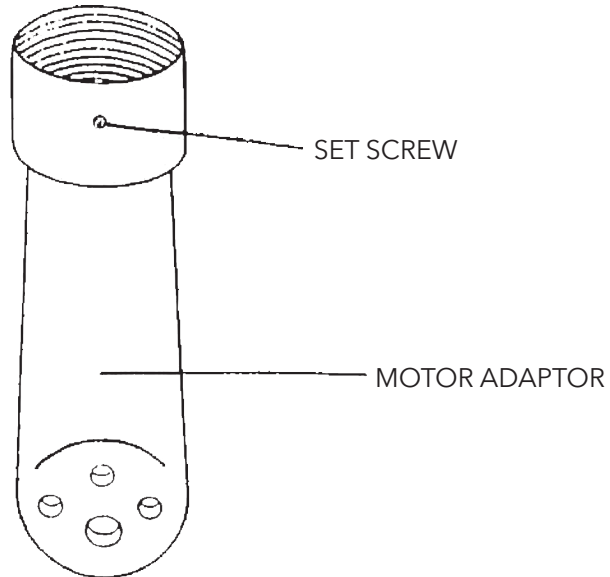

ASSEMBLY INSTRUCTIONS

Screw Motor Adaptor securely into 1-1/2" rigid pipe with male thread (furnished by user).

IMPORTANT: **WRENCH TIGHTEN ADAPTOR KIT ONTO RIGID PIPE TO ACHIEVE COMPLETE THREAD ENGAGEMENT (Lubricate if necessary).** Make sure that motor adaptor completely covers all pipe threads.


Following instructions in motor carton, mount motor to motor adaptor.

Following instructions in blade and guard carton, mount blade and guard to motor. After aiming fan in desired direction, tighten set screw securely against male pipe thread.

Use 3 nylon ty-wraps to route cord away from fan.

WARNING


A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK.

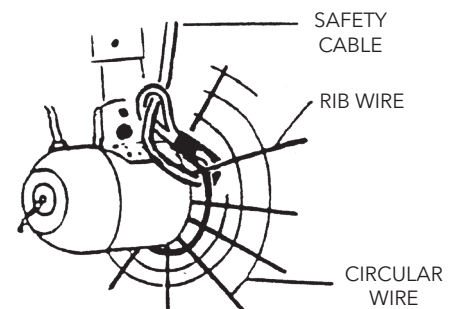

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

MODEL # JF-BM (I - BEAM MOUNT)

ASSEMBLY INSTRUCTIONS:

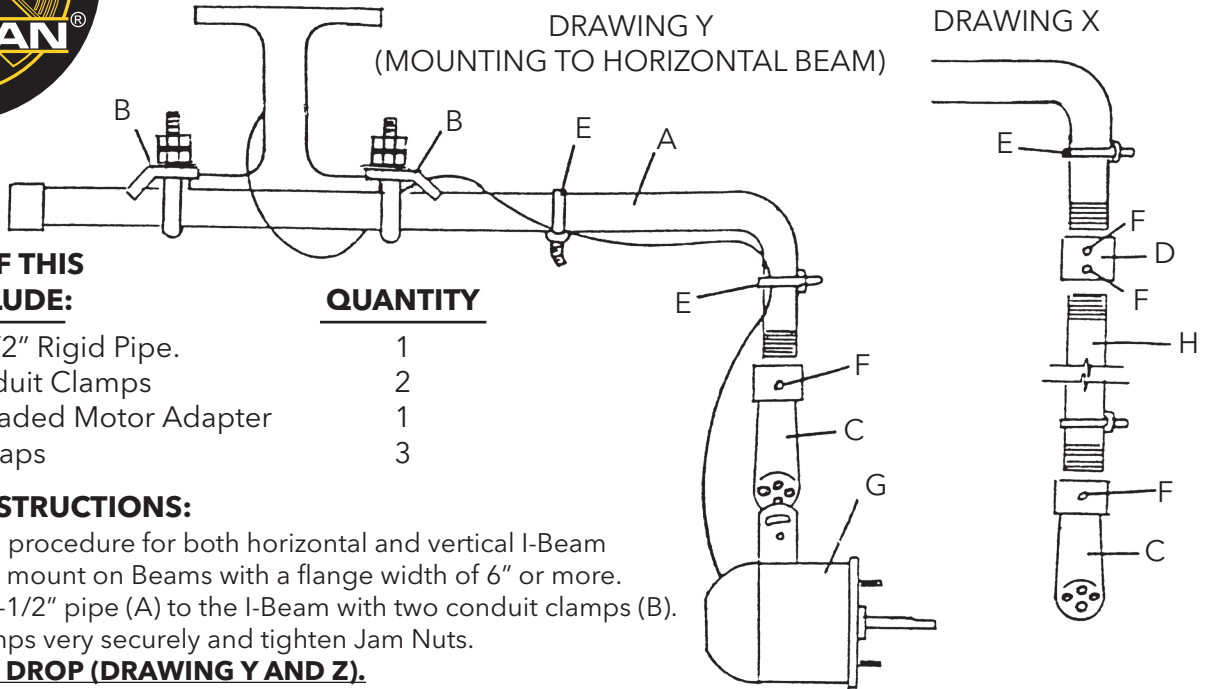

CONTENTS OF THIS CARTON INCLUDE:

	<u>QUANTITY</u>
A - 36" Long 1/2" Rigid Pipe.	1
B - 1-1/2" Conduit Clamps	2
C - 1-1/2" Threaded Motor Adapter	1
E - Nylon Ty-wraps	3

ASSEMBLY INSTRUCTIONS:


- Follow same procedure for both horizontal and vertical I-Beam mount. Only mount on Beams with a flange width of 6" or more.
- Mount the 1-1/2" pipe (A) to the I-Beam with two conduit clamps (B).
- Tighten clamps very securely and tighten Jam Nuts.

- FOR NORMAL DROP (DRAWING Y AND Z).

- 1. Screw motor adapter (C) securely onto 1 1/2" rigid pipe (A). Make sure that Motor Adapter completely covers all pipe threads. (Wrench tighten and lubricate if necessary.)
- 2. Following instructions in guard/blade carton, mount blade and guard to motor.
- 3. Following instructions in motor carton, mount motor (G) to adapter (C).
- 4. After aiming fan in desired direction, tighten all set screws (F). Make sure set screws engage pipe threads.
- 5. Use three nylon ty-wraps to route cord away from fan.
- 6. Plug power cord into 115 volt, a.c., 60 Hz grounded outlet.


- FOR GREATER DROP (DRAWING X) FROM OVERHEAD HORIZONTAL BEAM.

- Screw 1-1/2" coupling (D)* onto 1-1/2" rigid pipe (A) and thread on securely.
- Acquire 1-1/2" rigid pipe (H), cut to length you desire, and thread both ends.
- Screw rigid pipe securely into coupling (D). *
- Screw motor adapter (C) onto rigid pipe (H). Make sure that motor adapter completely covers all pipe threads.
- Follow steps 2 through 6 (above).

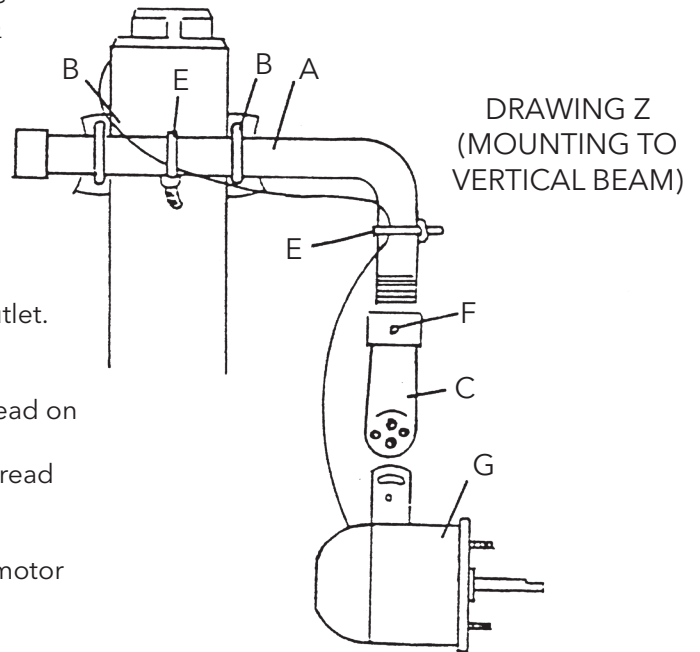

WARNING

A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK. Do not use beam clamps where surface contact between pipe and mounting structure is less than 6 inches.

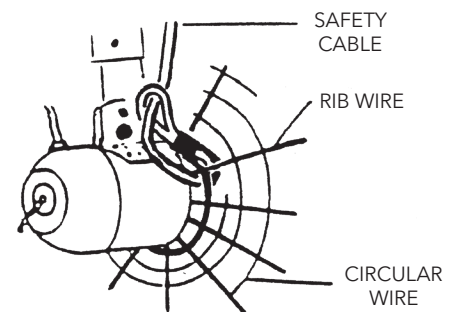

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS


MODEL # JF-WCM (WALL OR CEILING MOUNT)

ASSEMBLY INSTRUCTIONS:





CONTENTS OF CARTON:

QUANTITY	DESCRIPTION
1	Wall/Ceiling Mount
1	Swivel Bracket
1	4x14 - 7/16 Hex Bolt
1	Hex Reversible Lock Nut

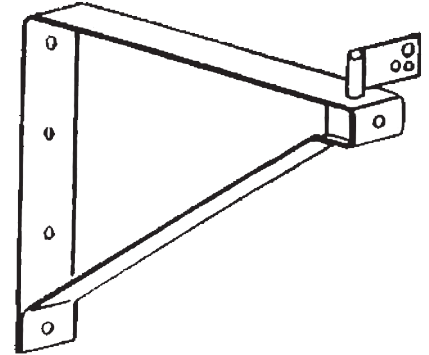


ASSEMBLY INSTRUCTIONS

Assemble the Wall/Ceiling Mount with the Swivel Bracket as shown in the appropriate illustration below. Secure the assembled, Wall/Ceiling Mount VERY SAFELY (as determined by user) to structural wall, ceiling, or steelwork by using all four (4) mounting holes in the bracket. Follow instructions in motor carton to mount fan to bracket mount. After aiming fan in desired direction, tighten all mounting hardware very securely.

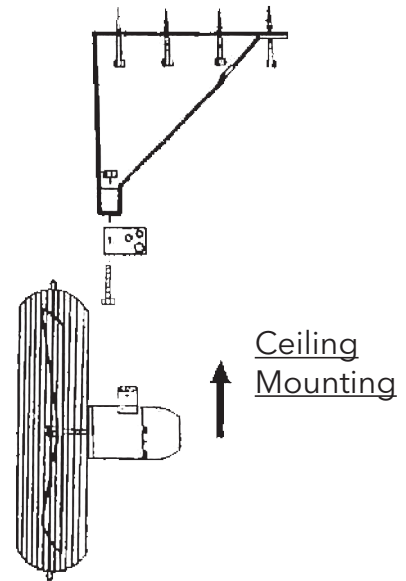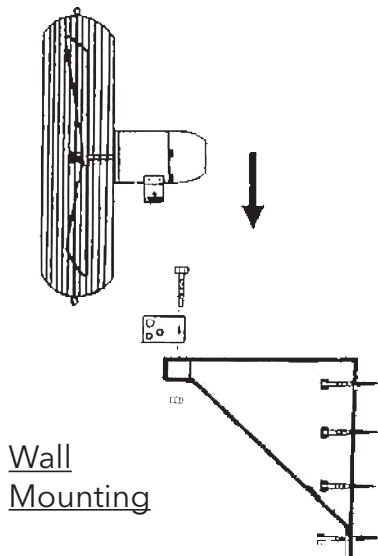

WARNING

A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard near motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For extended vertical drops of fan mounting loop & clamp cable tight around top of rigid pipe fan support to keep fan support arm from falling down in case of arm mounting failure. For optional Safety Cable Kit order Model #JF-SCK. Do not use beam clamps where surface contact between pipe and mounting structure is less than 6 inches.

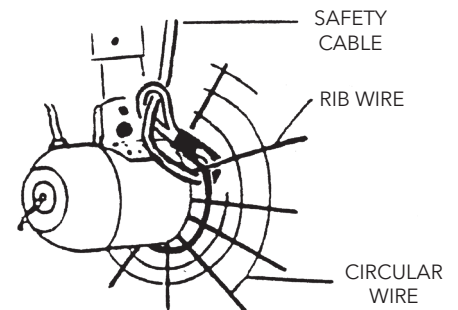

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



**MODEL # JF-PB (PEDESTAL BASE)
AND # JF-PC (PEDESTAL COLUMN)
ASSEMBLY INSTRUCTIONS:**

CARTON CONTENTS

#JF-PB: Steel base with Allen Wrench

#JF-PC: Heavy Duty Column and 2 Ty-Wraps

ASSEMBLY INSTRUCTIONS

Remove base (A) from base carton and place on floor.

Gently and squarely place the 2" Pipe Thread (B) which is located at the bottom of the column, into the 2" coupling (D) that is welded to the center of the base (A).

Slowly screw column (C) clockwise into the coupling (D) BEING CAREFUL NOT TO CROSS THREAD. Continue to screw column down into base until it bottoms out.

Install and Tighten Set Screw (H) securely with Allen Wrench (supplied).


Following instructions in motor carton, mount to upper column adaptor (E).

Following instructions in guard/blade carton, mount blade guard to motor.

Use 2 Nylon Ty-Wraps (I) to route power cord (G) down outside of column.

After aiming fan in desired direction, plug power cord into 115 volt, a.c., 60Hz grounded outlet.

NOTE: For optional "Wheel Kit" please order Model #JF-WK.

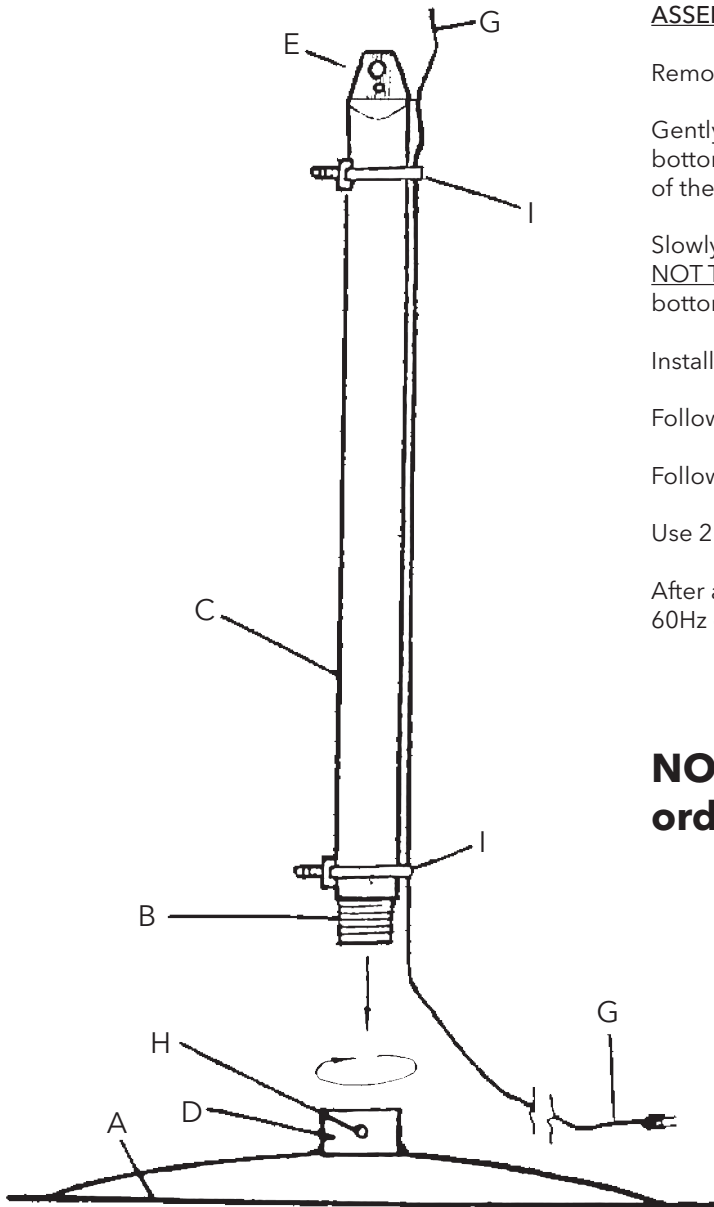

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



**MODEL # JF-DCS (REMOTE DROP CORD w/ 2 SPEED SWITCH)
INSTALLATION INSTRUCTIONS:**

FIG. A- Removal of stock modular motor end dome: FIG. A

Unplug short cord (F) from power cord (G). Loosen three screws (B). Twist end dome (C) counterclockwise and pull away from motor. Unplug connector (D).

IMPORTANT: Save this end dome for future modular replacements and/or parts.


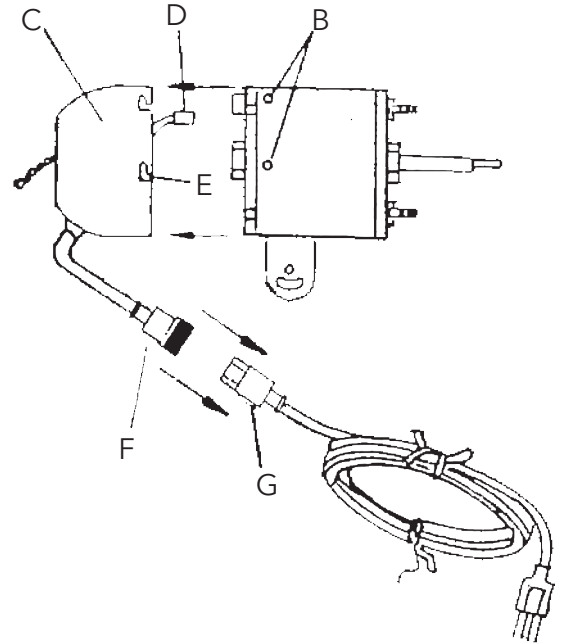


FIG. B- Installation of JF-DCS to motor:

FIG. B

Secure JF-DCS (drop cord with 2 speed switch) and plug into connector (D). Line up three slots (E) in end dome with screws (B) in motor. Push, then twist the end dome clockwise. Tighten screws. Plug short cord (F) into power cord (G).

3', 6', and 12' Extension cords available (Model #JF-DCS-EXT3, JF-DCS-EXT6, and JF-DCS-EXT12) (not shown here) provides different lengths of drop to allow for various heights of overhead mounted fans.

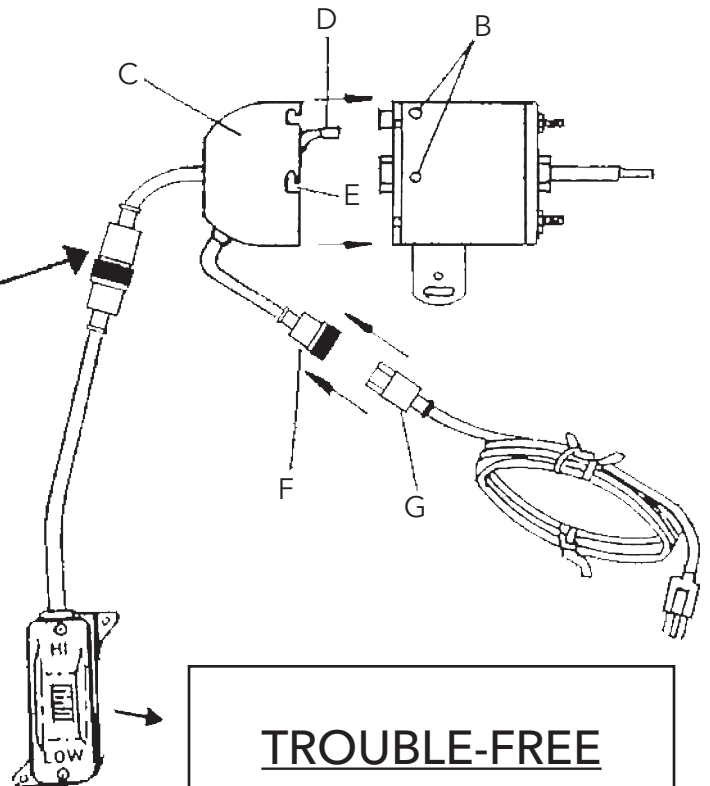

**TROUBLE-FREE
SWITCH**

* See instruction sheet packed with all major components for recommended use of safety cable.

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS




MODEL # JF-MMS-HE (MODULAR MOTOR END DOME)

(w/ Recessed Protected Switch*)

THE JAN FAN'S MODULAR MOTOR END DOME WITH RECESSED SWITCH* TREMENDOUSLY REDUCES FAN MAINTENANCE!

At best, to replace a switch, capacitor, or cord on the site has been a costly, time consuming task. The modular end dome houses the switch, capacity, and 7" pigtail with positive locking device, and can be quickly removed as a unit without removing fastening screws and replaced with a new or rebuild unit at the fan location. The removed end dome can then be rebuilt conveniently and rapidly with a new switch, capacitor, or pigtail on the bench in the maintenance area and used for the next modular replacement.

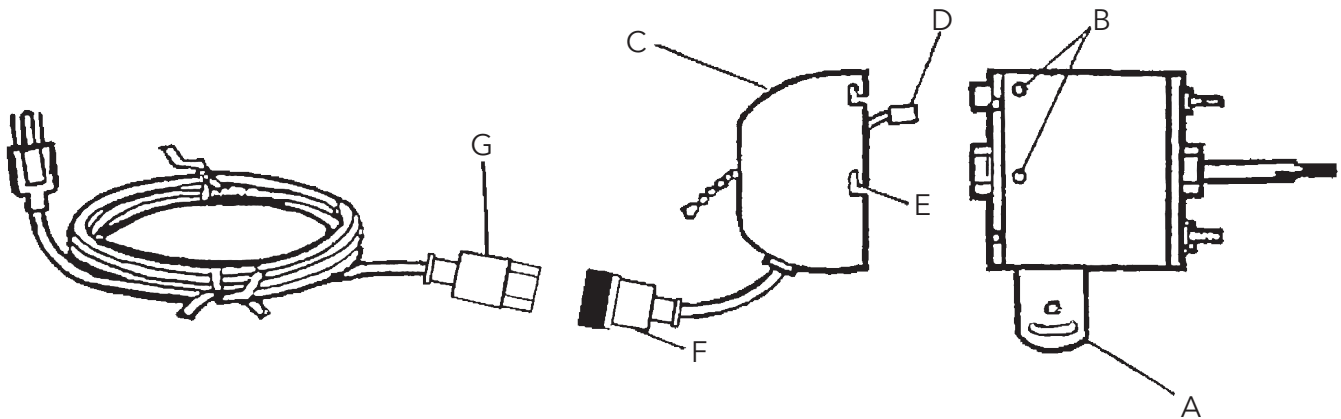

MODULAR END DOME REPLACEMENT INSTRUCTIONS

CHANGING MODULAR END DOME

- Unplug short cord (F) from power cord (G).
- Loosen three screws (B). Twist end dome (C) counterclockwise and pull away from motor.
- Unplug connector (D).
- Acquire new or rebuilt end dome and plug in connector (D).
- Line up three slots (E) in end dome with screws (B) in motor. Push then twist end dome clockwise. Tighten screws.
- Plug in cord (F) into power cord (G).



IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



This kit consists of:
12' x 1/8" Cable
2 Cable Clamps
Installation Instructions

MODEL # JF-SCK
SAFETY CABLE KIT FOR USE
WITH OVERHEAD MOUNTED
JAN FANS

IMPORTANT:
TO KEEP FAN FROM FALLING, FROM ANY CAUSE, IN AN OVERHEAD MOUNT APPLICATION, IT IS STRONGLY RECOMMENDED THAT A SAFETY CABLE BE INSTALLED.

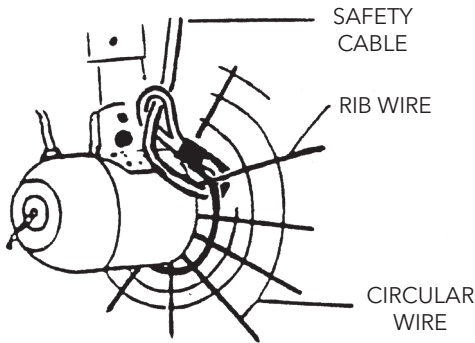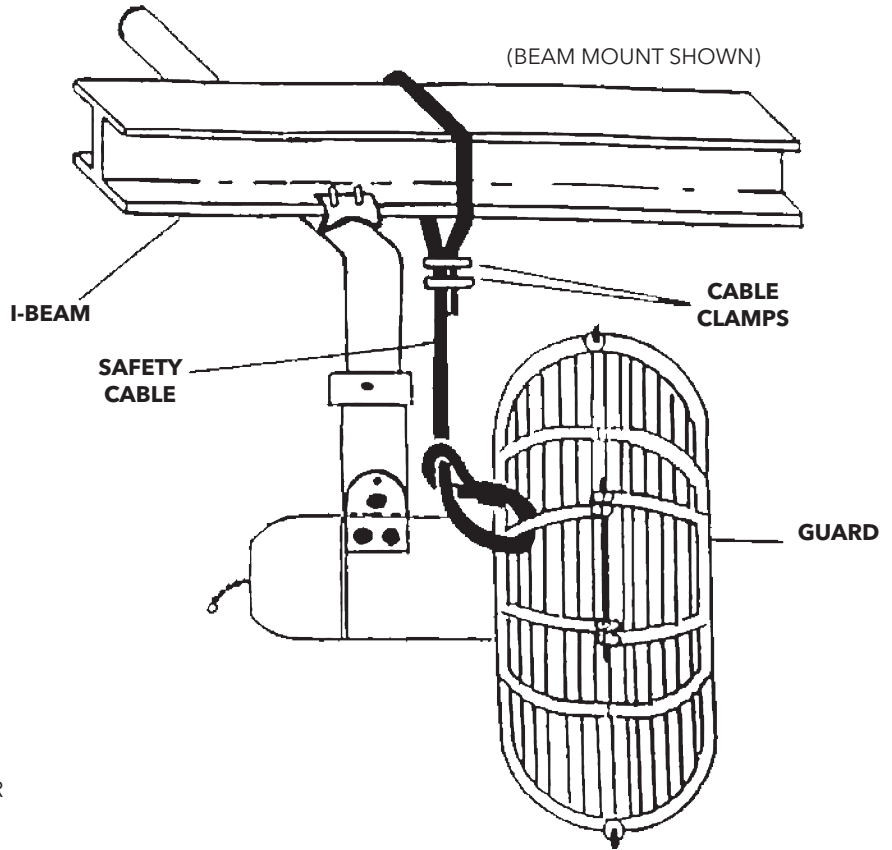

INSTALLATION INSTRUCTIONS

1. Feed 1/8" cable through the heavy circular wire on rear guard near motor and back out around adjacent heavy radial rib wire then through closed loop end of cable.
2. For extended vertical drops of fan mounting or when mounting beyond factory mount length, safely clamp cable tight to the top of the rigid pipe fan support near building structure in order to keep fan support arm from falling (swinging) down in case of arm mounting failure.
3. Take up all slack, making sure there is no part of the cable that may interfere with the blade.
4. Wrap end of cable around a secure building joist, beam, truss, or other support close to the fan assembly. Take up all excess slack in the cable.
5. Attach the cable clamps and tighten very firmly.
6. To avoid Fan/Cable interference, remove the excess cable that is remaining (except for 3" to 4") after the second clamp has been tightened.

USE CLAMPS PROPERLY FOR MAXIMUM EFFICIENCY

U-BOLT SHOULD BEAR ON DEAD END OF CABLE



Attach Cable and Cable Clamps as shown in illustration.

CATION: WIRE CABLE MUST BE INSPECTED REGULARLY FOR ANY DETERIORATION WHICH MAY RESULT IN THE LOSS OF ORIGINAL STRENGTH. USER MUST DETERMINE WHETHER FURTHER USE OF THE CABLE WOULD CONSTITUTE A SAFETY HAZARD TO LIFE OF PROPERTY.

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

MODEL # JF-WK
JAN FAN - WHEEL KIT
(FOR PEDESTAL FANS)



INSTALLATION:

- Only install AFTER pedestal fan assembly is complete.
- Position Wheel Kit to the DIRECT REAR of the pedestal fan as shown.
- To install, simply slip the wheel kit bracket onto the pedestal base lip as far as possible.
- Hand tighten the 2 plastic knobs located on the top of the wheel kit.
- Installation is now complete.


USE:

The easiest method to move the fan is to CAREFULLY tilt the fan back by holding the upper portion of pedestal and stabilizing the fan with your foot positioned between the two wheels.

WARNINGS:

NEVER: Attempt to move the fan while the fan is running!

ALWAYS: Be careful of **HOT MOTOR** if fan has been running before moving.

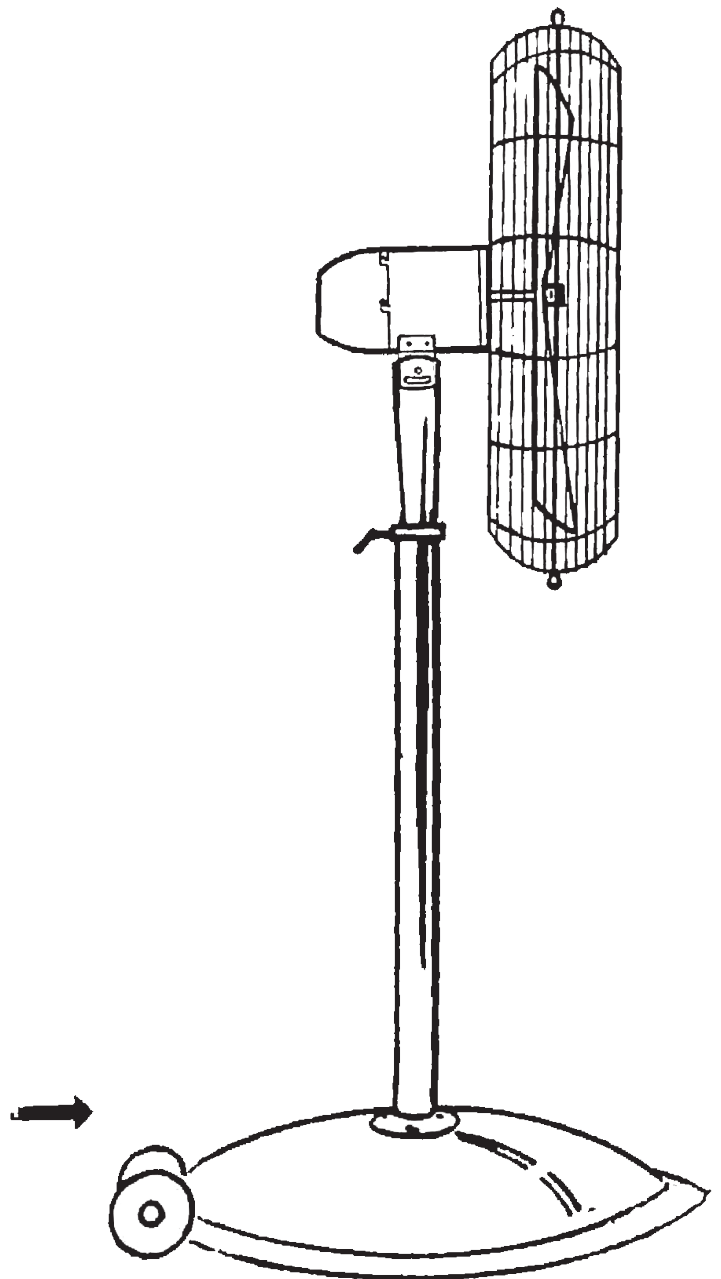

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

IMPORTANT: ALSO SEE SUPPLEMENTAL INSTRUCTION SHEET (SEE OVER)


MODEL # JF-CCM (C - CHANNEL MOUNT)



CONTENTS OF THIS CARTON INCLUDE:

QUANTITY

- | | |
|-----------------------------------|---|
| A - 36" Long 1/2 Rigid Pipe. | 1 |
| B - 1 1/2" C-Channel Clamps | 2 |
| C - 1 1/2" Threaded Motor Adapter | 1 |
| D - Nylon Ty-wraps | 3 |

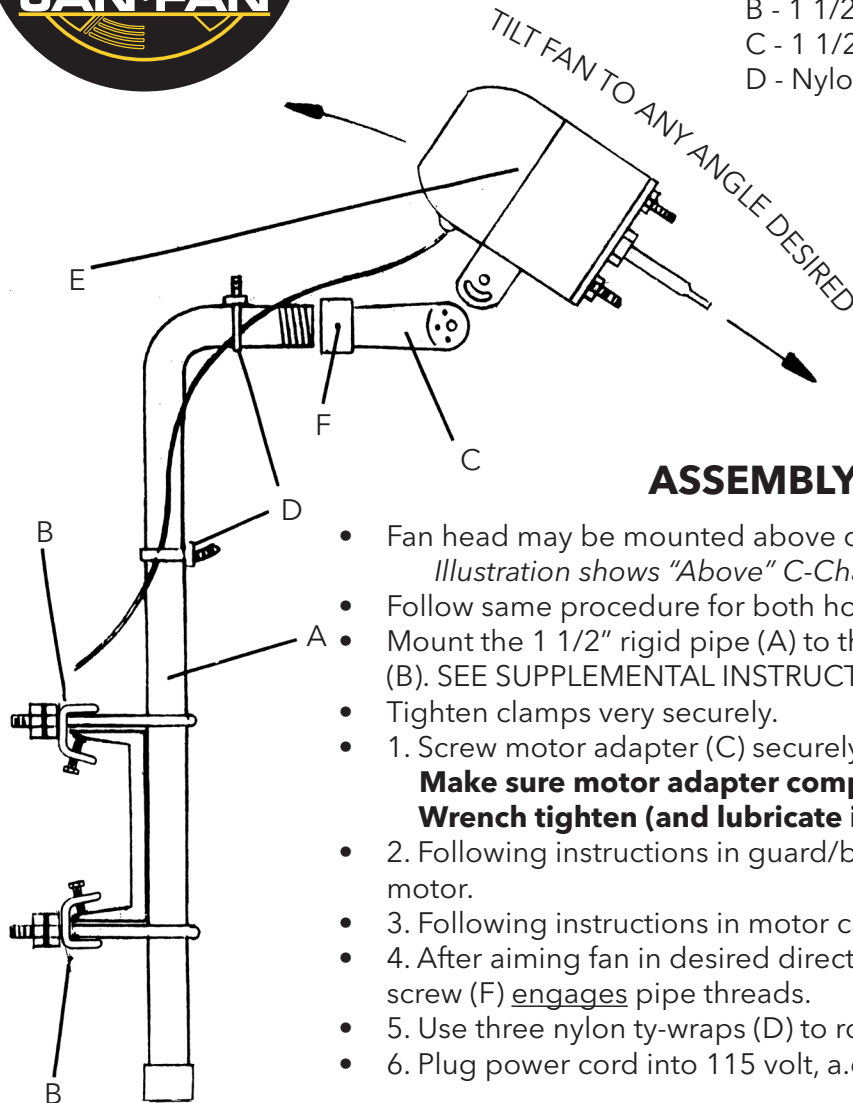

ASSEMBLY INSTRUCTIONS:

- Fan head may be mounted above or below C-Channel. *Illustration shows "Above" C-Channel Mounting.*
- Follow same procedure for both horizontal and vertical C-Channel Mounting.
- Mount the 1 1/2" rigid pipe (A) to the C-Channel with two C-Channel Clamps (B). SEE SUPPLEMENTAL INSTRUCTION SHEET (OVER).
- Tighten clamps very securely.
- 1. Screw motor adapter (C) securely onto 1 1/2" rigid pipe (A).
Make sure motor adapter completely covers all pipe thread. Wrench tighten (and lubricate if necessary).
- 2. Following instructions in guard/blade carton, mount blade and guard to motor.
- 3. Following instructions in motor carton, mount motor (E) to adapter.
- 4. After aiming fan in desired direction, tighten set screw (F). Make sure set screw (F) engages pipe threads.
- 5. Use three nylon ty-wraps (D) to route cord away from fan.
- 6. Plug power cord into 115 volt, a.c., 60 Hz grounded outlet.

WARNING
A Safety cable must be installed properly to help guard against fans falling from any cause. The safety cable should be run through the heavy circular wire on rear guard motor and back out around adjacent radial rib wire as illustrated. Then clamp or otherwise fasten to I-beam or other permanent support. For optional Safety Cable Kit order Model #JF-SCK. Do note use C-Channel clamps where surface contact between pipe and mounting structure is less than 4 inches.

Also Adaptable To Angle Iron:
By Substituting 1 Conduit Clamp
For 1 C - Channel Clamp


IMPORTANT: READ AND SAVE THESE INSTRUCTIONS



**SUPPLEMENTAL INSTRUCTION SHEET
FOR CHANNEL CLAMPS SUPPLIED
WITH C - CHANNEL MOUNT
MODEL # JF-CCM**

Please follow these instructions to ensure proper installation of C-Channel Clamps.

- STEP 1: Pre-assemble C-Channel Clamps and 1-1/2" Rigid Pipe to C-Channel by finger tightening Jam Nuts, while making sure that "U" Bolts, C-Channel Clamps and 1-1/2" Rigid Pipe are FULLY seated against C-Channel as shown in illustration below.
- STEP 2: Finger tighten Adjustment Screw as shown onto inner leg of C-Channel thereby drawing "U" Bolt against C-Channel.
- STEP 3: Tighten Jam Nuts securely.

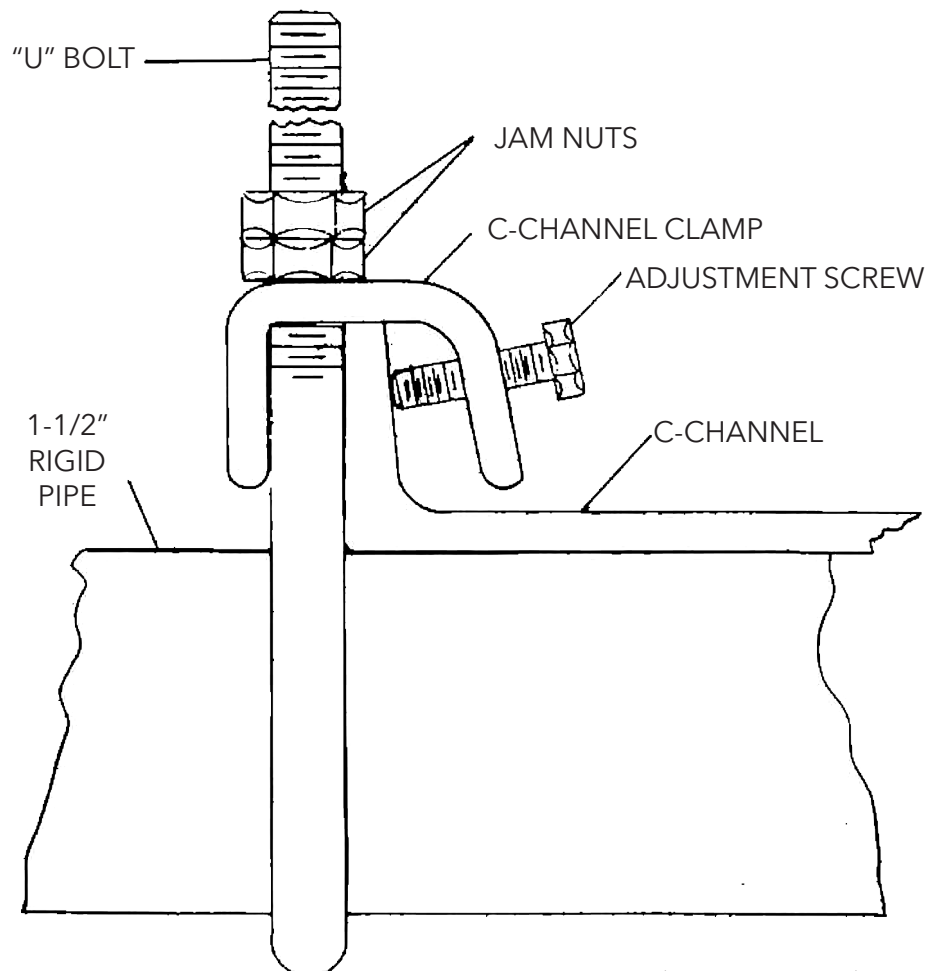


(SEE OVER)

IMPORTANT: READ AND SAVE THESE INSTRUCTIONS

MODEL # JF-MM (MOBILE FLOOR MOUNT)

ASSEMBLY INSTRUCTIONS:

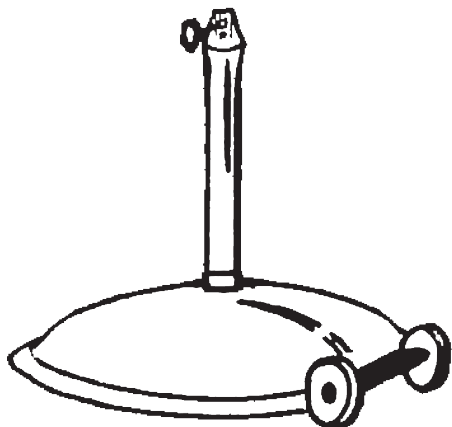

CONTENTS OF CARTON:

QUANTITY	DESCRIPTION
1	Steel base with Allen Wrench
1	20" Vertical Column
1	Wheel Kit
1	Tilt Adjustment Knob Assembly
2	Handle Hinge Pins (1 large and 1 small)
2	Ty-Wraps

ASSEMBLY INSTRUCTIONS:

- Remove all parts from carton.
- With Base (A) on floor, squarely thread bottom of Vertical Column (B) onto the 2" coupling that is welded to the center of the base. BEING CAREFUL NOT TO CROSS-THREAD continue to screw column down until it firmly bottoms out very tightly.
- Tighten set screw (C) with Allen Wrench supplied.

Following the Instructions in Motor Carton, mount Motor to Column Adaptor (D) with the following exceptions to the motor carton instructions:

1. Tighten large 1/2" bolt firmly enough to still allow tilt of motor. This bolt should still hold the majority of the fans' head weight.
2. Substitute the smaller 1/4" bolt and nuts in motor hardware bag with the Mobile Mounts' threaded Tilt Adjustment Knob with serrated flange nut (E).

Following the Instructions packed in the Guard and Blade Carton, mount blade and guard to motor.


- Substitute the proper sized Mobile Mount "Handle Hinge Pin" (F) for the normal type hinge pin at the top of the guard... for 20" and 24" fan sizes use the short Handle Hinge Pin. For the 30" fan size use the longer Handle Hinge Pin.
- Once installed, the "handle" should lean toward the Front of the fan.

Slide Wheel Kit fully onto the edge of the Base paying attention to mount the wheels Squarely with the FRONT of the fan.

- Hand Tighten the 2 Knobs on top of wheel kit to secure to base.

If using the Motor with Drop Cord Rocker Switch, 2 Ty-Wraps are included to mount the yellow switch box onto the upper center portion of the rear guard. This is done by running a Ty-wrap through each of the switch box mounting ears and then through the rear guard.

SEE NEXT PAGE FOR USE AND WARNINGS

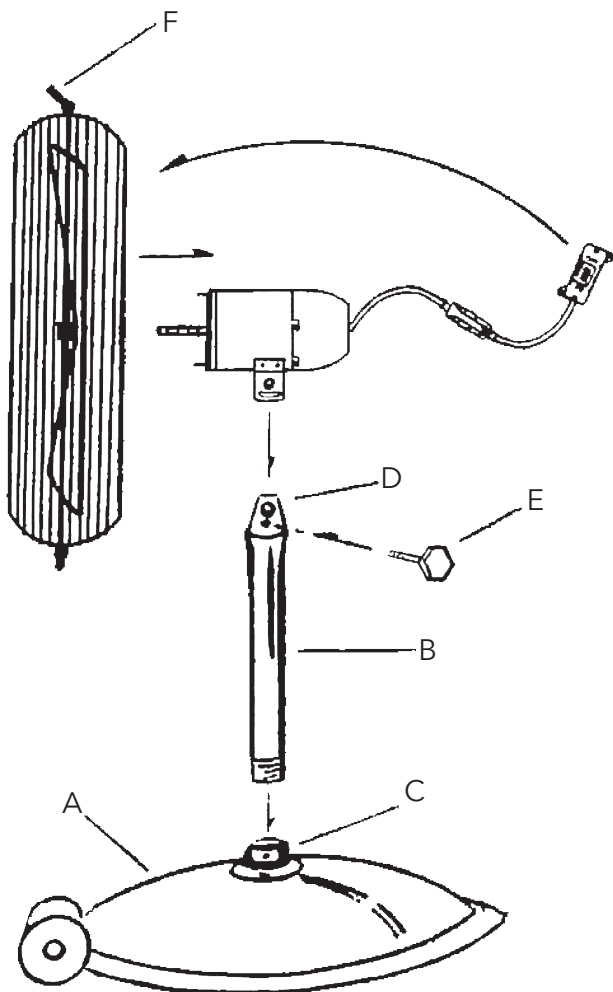




USE:

EASIEST METHOD TO MOVE AND ROLL THE FAN:

1. When moving the fan, the fan's tilt angle should be in a fairly upright "straight forward" position and not excessively tilted (aiming) to high. This makes reaching the Handle much easier.
2. While standing in front of the fan with your foot between the wheels for stability, grasp and pull the "Handle Hinge Pin" located on top of the fan and slowly tilt fan toward you until fully balanced on the wheels.

AIMING AND TILT ADJUSTMENT:

- Slightly Loosen black plastic adjustment knob and adjust tilt direction of fan by using the handle on top of the guard, then re-tighten knob firmly.

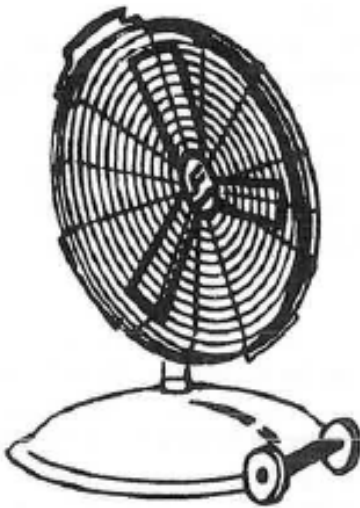

WARNINGS:

Never attempt to move or adjust fan while fan is running!