

Please save this manual for future reference.

Product Name:	Four Drawer Accent Chest
SKU #:	WH196

Thank you for purchasing this Luxen Home product. This product has been manufactured with the highest standards of safety and quality.

## PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

## **CARTON CONTENTS:**

			S
Cabinet	Metal Legs	Screws	Allen Wrench
1рс	4pcs	12pcs	1рс

## **Anti-Tip Restraint Kit**

A	B grannan	D	E
(A) Wall Brackets	(B) 15mm Screw	(D) Nylon Strap	(E) Wall Anchor
2pc	1pc	1pc	1pc
	(C) 36mm Screw		
	1pc		




## **Instruction Manual**

Please save this manual for future reference.

Product Name:	Four Drawer Accent Chest
SKU #:	WH196


Cabinet Assembly:

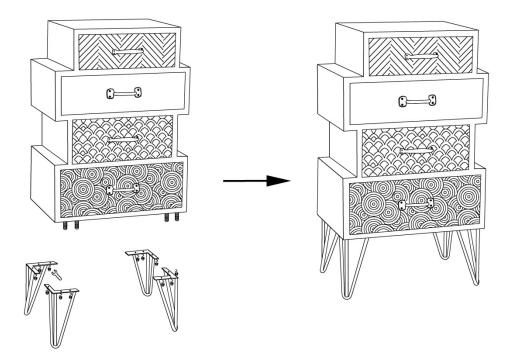

Tighten each screw firmly. DO NOT over tighten any of the screws as this may cause stripping. When using power tools, be careful not to damage the wood.

Warning: DO NOT sit or stand on the table as this may damage the product and cause serious bodily injury.

**Anti-Tip Instructions** 

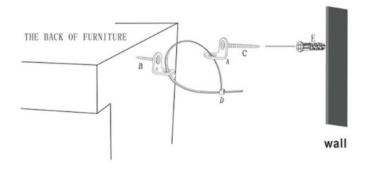

Contact: cs@winsomehouse.com