



Proudly Designed in Colorado

GOBI
HEAT

GOBI
HEAT

Have questions?

Call or email one of our Colorado based customer service representatives. We want to help!

customerservice@gobiheat.com

(801) 228 - 1948



QUICK START GUIDE

For Gloves, Socks, and Beanies

CONTENTS

WASHING AND BATTERY CARE	<u>1</u>
STEALTH HEATED GLOVE LINERS	<u>2</u>
EPIC, DRIFT, VERTEX HEATED GLOVES	<u>3</u>
TREAD HEATED SOCKS	<u>4</u>
SUMMIT + CREST HEATED BEANIES	<u>5</u>
ACCESSORIES	<u>6</u>
SAFETY INFORMATION	<u>7</u>
LOYALTY PROGRAM	<u>8</u>
YOUR 1 YEAR WARRANTY	<u>9</u>

YOUR 1 YEAR WARRANTY

Gobi Heat stands behind its products. Each of our products is warranted to be free from defect of material and workmanship for one (1) year. This year is calculated from the date the product ships from Gobi Heat. Our batteries are warranted for ninety (90 days).

REGISTER PRODUCT / SUBMIT CLAIM

Go to gobiheat.com/Warranty to register or submit a claim. If you are experiencing issues with your product, please reach out to customer service at customerservice@gobiheat.com first.

This warranty is offered only to the original purchaser and is non-transferable. The purchaser is responsible for the cost of returning the product to Gobi Heat. After our examination determines the product is indeed defective, we will repair or replace said product and reimburse shipping costs (up to \$15 USD). This warranty does not extend to damage resulting from repairs attempted by anyone other than Gobi Heat. Furthermore, the warranty does not apply if it is determined that the product has been altered, abused or used in a manner for which it is not intended.

YOU SHOULD BE EARNING REWARDS

EARN POINTS TOWARD AWESOME REWARDS

1



Go to
[GOBIHEAT.COM/REWARDS](https://gobiheat.com/rewards)

2



Create an account using
the email you used to
purchase your product.

3



Earn rewards for this
purchase along with all future
purchases, leaving a review,
and referring friends.

WASHING INSTRUCTIONS (UNLESS HAND-WASH ONLY PRODUCT)

1. Remove battery from heated clothing.
2. Replace the protective cap on your cable.
3. Place cable back in pocket, ensure cable is not pinched.
4. Zip the battery pocket closed.
5. Wash on gentle washing and drying cycles, or lay flat to dry.

BATTERY CARE

- Fully charge and discharge the battery every 3 - 6 months
- Only use Gobi Heat batteries, chargers and cords with your product.
- Discontinue use if your battery becomes damaged, dropped, tampered with or otherwise compromised.
- When traveling with your battery, pack battery into carry-on luggage not checked luggage.
- Do not dispose of battery in trash. Please use proper recycling.

STEALTH

HEATED GLOVE LINERS



1. Charge the glove batteries until the charging light turns green. The charging time of a completely discharged battery is usually 4-6 hours.

2. Carefully connect the charged batteries back to the gloves using the cable found in the pocket on the back of the glove.

3. Turn on (and off) the glove liners by pressing the power button for at least 3 seconds.

4. Select the desired heat by pressing the button once quickly to cycle through the different heat settings.

5. The three lights indicate the level of heat. One bar (low), two bars (medium), three bars (high).

LOW



MED



HIGH



SAFETY INFORMATION

CAUTION! If you feel uncomfortable tingling heat or if the skin turns red, there is a risk of burns. Turn off the device immediately and stop use immediately. Read the safety information carefully before first use.

- Never use if inner lining is wet.
- Heating elements should not be allowed to touch bare skin.
- Shut off power immediately if discomfort occurs.
- Do not allow the wires in the product to be pinched.
- Discontinue use of this product if it stops working correctly or heats inconsistently.
- Do not use pins on or around this jacket as they can cause damage to wiring.
- Remove the battery pack from the battery pocket before washing. Be sure to secure the connector into the battery pocket before washing.
- Do not dry clean. Do not use dry-cleaning fluid on this item. Do not bleach. Cleaning solvents may have a detrimental effect on the insulation of the heating elements.
- Do not iron.
- Do not remove sewn in labels. These carry important information.
- The device may interfere with other electronic devices such as pacemakers and more. Consult with your doctor before use.
- Do not use if you have impaired temperature sensitivity. Consult with your doctor before use.
- Keep the product out of the reach of children, as it contains small parts which could be easily swallowed.
- Always turn off the device and disconnect the batteries when it is not in use.
- This item should be serviced by a qualified repair person using only identical replacement parts.
- Only use Gobi Heat provided batteries, chargers, and cords.

AVAILABLE ACCESSORIES

Find them at gobiheat.com/accessories



Additional/Replacement
Glove Batteries



Additional/Replacement
Gobi Heat® Gloves Charger



Additional/Replacement
Tread Sock Batteries

EXPAND YOUR HEAT

Find other heated products at gobiheat.com/shop



SUMMIT AND CREST
Heated Beanies



STEALTH
Heated Glove Liners



TREAD
Heated Socks

Use Coupon Code **MOREWARM** to Get 10% Off

DRIFT, EPIC, VERTEX

HEATED WORK GLOVES + HEATED SKI GLOVES



1. Charge the glove batteries until the charging light turns green. The charging time of a completely discharged battery is usually 4-6 hours.

2. Carefully connect the charged batteries back to the gloves using the cable found in the pocket on the back of the glove.

3. Turn on (and off) the glove liners by pressing the power button for at least 3 seconds.

4. Select the desired heat by pressing the button once quickly to cycle through the different heat settings.

5. The color of the button indicates the heating level. Red (high), green (medium), and blue (low).

6. Small LED lights on the bottom of the button indicate the remaining battery life (stealth only).



TREAD

HEATED SOCKS



1. Charge the USB power banks until the 4 blue lights stop flashing. Charging time of an empty battery is usually 4-6 hours.
2. Carefully connect the power bank to the socks using the cable found inside the battery pocket.
3. Activate the socks by pressing the ON/OFF button 1 time quickly. Deactivate by pressing the ON/OFF button for 5 seconds.
4. Change the heat level by holding the ON/OFF button for 3 seconds. The LED lights indicate the heating level that is set. 3-lights (high), 2-lights (medium), 1-light (low).
5. To Check the battery level, press the ON/OFF button 1 time quickly.

TESTING SOCKS REMOTE

Turn on both batteries by holding down the power button for 3 seconds

Try the remote and test that it controls the batteries (if not, see pairing instructions)


PAIRING THE REMOTE

With both batteries still powered on, hold down the power button for 9 seconds until the lights blink rapidly.

Try the remote and test that it controls the batteries

CREST + SUMMIT

HEATED BEANIES

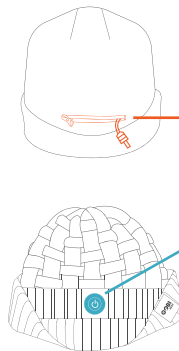

1. Charge the glove batteries until the charging light turns green. The charging time of a completely discharged battery is usually 4-6 hours.
2. Carefully connect the charged battery back to the beanie using the cable found in the pocket on the back of the beanie.
3. Turn on (and off) the glove liners by pressing the power button for at least 3 seconds.
4. Select the desired heat by pressing the button once quickly to cycle through the different heat settings.
5. The color of the button indicates the heating level. Red (high), blue (medium), and green (low).

Note: The light will turn off automatically after a few seconds after turning on the hat. The hat will still be on even if the light is off.