


<b>Product Name:</b>	3in. Dia. Solar Hanging Accent Lantern
<b>SKU #:</b>	WHSL462

Thank you for purchasing this Winsome House product. This product has been manufactured with the highest standards of safety and quality.

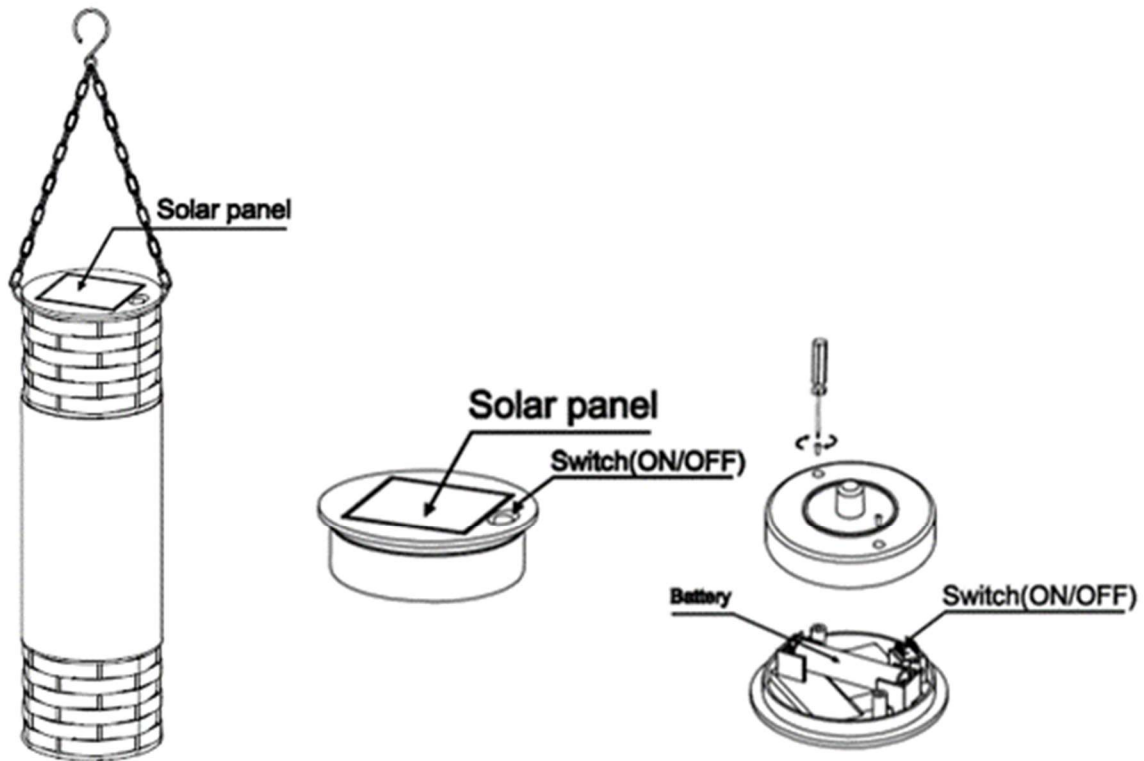

### **Instructions:**

- The "On/Off" button is on top of the solar panel. To turn on, push button to "On" position.
- The battery is located inside the solar panel top. To replace (not required for initial use), lift the solar panel top off of the base. Turn upside down, and unscrew the disk, and replace with new rechargeable battery with identical specifications.
- Battery type: 1 x AAA Ni-MH 300mAh 1.2 V (included)
- For best results, allow to charge in direct sunlight for a minimum of 8 hours.



## Instruction Manual

Please save this manual for future reference.

<b>Product Name:</b>	3in. Dia. Solar Hanging Accent Lantern
<b>SKU #:</b>	WHSL462

### ***Trouble Shooting Tips:***

If your solar light does not turn on at night, it may be caused by the following:

1. Check to see if the switch is in the "OFF" position.  
**Resolution:** Push the switch to the "ON" position and allow the solar light to be charged for at least 8 hours in direct sunlight.
2. Battery may not be fully charged.  
**Resolution:** Make sure the solar light is placed in an area where the solar panel receives the maximum amount of full direct sunlight every day.
3. The solar light may be located too close to other light sources (such as porch light or street lantern).  
**Resolution:** Relocate away from external light source.
4. The rechargeable battery may need to be replaced.  
**Resolution:** Replace with batteries of identical specification.

