
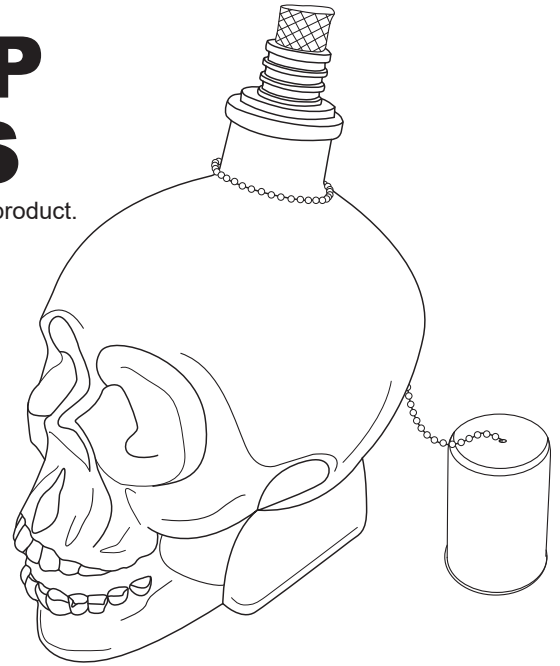


SKULL TABLETOP TORCHES

Read all information carefully before using this product.
Save this manual for future reference.

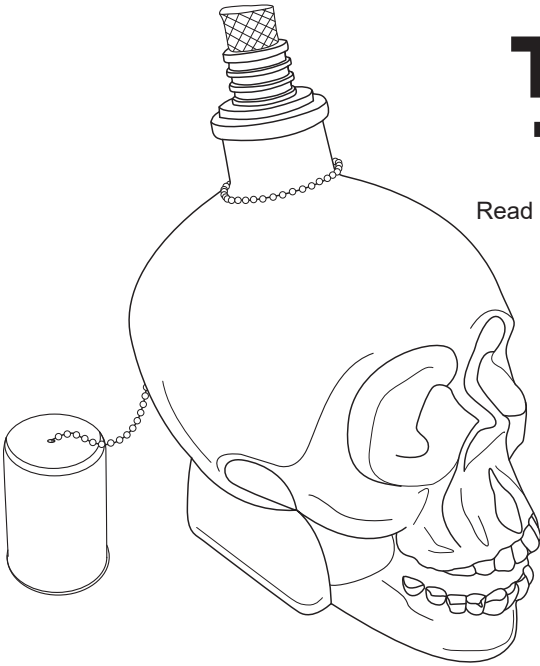

⚠ DANGER ⚠

Torch Fuel is harmful or fatal if swallowed. Contains petroleum hydrocarbons. Combustible.
Read Warning on torch fuel bottle carefully.

⚠ SAFETY STATEMENTS & WARNINGS ⚠

Read all enclosed information thoroughly to develop an understanding of this item before use. Failure to follow warnings and instructions may result in serious injury or destruction of property.

- For outdoor use only.
- Keep out of reach of children or pets.
- Inspect all torches for cracks before filling; do not use if the glass is damaged.
- Do not tip the torches as fuel can spill before use and can cause fire or serious injury.
- Do not leave a burning torch unattended.
- Do not move the torch while it is burning.
- Only use torch fuel with this product; do not use gasoline or other flammable liquids.
- To prevent burn injuries, extinguish the flame and allow the torch to cool down before handling it.
- Fill before use, and only refill when the torch is cold; wait at least 30 minutes before refilling or cleaning.
- Keep clothing, hair, and body parts away from flame - may cause serious burns.
- DO NOT place torch under covered shelter or umbrella, or near other combustibles, such as but not limited to wood structures, clothing, dry vegetation.
- Hot while in use.

Any modification to the product or failure to follow recommended care will void the product warranty.

LOCATION

Pay close attention to your surroundings when using decorative torches. Please practice sound judgment and caution when using this product.

1. Place the torch on a flat, level surface.
2. Do not place the torch under covered shelter or umbrellas, near pedestrian traffic, or combustibles including, but not limited to, wood structures, fuel, clothing, dry grass or leaves, etc.

FILLING & LIGHTING

Always inspect the glass for damage before filling with torch fuel. If the glass is cracked or broken, do not use.

1. Remove the snuffer and wick holder from the top of the torch.
2. Position the wick with 3/4 inch of the wick exposed.
3. Fill the torch 1/2 to 3/4 with torch fuel. **DO NOT OVERFILL**
4. Wipe away any spilled fuel.
5. Insert the wick holder into the top of the torch.
6. Allow the wick to absorb and become saturated with the torch fuel.
7. Before lighting, inspect the glass for leaks; if a leak is found, do not light the torch.
8. Once the wick has absorbed enough fluid to become fully saturated, light it using a long lighter or long fireplace match.

EXTINGUISHING

1. Using the metal snuffer provided, carefully place the snuffer completely over the lit wick until the flame is extinguished.

– **DO NOT ATTEMPT TO BLOW OUT**

– **Allow the torch to cool for at least 30 minutes before handling and refilling**

NOTE: When not in use, leave the snuffer on the torch to prevent water contamination. If the fuel becomes contaminated with water, the wick and fuel must be replaced and properly disposed of in accordance with local laws and regulations.

WICK REPLACEMENT

1. Carefully remove the wick holder. Properly dispose of the wick in accordance with all local laws and regulations.
2. Replace the wick with a new 1/2-inch diameter Sunnydaze Decor Fiberglass Wick by inserting it into the wick holder, leaving 3/4" of the wick is exposed on the top of the wick holder.
3. If the wick is too long after the wick holder is inserted into the torch, trim the wick as needed.

STORAGE

1. When not in use, store the torches upright with the snuffer on the torch.
2. Store torches in a cool, dry location.
3. Keep torches away from heat sources.
4. Store fuel in the original fuel bottle with the cap secured.
5. Dispose of any unwanted fuel in accordance with local laws and regulations.

CLEANING

When the torch is not in use and completely cool, remove debris and soot from the glass jar with a damp cloth.



IMPORTANT:

- Ensure the torch is extinguished and completely cool *before* attempting to clean any components.
- Do not allow the wick to become contaminated with water or cleaning products. If the wick becomes contaminated, it must be replaced.



WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.