

Proper Maintenance & Adjustment

Do not transport or store hazardous materials, such as flammable fuels and explosive materials in box.

Never use open door as a step or seat or work bench.

Oil stainless steel hinge periodically, and adjust latch if necessary for proper performance. Check gaskets from time to time for damage, wear, or tears. Replace if necessary.

LATCH ADJUSTMENTS:

Paddle Latch - Locate the striker post on the top panel of the toolbox. Loosen the adjustment nut slide the striker to desired position, retighten nut.

T-Handle – Adjust cam arm on back side of latch by loosening the two nuts on the shank. Position cam as needed and retighten nuts.

T-Handle with Roller – Compress the cam arm by hand and adjust the single nut to desired position, the cam arm will lock around nut automatically

NOTE: For door replacement on this box, order toolbox part number with “DOORB” as a suffix. Example: “1702500DOORB”.



SERIAL NUMBER