

File Home Insert Draw Design Layout References Mailings Review View Help

Clipboard: Paste, Cut, Copy, Format Painter

Font: Calibri (Body), 11, Bold, Italic, Underline, Text Color, Background Color

Paragraph: Bullets, Numbering, Indentation, Spacing, Paragraph Style

Styles: Normal, No Spacing, Heading 1, Heading 2, Title, Subtitle, Subtle Emphasis, Emphasis, Intense Emphasis, Strong, Quote, Intense Quotation

Editing: Find, Replace, Select, Dictate, Editor, Reuse Files

KK30SRP – Care and Maintenance Instructions

Wash the pot and basket in hot, sudsy detergent, before the first use, and after each use. Dry with a soft cloth.

If food remains stuck in the pan or basket after cooking, soak it in hot sudsy water. Only use non-abrasive cleansers on stainless steel cookware.

Discoloration, scratching, and dimpling may occur with the use of pots on outdoor cookers. This does not affect the performance of the pot.

Never use oven spray, abrasive cleansers or scouring pads.

Never place the empty stainless steel pot on a lit cooker and **never** allow the water to completely cook away during cooking. A hole will be burned in the bottom of the pot if an empty stainless steel pot is placed on a lit cooker. Always check that there is adequate water when cooking, and add water when necessary.

Never leave liquid in the bottom of the pot after cooking.