 




# 14" WALL MOUNT AIR CIRCULATOR OWNER'S MANUAL

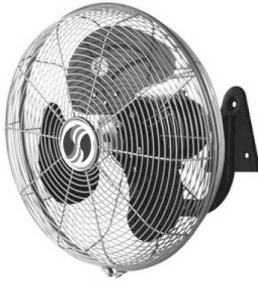

<b>MODEL</b>	
11436	HVM-14

## READ AND SAVE THESE INSTRUCTIONS

**CAUTION:** Read and follow all instructions before operating fan.

Do not use fan if any part is damaged or missing.

**WARNING:**

- To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- To reduce the risk of injury to persons, install fan at least 2.1m (7 feet) above the floor.
- Automatically operated device –To reduce the risk of injury, disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere ( dust, vapour or gas ).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

**RULES FOR SAFE OPERATION:**

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Install in interior wall. Not for use in kitchens.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is mounted at least 2.1m above level.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

**CAUTION:** Do not alter the fan's assembly.

**WARNING:** Be sure that both front and rear guard screws are completely tightened in locking position before operation.

**WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING.

- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue(chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

**INSTALLATION INSTRUCTIONS**

The wall fan must be mounted by follow diagram way on 12 inch (300mm) thick dry and cement – grouted firm wall or on 4 by 5 inch wood studs / joists.

Use wall bracket of wall mount assembly as a templet for locating the holes to be drilled on mounting surface.

After determining the hole locations, use an appropriately sized drill bit and, drill holes through mounting surface. Reference acceptable mounting surfaces and appropriate drill bit sizes for application.

 
Attach wall mount assembly to mounting surface using hardware not provided. It is recommended that a minimum of grade 5 fasteners be used. The following are acceptable surfaces for mounting wall mount assembly.

**STEEL SURFACE** - When mounting to a steel surface of sufficient strength, such as a vertical I-beam, drill through holes at pre-marked locations, using a 9/32" drill bit. Attach wall mount assembly to mounting surface using 1/4"-20 hex screw of appropriate length, in combination with 1/4" flat washers, 1/4" lock washers, and 1/4"-20 hex nuts.

**MASONRY SURFACE** - When mounting to a masonry surface use a 1/4" expansion type bolt or 1/4" masonry lag with shield. Drill holes at pre-marked locations using appropriate sized drill bit as recommended for fastener.


**NOTE:** HARDWARE NOT SUPPLIED.

1. Install the base and tube on the strong wall.
2. Install the fan motor on the bend tube.
3. Assembling the back guard, blade, front guard to the motor.

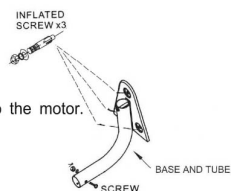

**ASSEMBLY INSTRUCTIONS**

 **CAUTION**  
BEFORE ASSEMBLING FAN TO MOUNT BRACKET MAKE CERTAIN THAT THE BRACKET SUPPORT WALL CAN SUPPORT FAN.

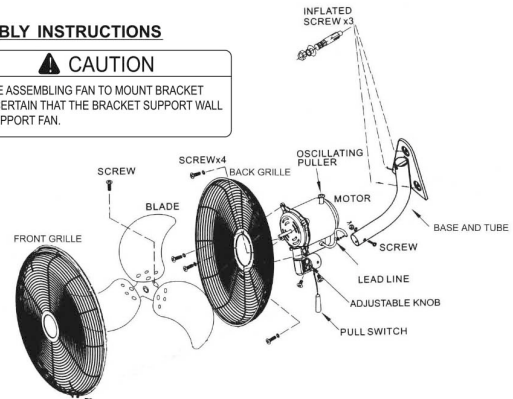

**OPERATING INSTRUCTIONS**

**TO ADJUST AIR FLOW UPWARD OR DOWNWARD:** Loosen the position screw first and then loosen the pivot bolt. Tilt motor to the desired angle then firmly tighten the pivot bolt first and then tighten the position screw.

**SPEED CONTROL:** Select air speed by pulling switch to either HIGH, MEDIUM, LOW or OFF.

**CLEANING**

**WARNING:** Unplug from electrical supply source before cleaning.

1. Use soft damp cloth, then wipe with dry cloth.
2. Do not use harmful cleaners to paints or plastics.
3. Do not bend the blades.

**RATING**

11436 HVM-14 120V/60Hz 50W

**WARNING:**

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

For Questions and Assistance, please contact us at:  
[www.help2uonline.com](http://www.help2uonline.com)