



## ⚠ WARNING ⚠

**WARNING:** Improper use or failure to follow instructions can result in explosive failure causing serious eye or other injury. For safe use of this product you must read and follow all instructions. Do not leave a pressurized sprayer in the hot sun. Heat can cause pressure build-up resulting in possible explosion. Do not store or leave solution in tank after use. Always wear goggles, gloves, long sleeve shirt, long pants and full foot protection when spraying. Never use any tool to remove pump if there is pressure in sprayer. Never stand with face or body over top of tank when pumping or loosening pump to prevent ejecting pump assembly and/or solution from striking and injuring you. Never pressurize sprayer by any means other than the original pump. Do not attempt to modify this sprayer. Replace parts only with manufacturer's original parts. **Never spray flammable, caustic, acidic, chlorine, bleach or other corrosive solutions or heat, pressure, or gas producing chemicals.** Always read and follow chemical manufacturer's instructions before use with this sprayer as some chemicals may be hazardous when used with this sprayer.

Sk-1154-1

## Parts, Piezas, Pièces



**Note:** Your particular sprayer may not include all parts pictured above.  
**Nota:** Es posible que este pulverizador en particular no incluya todas las partes que se ilustran arriba.  
**Remarque :** Votre pulvérisateur particulier pourrait ne pas inclure toutes les pièces illustrées plus haut.

### Congratulations!

You have just purchased a quality Chapin product.


Register Your Sprayer Online @ [www.chapinmfg.com](http://www.chapinmfg.com) Questions? Do Not Return To Store.  
 Call us @ 1-800-950-4458 or [www.chapinmfg.com](http://www.chapinmfg.com)

016354R0522

## ⚠ WARNING ⚠

To prevent hose from blowing off, hose must cover both barbs on the outlet tube adapter and touch flange [Fig. 1B] before hose nut is securely tightened [Fig. 1C].


### 1. Hose to Tank

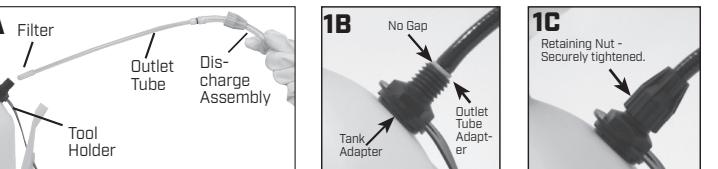

#### Discharge/ Tool Holder Assembly

- Insert the outlet tube portion of the discharge assembly into the tank adapter [Fig. 1A].
- Firmly insert the outlet tube portion into the tank adapter [Fig. 1B] leaving no gap between the tank adapter and outlet tube adapter. Firmly tighten the retaining nut to the tank adapter [Fig. 1C].

### 2. Nozzle / Extension Wand

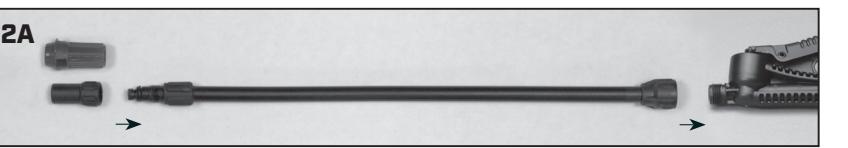

Attach nozzle to extension wand [Fig. 2A].

#### FOAMING NOZZLE INSTRUCTIONS

##### Figure A

To spray from straight stream to fine mist, flip up screened foamer cover. Adjust nozzle by turning to provide desired spray pattern.

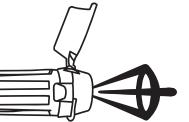


Figure A

##### Figure B

To spray as a foam, secure screened foamer cover to closed position. Adjust nozzle for desired foam patterns.

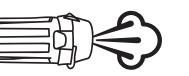


Figure B

### 3. Filter

The filter helps prevent clogging while spraying. It is located on the end of the outlet tube inside your sprayer tank. To clean filter, remove the discharge assembly from the tank [Fig.1A]. Make sure the filter is positioned at the bottom of the tank as pictured [Fig. 3A].



### 4. Pre-Use Check

- 1) **Do:** Check tightness of hose nut to be sure hose is securely attached to the tank outlet.
- 2) **Do:** Inspect hose for deterioration, cracks, softness, or brittleness. If any of these conditions are found, replace hose before using. Replace with original manufacturer's parts only.
- 3) **Do:** Remove pump (see Filling, Pressurizing and Spraying Instructions), inspect interior and exterior of tank for signs of deterioration of body and bottom. Any sign of deterioration indicates possible tank weakening and could result in explosive bursting under pressure. If any of these signs are found, discard tank immediately and replace. Do not attempt to patch leaks, etc., as this could result in serious injury.
- 4) **Do:** Follow Filling, Pressurizing and Spraying Instructions, except use water only (Pump plunger 10-20 strokes and inspect for leaks).
- 5) **Do:** Direct shut-off away from you and open to make sure discharge is not clogged.
- 6) **Do:** If unit passes this test, release pressure (see Pressure Releasing Instructions), empty tank, and proceed with Filling, Pressurizing and Spraying Instructions.
- 7) **Do:** Inspect all metal parts including the wand, nozzle and fittings for rust, corrosion and pitting. If any of these conditions are found, replace affected part with original manufacturer's part before using.

### 5. Filling

- 1) **Do:** Turn pump handle counterclockwise and remove pump
- 2) **Do:** Prepare spray solution following all directions and safety warnings on chemical label.
- 3) **Do:** Fill tank to no more than the proper gallon marker. Do NOT: overfill to accommodate pump.
- 4) **Do:** Check pump to make sure that no grass or dirt is stuck to barrel. Replace pump in tank and tighten securely.

### 6. Pressurizing and Spraying



- Do:** Turn handle clockwise to tighten. Push handle down, turn 1/4 turn clockwise to lock. Begin spraying. Re-pump sprayer as required to maintain spray force.



- Do:** Pump until you feel resistance.



- Do:** Push handle, down, turn 1/4 turn clockwise to lock. Begin spraying. Re-pump sprayer as required to maintain spray force.



- Do:** Turn end of nozzle to adjust spray pattern.

### 7. To Release Pressure

- Do:** With pump facing away, turn locked handle counterclockwise until air begins to escape. Stop turning handle when you hear air escaping.  
**Do:** Point pump away until all air has escaped.

### 8. Care, Storage and Maintenance

- 1) **Do:** Follow chemical manufacturer's instructions for cleaning. Rinse thoroughly with recommended solvent. Follow Filling, Pressurizing and Spraying Instructions, except pump unit only 8-10 strokes. Be sure that the wand and nozzle are thoroughly rinsed after each use.
- 2) **Do:** Open shut-off and allow water to run through discharge assembly.
- 3) **Do:** Release pressure (Follow Pressure Release Instructions), remove pump and empty sprayer.
- 4) **Do:** Store sprayer tank upside down, with pump removed, in a warm dry location.
- 5) **Do:** Periodically oil pump by dropping 10-12 drops of light oil down pump rod through opening in cover.

### 9. Troubleshooting - Tank pressurizes but does not spray.

**WARNING:** Release pressure in tank before troubleshooting.


#### Clean shut-off [Fig. 9A- 9D]



- Do:** Pull handle straight up.



- Do:** Insert notches from underside of handle into plunger grooves and turn counterclockwise.

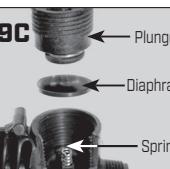

- Do:** Remove plunger, diaphragm and spring. Wash diaphragm with mild detergent. Reassemble: Hold shut-off upright as shown, place spring in hole, place diaphragm on top of spring. Reassemble plunger and tighten.



- Do:** Tighten plunger clockwise until flush to top of shut-off body. Do not over-tighten or unit may not spray. Slide forks under plunger, push handle down until it snaps into place.



#### Clean Nozzle Assembly [Fig. 9E]

Remove nozzle cap. Clean and re-assemble.



