 





Item# 17002  
 Recommended for ages 4+  
 Adult supervision required.  
 Please read and follow this instruction manual.



**Battery information:**

 Charge the car using the USB chord (included) and a USB outlet (not included). Please charge for 90 minutes. A red light on the chord will be lit while charging. When the light turns off, the battery will be fully charged. Play time of a fully charged battery is 20 mins. Open the battery compartment under the smart band using a small screwdriver. Insert 2 x AAA batteries (not included) according to the correct polarity + / - . Close the battery compartment. Under the smart band, turn the switch to either R/C or Gravity Sensor to select mode of control. Then turn the switch under the car from OFF, to ON. If the indicator light remains on, the band and car are paired and you are ready to drive.

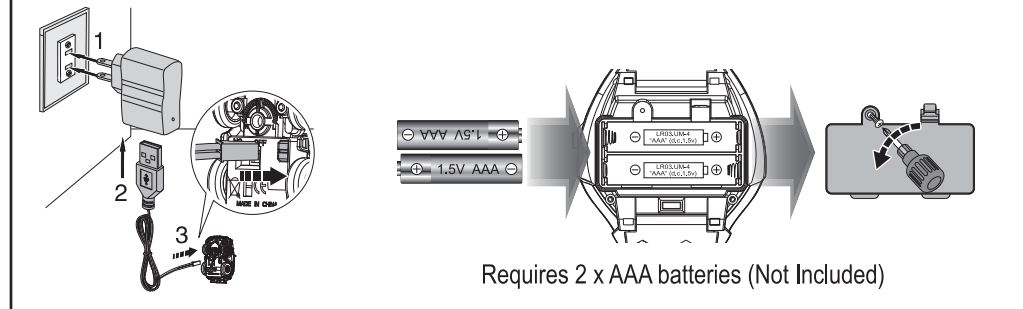


**Battery Safety Information:**  
 Only adults should install and replace batteries.  
 Switch toy and remote to OFF before opening battery compartments.  
 Insert batteries correctly. Match positive+ and negative- signs.  
 Alkaline batteries are recommended for best performance.  
 Rechargeable batteries are not recommended.  
 If rechargeable batteries are used, they are only to be charged under adult supervision.  
 Rechargeable batteries are to be removed from the product before they are charged.  
 Do not recharge non-rechargeable batteries.  
 Only use batteries specified.  
 Only use batteries of the same or equivalent type that are recommended for use.  
 Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium).  
 Do not mix old and new batteries.  
 Remove the batteries during long periods of non-use.  
 Always remove exhausted batteries from toy, and dispose responsibly.  
 Battery leakage and corrosion can damage this product.  
 Dispose of batteries safely. Recycle them where available.  
 Do not dispose of batteries in a fire or attempt to open the outer casing.  
 Never short-circuit the battery terminals.  
 Do not immerse battery-operated toys in water.

**How to play:**

 To select the play mode, use the switch on the bottom of the band. If the switch is in the center, this means the band is OFF. Push the switch to the right for GRAVITY SENSOR MODE. Turn the switch to the left for R/C MODE. Once the band is ON, turn the switch under the car to ON.


**R/C MODE**

When the car is on R/C MODE, you will need to use the buttons on the smart band to control your car. Use the FORWARD button to go forward and use the BACKWARD button to go backwards. While going forwards or backwards, press the RIGHT or LEFT buttons to tur the car. The car has two speeds: High speed and low speed. To activate HIGH SPEED, press and hold the forward and backward buttons for 2 seconds. The green light on the right will turn on indicating car is on high speed mode. Repeat the process to go back to low speed. The green light will be off when on low speed mode.

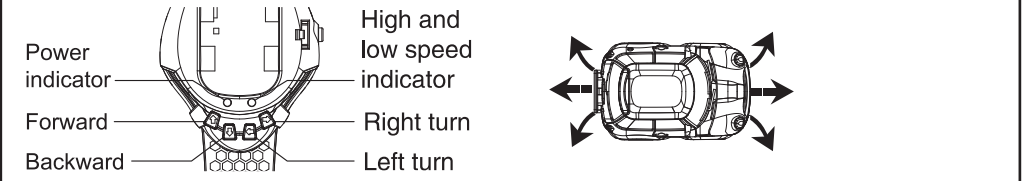

**GRAVITY SENSOR MODE**

 When the car is on GRAVITY SENSOR MODE, tilt your wrist while wearing the smart band to control your car. Turn your wrist to the left to go forward, and turn your wrist to the right to go backwards. The speed of the car will depend on the angle of your wrist movement. The buttons on the smart band will not work when you are in gravity sensor mode.

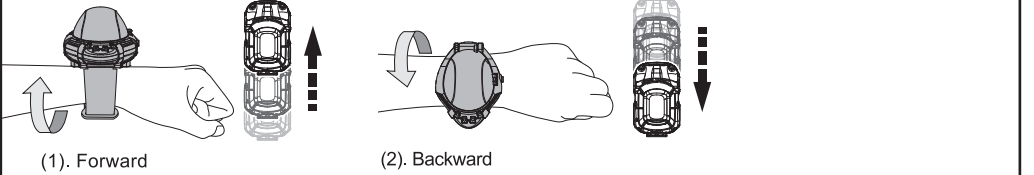

**DIRECTIONAL TRIM**

If your car starts to veer to the sides when you are trying to go forward, use the directional guide under the car to trim and adjust the vehicles directional alignment.



Directional guide

**Jupiter Creations**

© 2022 Jupiter Creations, INC. All rights reserved  
 www.jupitercreations.com

2.4 GHZ **RC**