


INSTRUCTIONS

Keep this instruction sheet for future reference, as it contains important information. Adult supervision required. Contains small pieces.


Contents

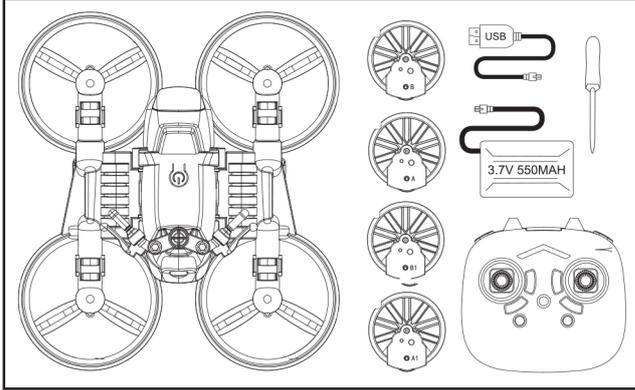


WARNING: All instructions and warnings must be strictly observed. Improper disposal of polymer batteries may lead to: Fire accidents, physical injuries, or property loss.

1. Adult supervision required to handle lithium battery and charger.
2. If you notice the battery bulge at any time, stop using this product immediately. If you continue to use a bulging battery, it may cause a fire accident.
3. Store batteries in dry places with room temperature.
4. Do not leave battery exposed under direct sun light. This may cause damage to the battery and it can also cause a fire accident.
5. Do not charge battery with other chargers. Only use the designated charging USB cable to charge.
6. Keep battery and product away from chemicals.
7. Avoid contact with water. This product is not water-proof. Water vapor can also cause damage to the product.

Open battery compartments on the back of remote using a Phillips screwdriver. Insert 4 AA batteries (not included) in accordance to polarity symbols (+), (-).

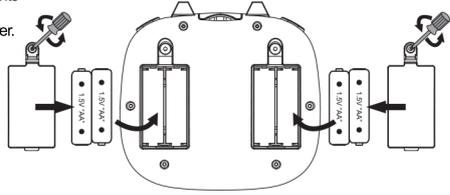




WARNING: Only the charger and the battery with this products are acceptable. In order to avoid accidents, please do not try any other chargers or batteries.

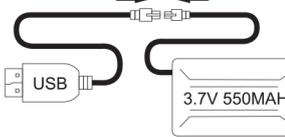

Notes Before Flying:

1. Please make sure the power is adequate.
2. Please make sure that the joystick is reseted when turning the power on.
3. Please confirm that the copter is in same frequency. If not, please rematch the code.
4. Fly within a proper place. Stay away from crowds, cars, high-voltage towers, pools and etc, then you can enjoy a safe flight.



CAUTION	WARNING	WARNING	WARNING	WARNING	WARNING
Always use a charger compatible with batteries.	Always charge batteries away from flammable materials.	Never leave charging batteries unattended.	Never charge damaged batteries.	Never Alter Batteries.	Never touch or use hot batteries.

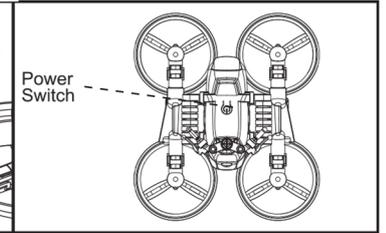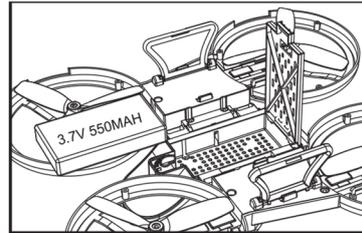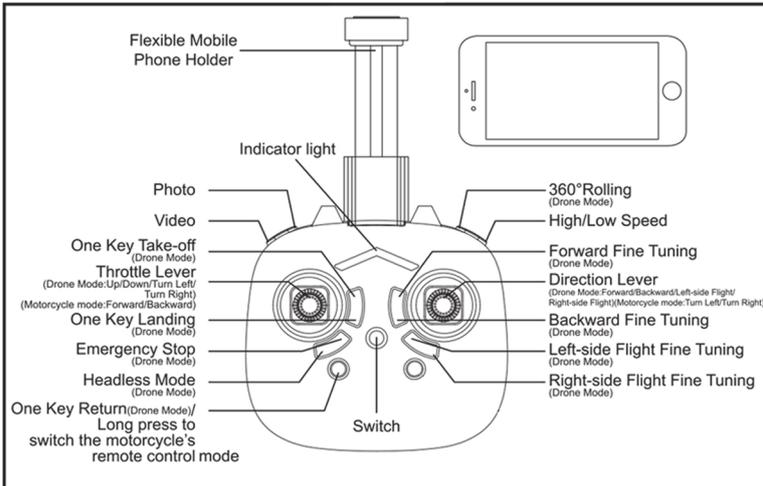


To install the charged battery, open the battery compartment at the bottom of the fuselage. Gently insert and connect the battery cable with dock. Close the battery compartment.

Once the charged battery is in, turn on the power button above the aircraft. The light will turn red. Aim the remote and move joystick up to pair aircraft with the remote. Once paired, the light will turn green and you will have flight control. (see back pg for controls)


Turn drone to bike

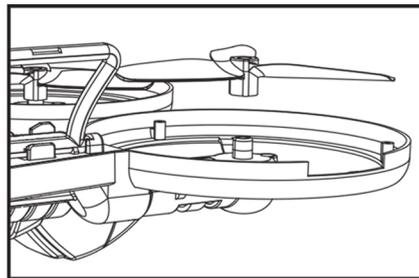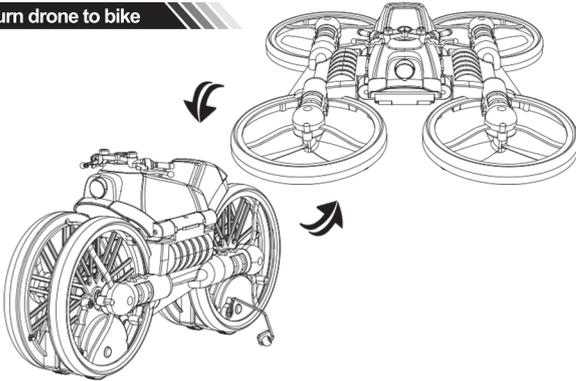


To switch modes from Drone to Bike, make sure the drone is off. Gently pull off the four blades out of the aircraft.

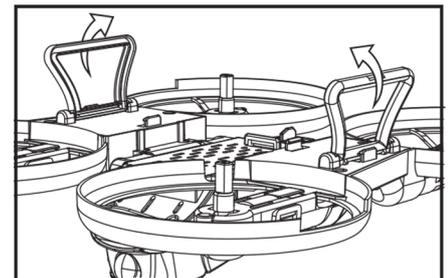

Fold the two legs of the aircraft inward.

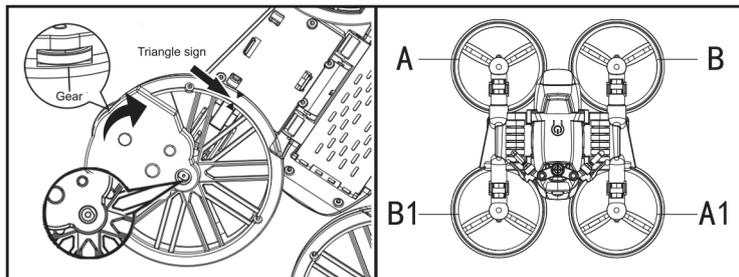

Each blade/wheel has A1, A or B1, B mark. When switching modes, please install the correct one in conjunction to its symbol. To install the wheels, align the triangle mark and the center axis of the main body. Once aligned, install the wheel in the direction of the arrow and align them with the gear.

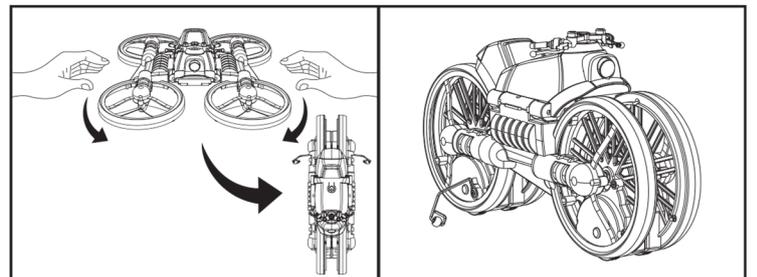

Once you have installed all four wheels, fold the sides of the vehicle inward and connect the wheels to each other. Once folded the bike should be ready to go.

TURN PAGE OVER FOR CONTROL INSTRUCTIONS.