

XTREME SPIN

STUNT CAR & WHEEL RC

Item# 17015

Recommended for ages 6+

Please read and follow this instruction manual.

Do not give this vehicle to a child under 6 years of age.


Adult supervision Required.

Battery information:

Charge the 7.4V battery using the USB chord (included) and a USB outlet (not included). Please charge for at least 1 hour on your first charge. A red light on the chord will be lit while charging. When the light turns off, the battery will be fully charged.

Open the battery compartment under the vehicle. Insert and plug charged 7.4V battery into vehicle. Once battery is plugged in, close the battery compartment.

Open the battery compartment on the bottom of the control. Insert 2 x AA batteries (not included) Close the battery compartment. Once the vehicle and the remote have working batteries, turn the ON/OFF button under vehicle to ON and you are all set to drive.

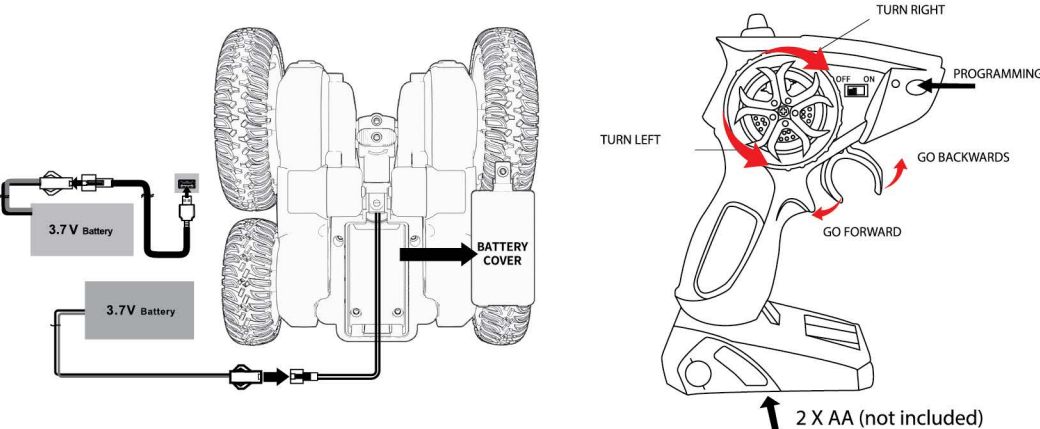

Battery Safety Information:

- Only adults should install and replace batteries.
- Switch toy and remote to OFF before opening battery compartments.
- Insert batteries correctly. Match positive+ and negative- signs.
- Alkaline batteries are recommended for best performance.
- Rechargeable batteries are not recommended.
- If rechargeable are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- Do not recharge non-rechargeable batteries.
- Only use batteries specified.
- Only use batteries of the same or equivalent type that are recommended for use.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium).
- Do not mix old and new batteries.
- Remove the batteries during long periods of non-use.
- Always remove exhausted batteries from toy, and dispose responsibly.
- Battery leakage and corrosion can damage this product.
- Dispose of batteries safely. Recycle where available.
- Do not dispose of batteries in a fire or attempt to open the outer casing.
- Never short-circuit the battery terminals.
- Do not immerse battery-operated toys in water.


How to play:

Turn the switch under the vehicle and on the remote control from OFF to ON. The trigger on the remote controls your speed and your forward and reverse motion. Press the trigger towards you to go forward and pull the trigger backwards to go on reverse. The speed will depend on how hard you push or pull the trigger. Use the round dial to turn left or right.

Programming: You can program and code up to 30 moves for your vehicle to follow. Press the programming button on the top right corner of the remote. Then select the sequence of moves by pressing the forward, backwards trigger or left and right by turning the nob. With every programmed action, you will hear a beep sound. Once you finish programming the sequence, press the programming button again to start.

The vehicle will perform the sequence of moves you programmed, in that order.

Stunt Wheel: The vehicle is designed to drive and spin with the stunt wheel. Before placing the vehicle inside the wheel, you must lock the right and left sides, by turning the lever under the vehicle. When driving without the Stunt wheel, make sure the lever is unlocked.

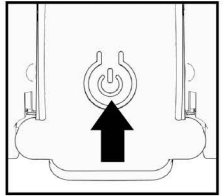

POWER SWITCH



Speed limit: When the lever is locked, the vehicle enters speed limit mode. The car will move at a slower speed for beginners. When the lever is unlocked the vehicle will be able to reach it's top speed.

When you are finish driving, please remember to turn off both the remote and vehicle.

If you are planning to not use the vehicle for a long time, please remove the batteries from remote and vehicle.

Do not put the vehicle or remote on water to avoid damaging the electronic components.

Do not expose the vehicle to high temperatures, high humidity or direct sunlight

Jupiter Creations

© 2022 Jupiter Creations, Inc. All rights reserved
www.jupitercreations.com

2.4 GHZ RC

