

DETAILS (2PC) 7.4V 2200mAh BATTERY PACKS & CHARGER KIT

KIT INCLUDES:

- (2) 7.4 VOLT 2200mAh RECHARGEABLE BATTERY PACKS
- (1) DUAL WALL CHARGER

CAPACITY: 2200mAh/15Wh **INPUT:** DC 8.4V / 1200mA
CORE: LITHIUM-POLYMER **OUTPUT POWER:** 15W (MAX)
DIMENSION: 7.0*4.2*1.45cm **CHARGING TIME:** 3.5-5 HOURS



DETAILS 7.4V 5000mAh BATTERY PACK & CHARGER KIT

KIT INCLUDES:

- (1) 7.4 VOLT 5000mAh RECHARGEABLE BATTERY PACK
- (1) WALL CHARGER

CAPACITY: 5000mAh/37Wh **INPUT:** DC 8.4V / 2A (MAX)
CORE: LITHIUM-POLYMER **OUTPUT:** 7.4V / 2A (MAX)
DIMENSION: 8.3*6.1*2.0cm **OUTPUT POWER:** 14.8W (MAX)
CHARGING TIME: 4-6 HOURS



HOW TO POWER YOUR 7.4V BATTERY POWERED HEATED GARMENTS & ACCESSORIES

1. CHARGE:

Plug provided charger into battery pack/packs. Charge until the LED light on charger becomes solid **GREEN**.
 * LED light will blink **RED** when charging is in progress.

2. CONNECT:

Connect fully charged 7.4V battery pack/packs to the 7.4V battery heated item's internal connection cord, located inside the heated item's pocket.

3. TURN ON:

Press & hold the on-board temperature control button on 7.4V battery heated item for 3-5 seconds, or until LED lights on temperature control button turn on.

4. CHOOSE TEMPERATURE SETTING:

 
Press the temperature control button on battery 1-3 times to select desired heat. *Color of LED lights on top of button indicates current heat level setting.

● **RED = HIGH** ○ **WHITE = MEDIUM** ● **BLUE = LOW**

5. TURN OFF:

Press & hold the on-board temperature control button for 3-5 seconds, or until LED lights on control button turn off.
 * Disconnect & remove batteries when not in use.

ACTIONHEAT™ WARRANTY
 SCAN THIS QR CODE TO LEARN ABOUT OUR WARRANTY
 OR VISIT WWW.ACTIONHEAT.COM

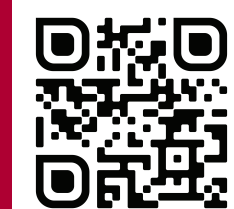

WARNINGS 7.4 VOLT BATTERIES & 7.4 VOLT BATTERY HEATED PRODUCTS

1. Read all instructions and warnings before use.
2. Product gets very hot. Do not use while sleeping or unconscious.
3. Unattended use of electric heated products on animals, children or incapacitated persons may be dangerous.
4. Due to the nature of battery heated products, they may cause burns or discomfort. Consult physician prior to use on sensitive skin or if you may have a medical condition affecting circulation or skin sensitivity.
5. When using the ActionHeat™ 7.4V heated accessories do not use the "HIGH" heat setting for more than 5 minutes at a time. Heated products may become too hot for continuous use and may result in serious burns.
6. Frequently check skin under heated areas to avoid burning. Understand your individual early warning signs or sensations of a burn and remove the heated garment before any burns occur. In the rare event of experiencing any sensation of overheating or discomfort while using any ActionHeat™ product, immediately remove the heated item, turn off and unplug any wires and power pack.
7. Do not attempt to disassemble or alter any part of this product or battery.
8. Do not store battery pack below -4°F (-20°C) or above 120°F (49°C).
9. Do not allow battery pack to come into contact with water or other liquids. If water or other liquids enter the interior of battery pack immediately remove item, unplug the product and turn off. Continued use of a potentially damaged product may result in fire or an electrical shock.
10. Do not expose battery heated accessories or battery packs to direct flame or place near a heat source as it may cause an explosion.
11. Do not attempt to warm up battery heated product when not being worn. Heating elements should not be stacked on top of each other when the heated item's power is on. When heated item is turned on, make sure not to cover or put anything on top of the heated item. Any of these actions may cause temperature of the heating elements to rise, resulting in burns or damage.
12. Recycle all battery packs and battery heated products in accordance with local regulations.
13. Make sure to turn off 7.4V battery heated item and disconnect from battery pack when not being worn.



7.4 VOLT USAGE

1. Be certain to use your ActionHeat™ battery heated product with the provided ActionHeat™ battery pack. Failure to do so can cause the heated product or battery pack to overheat causing damage.

2. Recommended power setting of 50% is sufficient for temperatures around 50-64°F, while at lower temperatures, setting the power level to 75% or 100% is sufficient. It is not recommended to use the 100% power setting for a long time as it may cause overheating and/or bodily discomfort.

7.4 VOLT STORAGE

1. It is important to maintain at least 25% of your battery power when not in use. Charge 7.4V battery packs periodically throughout the year to ensure maximum product lifespan. Failure to do this will result in performance problems and reduced battery life.

2. Disconnect the battery pack from the garment heated item when not in use. Failure to do so will cause the garment to slowly drain power from battery, even when it is turned off.

3. Our lithium-polymer battery is very similar to a typical cell phone battery, so be sure to treat the battery with care. Proper care and storage of the battery will ensure that it has a full lifespan of 500+ cycles.

CARE INSTRUCTIONS

7.4 VOLT BATTERY POWERED HEATED GLOVES & ACCESSORIES

1. Disconnect and remove power bank from the heated accessory when not in use and before cleaning.
2. Before cleaning, secure all wires inside pockets, fasten all zippers and close pockets.
3. Spot clean only. Do not scrub. Do not put in washing machine.
4. Use mild liquid detergent only. Do not use powdered detergent. Do not use fabric softener. Do not use bleach.
5. Lay flat or hang to dry. Do not put in dryer. Do not dry clean. Do not iron. Do not wring to dry.

7.4 VOLT BATTERY POWERED HEATED APPAREL:

1. Disconnect and remove power bank from the garment when not in use.
2. Before washing, place all wires in pockets, fasten all zippers and close all pockets.
3. Wash separately from all other pieces of clothing.
4. Use mild liquid detergent only. Do not use powdered detergents or fabric softeners.
5. Machine wash with cold water, on gentle cycle.
6. Lay flat or hang to dry. Do not put in dryer, iron or dry clean.



**INSTRUCTION MANUAL:
7.4 VOLT BATTERY PACKS
& 7.4 VOLT BATTERY POWERED
HEATED ACCESSORIES**

! STOP !

BEFORE USING ANY ACTIONHEAT™
PRODUCT PLEASE READ & ADHERE TO
ALL ENCLOSED INSTRUCTIONS,
WARNINGS & CARE INFORMATION
TO REDUCE RISK OF INJURY
OR MISUSE.

WWW.ACTIONHEAT.COM