



# PureSteam

PORTABLE FABRIC STEAMER



**USER MANUAL**  
Model: PEMINISTM

PLEASE READ THOROUGHLY BEFORE USING THIS PRODUCT

## CONTENTS

Safety Warnings.....	1-2
Introduction.....	3
Operating the Product.....	4
Cleaning and Storage.....	5
Removing Mineral Buildup.....	6
Troubleshooting.....	7
Warranty Information.....	8
Product Registration Information.....	8



## SAFETY WARNINGS

**SAFETY WARNINGS**

**DANGER** ⚠

Close supervision is necessary for any appliance being used by or near children. Do not leave PureSteam unattended while connected.

It is possible to burn yourself while using PureSteam. Use carefully and never turn PureSteam upside down because there may be hot water in the reservoir.

**WARNING** ⚡

To reduce the risk of contact with hot water emitting from steam vents, check the water level and indicator light on your PureSteam before each use.

Use appliance only for its intended use.

To reduce the risk of electric shock, do not immerse PureSteam in water or other liquids.

Never pull cord to disconnect from outlet; instead, grasp plug and pull to disconnect completely before putting away. Put away cord loosely when storing.

Always disconnect PureSteam from the electrical outlet when filling with water or emptying, and when not use.

Do not operate PureSteam with a damaged cord, or if the appliance has been dropped or damaged.

To reduce the risk of electric shock, do not disassemble or attempt to repair PureSteam. Return it to the Service Center for examination and repair. Incorrect reassembly or repair could cause fire, electric shock, or injury when the appliance is used.

## SAFETY WARNINGS

**SAFETY WARNINGS**

**WARNING** ⚡

Never drop or insert any object into the steam vents of the nozzle.

Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.

The surface of your PureSteam may get hot when in use. Always use the handle to avoid burning your skin.

Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.

Unplug PureSteam before filling or emptying the water tank. Never fill water past the maximum level.

To reduce the likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.

Do not use an extension cord to operate the appliance. If an extension cord is absolutely necessary, a 15 amp rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

## INTRODUCTION

Thank you for purchasing Pure Enrichment's PureSteam Portable Fabric Steamer! This compact, handheld garment steamer is the perfect tool to keep your wardrobe and household fabrics fresh and wrinkle-free. Use daily to easily and quickly revive your clothing.

### FEATURES:

We've designed PureSteam to give you a portable yet powerful steaming experience. Some of the features you will enjoy with this product include:

- New nozzle design that distributes steam powerfully and consistently to remove stubborn wrinkles
- Compact design that travels and stores easily
- Safe to use on all types of fabric
- Heats quickly to emit wrinkle-busting steam in 2 minutes
- Includes automatic shut-off for safety protection when the unit gets too hot or too low on water
- High-capacity, easy-fill water tank that lasts for 10 minutes of continuous steaming
- 2 Year Warranty—Your satisfaction is guaranteed!

## OPERATING THE PRODUCT

### HOW TO OPERATE YOUR PURESTEAM

1. Unscrew the nozzle head. Fill the tank with water to the desired level, never surpass the maximum level. When you finish filling, lock the head back on.

NOTE: Only fill the tank with cold water, DO NOT use hot water. Distilled water is recommended.

2. Turn the ON/OFF switch to the ON position. The switch light indicates the steamer is on. Steamer will emit steam from nozzle in 2 minutes.

3. PureSteam has a resetting function. When the unit runs out of water, it will reset automatically to ensure your safety while leaving the indicator light ON. If you wish to continue your steaming session:

- Turn the ON/OFF switch to the OFF position so that the indicator light is off.
- Remove and refill water tank by following Step 1 in How to Operate Your PureSteam.
- Turn ON/OFF switch to ON position.

4. When you are finished with your steaming session place the ON/OFF switch in the OFF position and remove the plug from the outlet.

NOTE: Never turn the unit upside down. PureSteam should never be tilted past a 45-degree angle especially when the unit is ON.

## CLEANING AND STORAGE

### CLEANING PURESTEAM

1. Unscrew the head and allow PureSteam to cool for at least 10 minutes.

2. Empty any excess water from the water tank and allow it to air dry before replacing the head and setting the tank back in the unit.

### STORING PURESTEAM

1. Store in a cool, dry place.

2. DO NOT wrap the power cord around the unit. Put away the cord loosely.

NOTE: Water mineral content and conditions will vary depending on where you live. To ensure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

## REMOVING MINERAL BUILDUP

If you fill your PureSteam with tap water, you may experience mineral buildup due to the high mineral content in the water supply in many cities. Mineral residue inside PureSteam's internal heater can cause intermittent steaming or, in severe cases, no steaming at all.

To avoid this problem, only use de-mineralized or distilled water in your PureSteam. If you are unable to use de-mineralized water or distilled water, we recommend you follow the cleaning procedure below at least once a month to help avoid mineral buildup.

1. Turn the unit off and unplug the power cord.

2. Make a mixture of 50% vinegar and 50% water. In most cases 1 cup of this mixture will be sufficient.

3. Slowly pour the water-vinegar mixture into the reservoir. Pour it out three minutes later.

4. If the procedure above does not return the unit to normal operation, the unit may need servicing.

## TROUBLE SHOOTING

If your PureSteam is not operating properly, please check it for the following problems or conditions. If you are still unable to solve the problem, please contact us for a replacement.

### PureSteam fails to heat

PureSteam should heat within two minutes. If after two minutes, PureSteam is still cool, check the following:

- Make sure the steamer is plugged into an electrical outlet.
- Fill the water tank. The automatic shut-off feature prevents PureSteam from heating when the water is low.

### PureSteam is not emitting steam

If your PureSteam is not emitting steam, the water level is too low. Turn the ON/OFF switch OFF and refill.

### Water is spraying from the nozzle

If your PureSteam is spraying water from the nozzle, the water tank is too full. Pour some water out until the water level is under the maximum level.

### Nozzle gurgles

If the nozzle of your PureSteam makes a gurgling sound there is condensation around the nozzle. This is normal. Hold the steamer vertically and shake the body to allow water to drain back into the reservoir.

### Steam flows intermittently

If your PureSteam is not emitting a continuous stream of steam, sediment build-up is likely the problem. Follow the procedure for removing mineral build up on Page 6 of this User Manual.

## WARRANTY AND REGISTRATION INFORMATION

### Warranty Information

Pure Enrichment offers an industry-leading 2 Year Warranty on PureSteam. For warranty requests or questions please visit [pureenrichment.com](http://pureenrichment.com) and contact us.

### Product Registration

To ensure your 2 year warranty, receive product updates, and streamlined customer support, don't forget to register your product at [pureenrichment.com/productregistration](http://pureenrichment.com/productregistration).



Pure Enrichment ©  
Santa Ana, CA 92705  
[www.pureenrichment.com](http://www.pureenrichment.com)