


pure
enrichment

5 YEAR
WARRANTY

PURESTEAM PRO

GARMENT STEAMER WITH 4 STEAM LEVELS

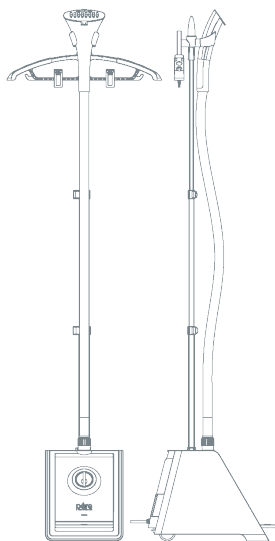

USER MANUAL
MODEL: PESTMUP

TABLE OF CONTENTS


IMPORTANT SAFETY INSTRUCTIONS	1-2
PRODUCT DIAGRAM.....	3
ASSEMBLING PURESTEAM PRO	4
USING PURESTEAM PRO	5-6
PRESSING WITH STEAM.....	6-7
QUICK STORAGE.....	7
CLEANING & LONG-TERM STORAGE.....	8
PROBLEM SOLVING GUIDE.....	9
REMOVING MINERAL BUILDUP.....	10
PRODUCT SPECIFICATIONS.....	11
WARRANTY & PRODUCT REGISTRATION.....	12

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions, when using electrical appliances, always follow basic safety precautions, including the following:

1. This product is intended for indoor use only.
2. Use PureSteam Pro for its intended purpose only.
3. To protect against risk of electrical shock, **DO NOT** submerge PureSteam Pro in water or other liquids.
4. **THIS APPLIANCE IS NOT A TOY.** Close supervision is necessary for any appliance being used by or near children. **DO NOT** leave the appliance unattended while connected.
5. Unplug PureSteam Pro from the electrical outlet before adding or removing parts and before filling with water, emptying or cleaning.
6. **STEAM CAN CAUSE SERIOUS BURNS.** Keep your hands, skin, and hair away from the steam nozzle openings while steaming.
7. **DO NOT** touch the steam hose while steaming. It gets hot and can burn your skin.
8. **DO NOT** point steam nozzle in the direction of people, plants, or pets while steaming.
9. **NEVER** attempt to steam clothes while you are wearing them.
10. **DO NOT** operate PureSteam Pro if it is damaged in any way—especially if the power cord or plug is damaged. Doing so may result in fire, electrical shock, or injury.
11. **DO NOT** leave PureSteam Pro unattended while plugged in or in operation.
12. **DO NOT** operate steamer without properly filling the water container.
13. Always keep the steam nozzle elevated above the water container. Do not lay the hose on the floor.
14. PureSteam Pro has a grounded plug. As a safety feature, this plug will fit in a three-prong outlet only one way. If the plug does not fit in the outlet, do not attempt to bypass this safety feature.
15. Burns could occur from touching hot metal parts, hot water, or steam. Use care when you turn a steam appliance upside down – there may be hot water in the reservoir.
16. **DO NOT** pull the power cord to disconnect it from an outlet. Instead, grasp the plug to remove it from the outlet.
17. To reduce the risk of contact with hot water and steam, always check PureSteam Pro for steam leaks. Operate PureSteam Pro with the steam nozzle placed in its holder; and inspect the base, hose, handle, and nozzle for steam leaks.


IMPORTANT SAFETY INSTRUCTIONS

18. To reduce the likelihood of a circuit overload, do not operate another high-wattage appliance on the same circuit as your steamer.
19. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. 
20. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. **DO NOT** use accessories that are not made for PureSteam Pro. Doing so may cause fire, electrical shock, or injury.
23. Always turn the power switch off before unplugging or plugging in PureSteam Pro.
24. **DO NOT** let the power cord touch hot surfaces or water. The power cord should not be kinked or obstructed in any way.
25. **DO NOT** bend, twist or fold the steam hose.
26. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
27. **DO NOT** operate another high-wattage appliance on the same circuit as PureSteam Pro. Doing so may cause a circuit overload,
28. If an extension cord is absolutely necessary, a 3-pronged cord rated for at least 20 amperes should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be inadvertently pulled or tripped over.
29. To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
30. Do not leave appliance unattended while connected.

SAVE THESE INSTRUCTIONS

PRODUCT DIAGRAM

Figure 1

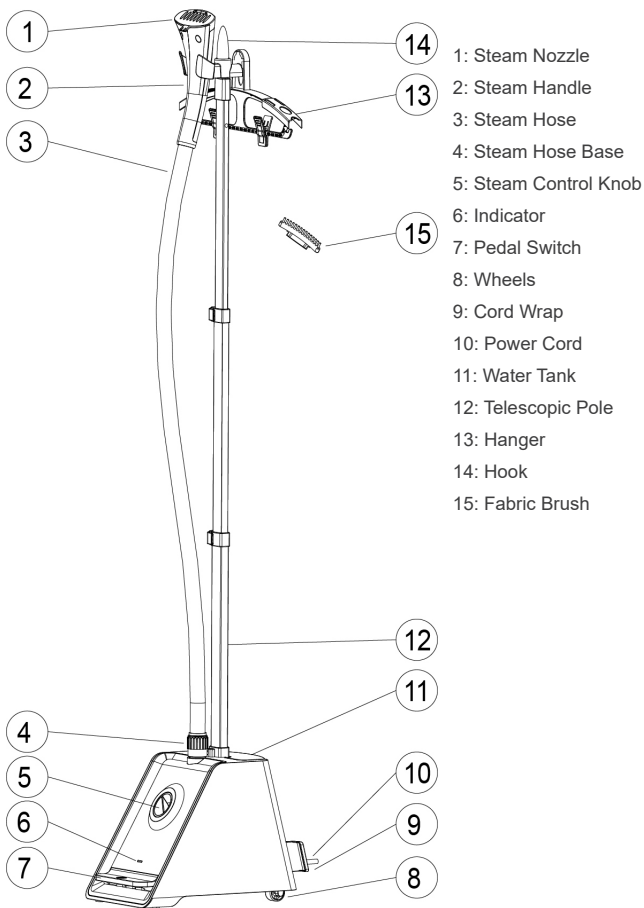

ASSEMBLING PURESTEAM PRO

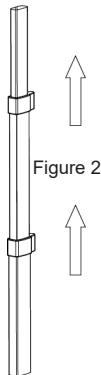


Figure 2

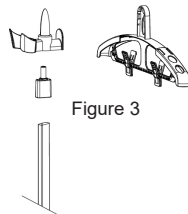


Figure 3

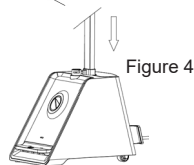


Figure 4

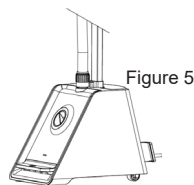


Figure 5

1: Remove all contents in the box to ensure you have all the pieces listed on Page 3.

2: Fully extend the Telescopic Pole, To do so, first open the clips and loosen the poles. Then, fully extend the pole and close the clips on the pole to lock in place (see Figure 2). Make sure the pole is locked into place and cannot be pushed down.

NOTE: To ensure a steady flow of steam through the steam hose, the telescopic pole must be fully extended when operating PureSteam Pro.

3: To attach the hanger attachment, align the tabs on the hanger with the grooves on the pole and push down (see Figure 3).

4: Insert the bottom of the telescopic pole into the pole base (see Figure 4) so that the steam nozzle holder faces the rear of the steamer (see Figure 1). Pointing the steam nozzle holder towards the rear will ensure the stability of the steamer when garments are hanging from the clothes hanger hook

5: To attach the steam hose: Align the hose nut with the steam hose base and turn the hose nut clockwise to tighten the hose onto the base (see figure 5),

CAUTION: To prevent steam from causing bodily injury or damage to surfaces, always hang the steam nozzle on the nozzle holder when not in use. Do not lay the steam hose on the floor as condensation may occur and cause unwanted water droplets in the steam.

CAUTION: Pulling on the steam hose with excessive force will damage it and may cause a steam leak.

USING PURESTEAM PRO

1. Unplug the power cord.
2. Remove the water tank. Turn it upside down and unscrew the cap.
3. Fill the water tank with cool water and replace the cap.

NOTE: To prolong the life of PureSteam Pro, we recommend using distilled or de-mineralized water.

NOTE: Do not substitute another water tank for the one designed for this unit.

4. Place the water tank on the water reservoir. You should hear water flowing into the water reservoir for a short time.

CAUTION: Do not let the steamer operate with a dry water tank. Doing so will cause damage to the unit.

5. Plug PureSteam Pro into a properly grounded three-pronged outlet.
6. Push the foot press button, after approximately 40 seconds of heating time, unit will begin producing a flow of steam from Steam Nozzle.

NOTE: It is common for the unit to produce gurgling sounds and small amounts of water during the first few minutes of steaming. This is due to water condensation inside cold Hose, and should be reduced as the Hose heats up. Pointing Steam Nozzle downward and shaking it may help to remove excess water from Hose more quickly.

Using the Steam Control Knob


The steam control knob offers 4 convenient steam levels:

Level 1: Humidity Function
(450W; steam rate ~10ml/min)

Level 2: Iron Short-Sleeved
(900W; steam rate ~26ml/min)

Level 3: Iron Shirts
(1200W; steam rate ~38ml/min)

Level 4: Iron Suits
(1500W; steam rate ~50ml/min)

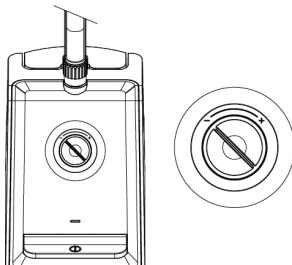

USING PURESTEAM PRO

Once the steam flow is steady and excess condensation has been removed from the steam hose, you may proceed with your steaming tasks.

CAUTION: Always be sure that the steam nozzle is pointed in a safe direction (away from yourself, other people, pets and plants) when steaming.

7. When you are finished using the fabric steamer, Please turn off the power switch and take off the plug from the socket.

PRESSING WITH STEAM

1. To steam a garment, secure it carefully using the included garment hanger, or for horizontal steam mode, place the garment on a clean, flat surface.

CAUTION: Be careful when handling garments on the hanger. Pulling on the garment with too much force may cause the unit to tip.

CAUTION: Hot steam may escape from the small holes when steaming. Use caution.

2. Grasp the steam handle and place the steam nozzle at the bottom of the garment. Steam will rise along the inside and outside of the fabric, removing wrinkles. Slowly slide the nozzle vertically, from the bottom to the top of the garment.

NOTE: Do not allow kinks to form in the hose at any time.

3. Place the Water Tank on the Water Reservoir. You should hear water flowing into the Water Reservoir for a short time.
4. Remove the steam nozzle from the garment, and smooth the fabric with your free hand. Plug the unit into a properly grounded three-pronged outlet.
5. Repeat steps 2 and 3 as necessary until the fabric is wrinkle free.

PRESSING WITH STEAM

6. When steaming horizontally keep the steam 4 inches from the fabric.
7. To remove wrinkles from towels, handkerchiefs and napkins, drape them over a rod or towel rack and gently steam.
8. Heavier fabrics may require repeated steaming.
9. To remove stubborn wrinkles, steam both sides of the fabric.
10. The fabric brush may also be used to remove tough wrinkles.

QUICK STORAGE

1. Turn off the unit and unplug the power cord.
2. Wrap the steam hose around the telescopic pole one time. Do not fold or bend the hose.
3. Hang the steam nozzle from the nozzle holder.
4. Loosen the top two sections of the telescopic pole and collapse to a compact height.
5. Push down on the pole top; the pole will collapse to a compact height.
6. Roll the unit to a convenient storage location.

CLEANING AND LONG-TERM STORAGE

For maximum performance, you should clean PureSteam Pro weekly. Using distilled or de-mineralized water will help prevent buildup and require less frequent cleaning. Do the following to clean:

1. Push the foot press button.
2. Turn the unit off and unplug the Power Cord.
3. Wait for the unit to cool completely (at least 30 minutes).
4. Remove the steam hose and the telescopic pole, and set them aside.
5. Carry the unit to a sink or tub.
6. Remove and drain the water tank. Rinse with fresh water and drain completely.
7. Tilt upside down to facilitate removal of all water.
8. Flush the unit by filling the water reservoir and the hose base with fresh water and draining completely.
9. Place the water tank back on the water reservoir.
10. Reattach the telescopic pole and steam hose.
11. Follow steps 3-6 of the Quick Storage procedure on the previous page.
12. If the unit surface is dirty, we recommend using a dry cotton cloth with some 30% alcohol solution to cleaning.

PROBLEM SOLVING GUIDE

PROBLEM	CAUSE	SOLUTION
The unit fails to steam. The light on the on/off switch does not illuminate.	<ol style="list-style-type: none"> 1. Steamer is not plugged in. 2. Water tank is empty. 3. There may be mineral buildup. 	<ol style="list-style-type: none"> 1. Plug into electrical outlet. 2. Fill water tank 3. Follow procedure on the next page
The unit fails to steam. The light on the on/off switch does illuminate.	<p>Mineral buildup in the unit.</p> <p>The water tank is empty</p>	<p>Follow the Removing Mineral Buildup</p> <p>Procedure in this manual. Refill the Water Fill Tank using the procedures in this manual.</p>
Water drips from nozzle	Condensation in hose	Extend the hose vertically to allow water to drain back into the water reservoir.
Excessive gurgling of hose and steam nozzle	Condensation in hose	Some gurgling is a natural effect of the steaming process. For excessive gurgling, extend the hose vertically to allow water to drain back into the water reservoir.
Steam is intermittent	Mineral Buildup in the unit	It is normal for the unit to periodically stop steaming for a few seconds. If the steam stays off for longer periods, follow the procedure on the next page.


REMOVING MINERAL BUILDUP

One common problem with steamers is mineral buildup caused by the high mineral content often found in tap water. Mineral residue inside of the internal pipes and heater can cause intermittent steaming or, in some cases, no steaming at all.

NOTE: To reduce or eliminate mineral buildup we recommend the use of de-mineralized or distilled water in the unit.

The procedure below can be used to reduce mineral buildup. If you are unable to use de-mineralized or distilled water, we recommend you follow this procedure monthly.

1. Turn the unit off and unplug the power cord.
2. Remove the steam hose and telescopic pole from the unit.
3. Drain the water reservoir by following steps 1-7 of the Cleaning and Long-Term Storage procedure on Page 7. Leave the water tank off the unit.
4. Mix a solution of 50% vinegar and 50% water. In most cases, 2 cups of this solution will be sufficient.
5. Slowly pour the water-vinegar solution into the hose base connector as shown in Figure 6.
6. Continue pouring the solution into the hose base until the solution appears near the top of the hose base. Pour additional solution into the water reservoir until it is about half full.
7. Let sit for 40 minutes.
8. Drain the solution from the water reservoir allowing the liquid to drain into a sink or tub.
9. Drain the solution out of the hose base by tilting the unit over a sink or tub and pouring the water out of the hose base.
10. Pour clean water in the hose base and water tank and drain.
11. Repeat this step until the vinegar smell dissipates.
12. Reassemble the unit and operate normally.

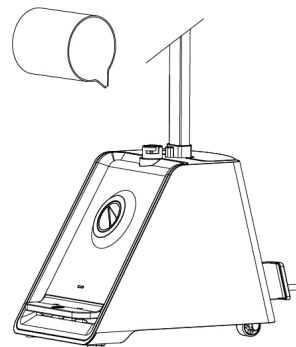

PRODUCT SPECIFICATIONS

Base Dimensions	13.7 in x 8.9 in x 11 in
Total Height	4 ft, 6 in
Weight	9 lbs, 9 oz
Water Tank Capacity	2L
Heat Up Time	45 seconds
Steam Time	up to 60 minutes per tank refill on Level 4
Steam Hose Length	5-ft cloth-covered hose
Input	120V 60Hz 1500w (on high)
Power Cord Length	7 ft

WARRANTY INFORMATION

PureSteam Pro comes with an industry-leading 5 Year Warranty that begins on the date of purchase.

The warranty applies to the garment steamer and necessary parts and labor relating thereto. The warranty does not apply to damage resulting from failure to follow the operating instructions, accidents, abuse, alterations, or disassembly by unauthorized individuals.

PRODUCT REGISTRATION

To ensure your full warranty, and to receive product updates and streamlined customer support, remember to register your product at:

www.pureenrichment.com/productregistration

ARE YOU 100% SATISFIED?

If you have product questions or concerns, don't hesitate to contact us directly at:

help@pureenrichment.com

Pure Enrichment has an award-winning warranty, exchange, and customer service program that guarantees hassle-free solutions to any issue you might have within 24 hours!



Santa Ana, CA 92705
www.pureenrichment.com